## Leica DSX



Quick Guide Version 2.0 English







The product must not be disposed with household waste.

#### DSX



- a Cradle for CT1000 tablet
- b Extendable handle
- c Handle extension knobs
- d Upper cam levers for foldable handle
- e Wheel lock for cart brake
- Power button for the DSX
- g Front alignment marker on the carrying handle
- h Battery compartment
- i Encoders placed inside the
- j Bottom cam levers for the foldable handle
- k Side alignment markers on the bottom chassis

#### 3 **Technical Data**

## **Environmental** specifications

#### Temperature

Operating temperature [°C]	Storage temperature [°C]		
-10 to +40	-40 to +70		
GEB242:			
-10 to +55	-40 to +70		

#### Protection against water, dust and sand

## Protection

IP65 (IEC 60529)

#### Humidity

### Protection

Max 95% non-condensing

The effects of condensation are to be effectively counteracted by periodically drying out the instrument.

#### 4 Care and Transport

#### Transport in a road vehicle

Never carry the product loose in a road vehicle, as it can be affected by shock and vibration. Always carry the product in its container and secure it. For products for which no container is available use the original packaging or its equivalent.

### Shipping

When transporting the product by rail, air or sea, always use the complete original Leica Geosystems packaging, container and cardboard box, or its equivalent, to protect against shock and vibration.

- 3. Release outer cam levers and raise entire handle assembly until the visual markers are aligned.
- 4. Loosen the knobs to extend the upper handles, and then tighten them.

# Attaching and Connecting the Laptop or Tablet

#### Attach and connect the tablet

[-3F

The support is designed to hold a CT1000 tablet.



The support includes the tablet cradle to hold the tablet, two RAM balls (one attached to the cart handles and the other to the cradle). Also it includes a double socket arm which holds together the RAM balls.



- 1. Mount the two RAM balls to attach the tablet to the handle:
  - One to the handle top
  - The other to the tablet cradle
- Use the double socket arm to hold the two RAM balls: Adjust the tablet cradle until optimal inclination and then tighten the screw on the double socket arm.




Plug in the DSX LAN cable to the tablet.

## **Inserting the Battery**

### Insert the battery



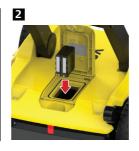



0019370\_002

- 1. To open the battery compartment, loosen the screw on the battery compartment.
- 2. Insert the battery facing downwards. The rough surface of the battery points towards the up-down direction.
- 3. Close the battery compartment and tighten the screw.

# Switching the DSX ON/OFF

Switch the DSX device ON/OFF



Press the ON/OFF key on the DSX.

## **EU Declaration of Conformity**

#### Conformity to European regulations

The equipment conforms to the following requirements set by EC regulations, including subsequent modifications, and to the legislation set by the member states that implement these regulations:

### 2014/53/EU Radio Directive

Warning: this equipment is destined for use in industrial environments (Class A apparatus). In residential, commercial and light industry environments, this apparatus may generate radio interference: in this case, the user may be required to operate while taking appropriate countermeasures.

The apparatus is sensitive to the presence of external electromagnetic fields, which may reduce its performance.

Receiver test according to EN 302 066 v. 2.1.0

The unit has been tested according to the provision of the EN 302 066 v. 2.1.0. Specifically, for the receiver test (that tests the influence of an interferer signal to the device), the following performance criterion has been used (see ETSI TS 103 361 v.1.1.1) .

Performance criterion: The difference D between the  $R_X$  signal noise (increased by an interferer) and the maximum input signal for the  $R_X$  in the linear region of operation.

Level of performance: Dmin > 30 dB

EU Declaration of Conformity



This corresponds to EN ISO/ IEC 17050-1





We, Leica Geosystems AG, CH-9435 Heerbrugg, declare under our sole responsibility that the product **Leica DSX – Ground Penetrating Radar** 

following the provisions of Directive(s)

- 2014/53/EU Radio equipment (RED) (in accordance with annex III)
- 2011/65/EU Restriction of hazardous substances (RoHS)

to which this declaration relates, is in compliance with the following standards:

#### 14 EU Declaration of Conformity

- EN 61010-1:2010
- EN 62479:2010
- EN 301 489-1 V2.2.0: 2017
- EN 301 489-33 V2.2.1: 2019
- EN 302 066 V2.1.1: 2017
- Draft EN 302 066 V2.2.0: 2019



For translations into the official EU languages please refer to: http://www.leica-geosystems.com/ce

#### 900634-2.0.0en

Original text (900634-2.0.0en) Printed in Switzerland, © 2021 Leica Geosystems AG

### Leica Geosystems AG

Heinrich-Wild-Strasse 9435 Heerbrugg Switzerland

www.leica-geosystems.com













