


# MARINE TEST LAB

high quality test kits

Instruction Manual • Mode d'Emploi • Gebrauchsanweisung • Gebruiksaanwijzing


**KH test**

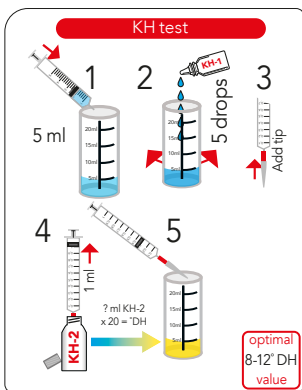

1. 5 ml water in test tube  
2. Add 5 drops KH-1  
3. Add tip  
4. Add 1 ml KH-2  
5. Result: ? ml KH-2 x 20 = °DH


optimal 8-12° DH value

**Calcium test**

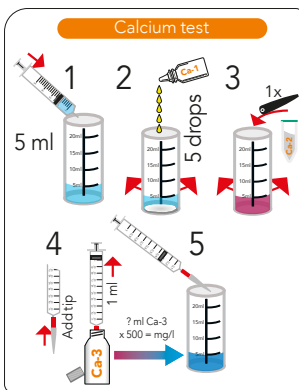

1. 5 ml water in test tube  
2. Add 5 drops Ca-1  
3. Add 1x Ca-2  
4. Add tip  
5. Result: ? ml Ca-3 x 500 = mg/l


**Magnesium test**

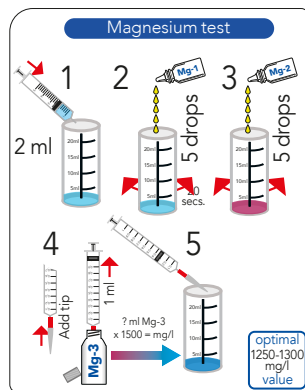

1. 2 ml water in test tube  
2. Add 5 drops Mg-1  
3. Add 5 drops Mg-2  
4. Add tip  
5. Result: ? ml Mg-3 x 1500 = mg/l


optimal 1250-1300 mg/l value

**Nitrate test • range 0 - 4 mg/l**

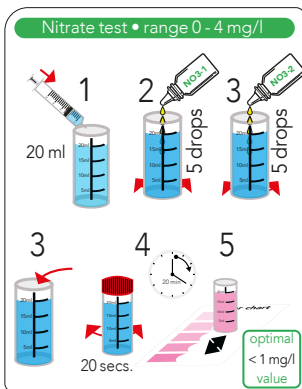

1. 20 ml water in test tube  
2. Add 5 drops NO3-1  
3. Add 5 drops NO3-2  
4. Wait 20 secs.  
5. Result: optimal < 1 mg/l value

**Phosphate test • range 0 - 0,8 mg/l**

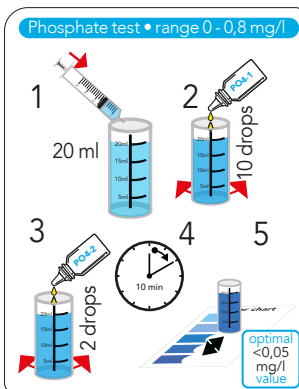

1. 20 ml water in test tube  
2. Add 10 drops PO4-1  
3. Add 2 drops PO4-2  
4. Wait 10 min.  
5. Result: optimal < 0,05 mg/l value



Keep  
out of reach  
of children

