


V15 R1.0

Installation and Operating Manual

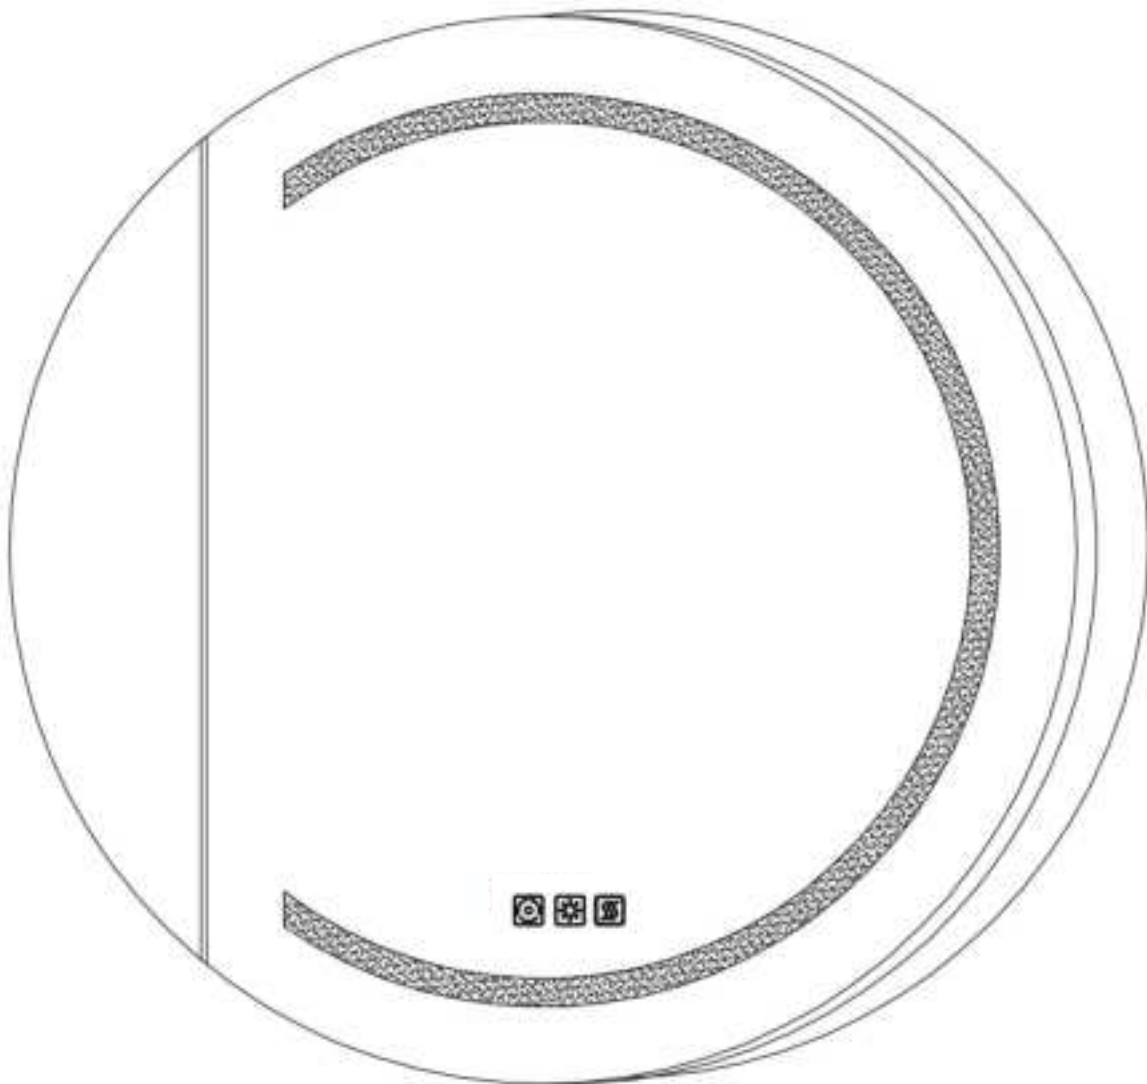

For technical support or questions, please call us at + 1 302 336 8180.

Model Specification



- Aluminum Frame
- Integrated LED
- Double Side Mirror
- Adjustable Shelves
- Quiet Hinge
- Surface mounting
- Color Temperature:3000-6000K
- Dimming
- Anti Fog

No.	Dimension	Color	Door Type	Remark
1	D24"	Black	Single door	
2	D26"	Black	Single door	
3	D28"	Black	Single door	
4	D30"	Black	Single door	

Note

For easy and safe installation, please refer to the following:

Read all instructions thoroughly before installing the enclosed product. Read and take note of all **Safety Precautions**, care and maintenance information.

PLEASE KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE DURING PRODUCT OPERATION AND MAINTENANCE.



WARNING AND SAFETY INSTRUCTIONS

Before installing your LED Medicine Cabinet, please make sure that you carefully read through this instruction sheet, refer back to them during installation to ensure your product is fitted safely and correctly. Keep the instruction for future use.

WARNING Risk of Fire and Electric Shock

- All fittings must be installed in accordance with current IEE wiring regulations. If in doubt, please consult a qualified electrician.
- Turn breaker off the electrical supply at the main circuit board before installation and maintenance.
- Suitable for indoor use only. This product should be positioned well away from curtains and fabrics. Never cover the mirror.
- Regularly check any parts for damage, if any part is damaged the product should not be used.

INSTALLATION SAFETY

- Inspect the product immediately upon receipt for any possible damage during transportation or missing parts. Handle the product with care and protect against knocks to all sides and edges of the glass.
- Ensure there are no hidden pipes or cables in the wall before drilling and sawing.
- Wear suitable safety glasses when drilling. Take care if drilling on tiled surfaces in case the drill slips.

CAUTION

The light source of this product is non-changeable light diodes (LED). **Do not disassemble the product**, as the light diodes can cause damage to the eyes.

NOTE: The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors that can't be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture. Do not install this fixture in hazardous locations.

PARTS SUPPLIED

Z- Mounting Bar
×1



Support Bracket
×1



Bracket Screws
×1



Spare Support
×4



Wire Cap
×3



Anchors
×6~12



Anchor Screws
×6~11



Shelves
×2



Hinge Covers
×2~3



TOOLS REQUIRED


Drill



Pencil



Level

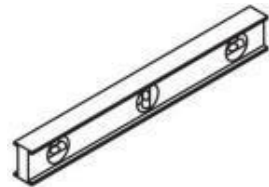

Tape



Gloves



Safety Glasses



**Phillip
Screw Driver**



**Drill Bit
8mm(5/16")**



Hammer



Installation Instruction




The medicine cabinet supports installation methods:
Surface Installation




Some cabinet doors will be separated from the cabinet to reduce packaging volume. Please install the cabinet door after completing the cabinet installation according to the instruction.

Before installing the medicine cabinet, please remove the cabinet doors first. This will make the installation easier and more convenient.

1. First, disconnect the wires from the cabinet doors.

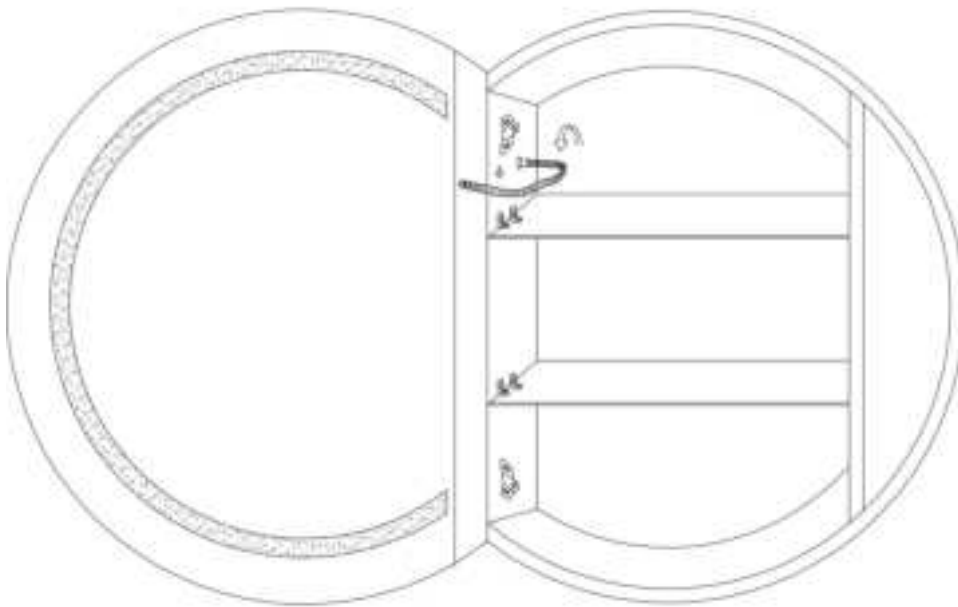


2. Then, press the end of the hinges and detach the cabinet door.

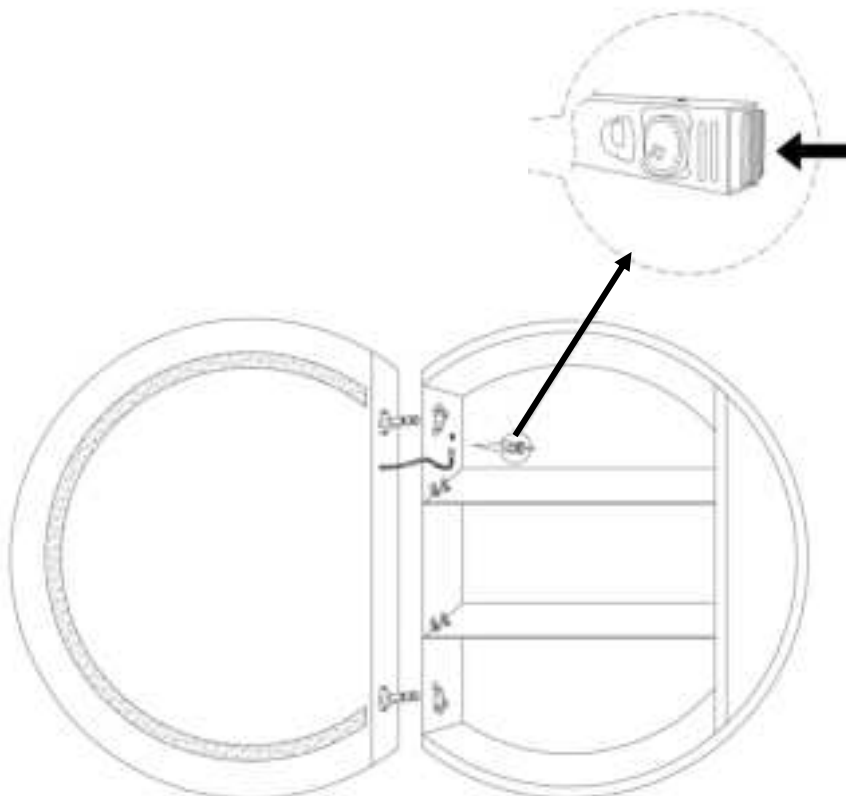


Surface Installation Instruction

Verify minimum clearances

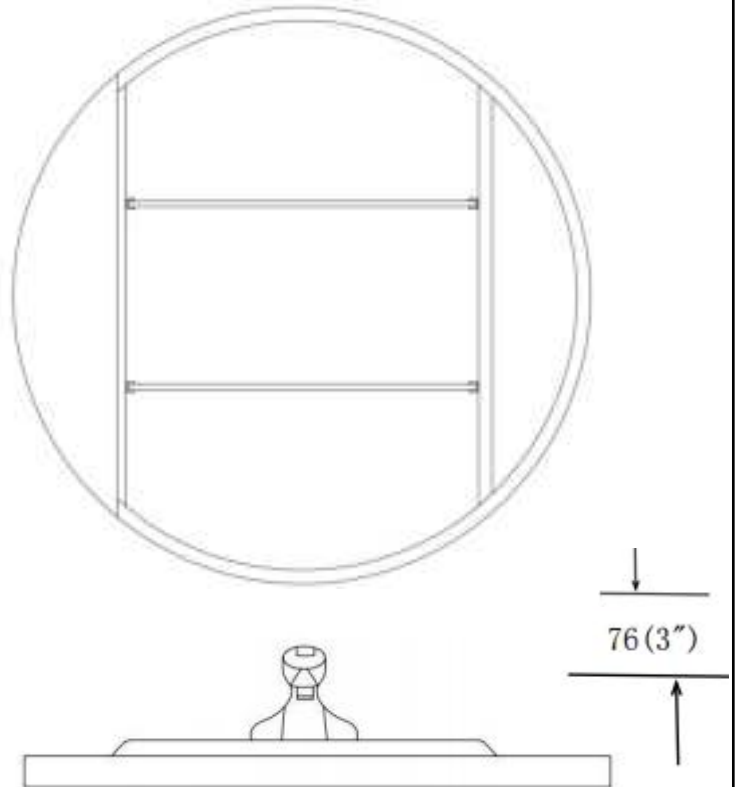

STEP 1


H is the total height of the medicine cabinet, and W is the total width of the medicine cabinet

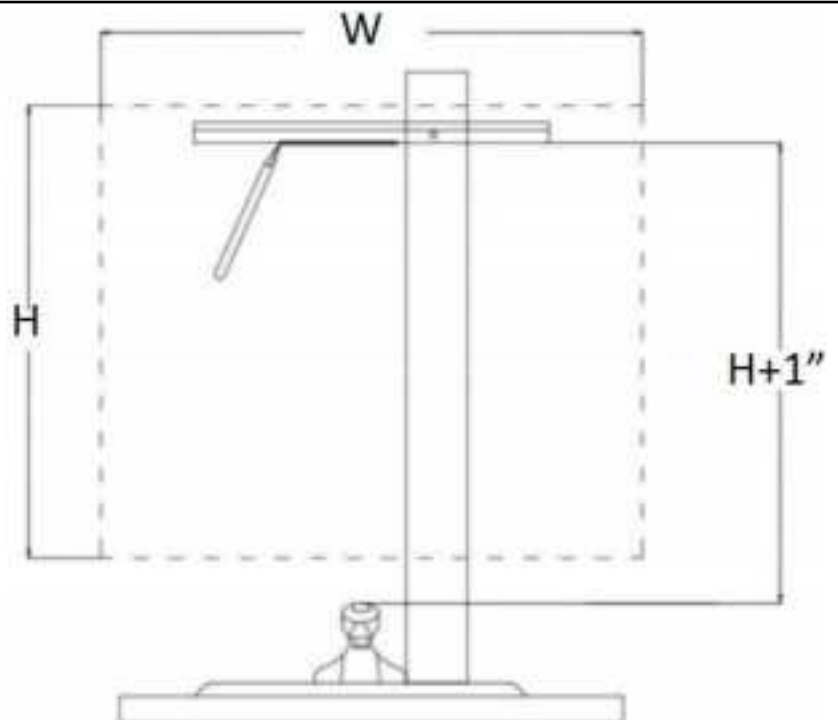

STEP 2


Surface Installation Instruction

Mark hole locations on the wall. Drill holes. Insert anchors where needed.

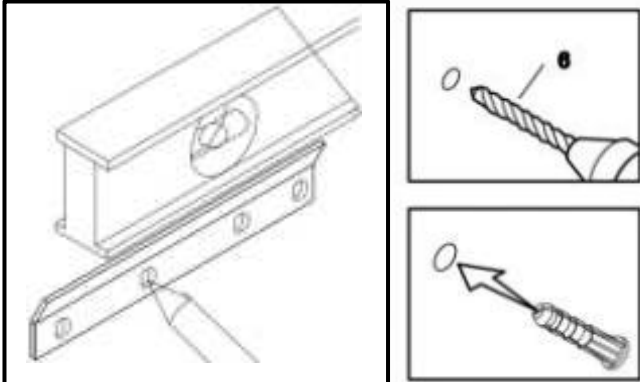


STEP 3

Secure the bar with Flat head screws

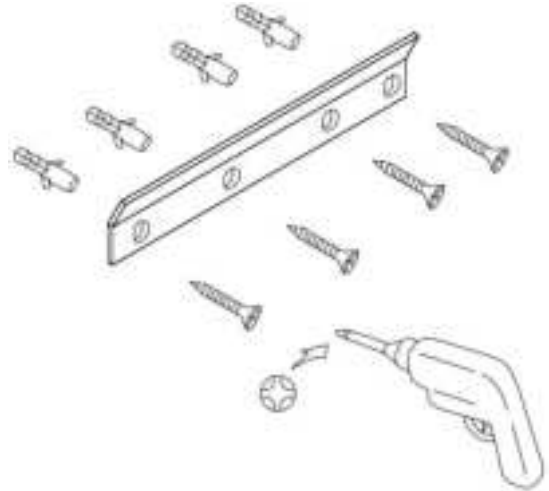

STEP 4

Lift the cabinet and align the mounting rod on the back of the cabinet with the wall mounted rod to ensure firmness.

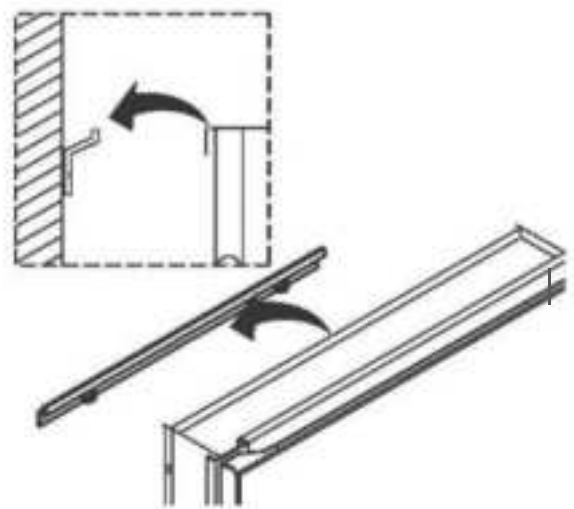


STEP 6

White wire(Neutral)
Ground wire(Green)
Black wire(Hot)
3-Wire caps


STEP 5

Surface Installation Instruction

Place the support angle on the bottom of the cabinet and mark hole location on the wall. Drill hole and insert anchor where needed. Fix the support angle by screw. Always look for wood studs behind the drywall for stronger installation. The studs are 16" apart.

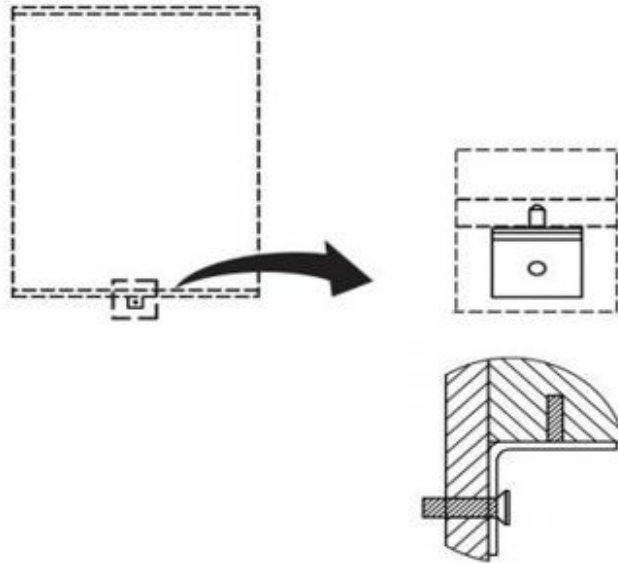
**STEP 7**

Install the glass shelves by mounting them over the clips.


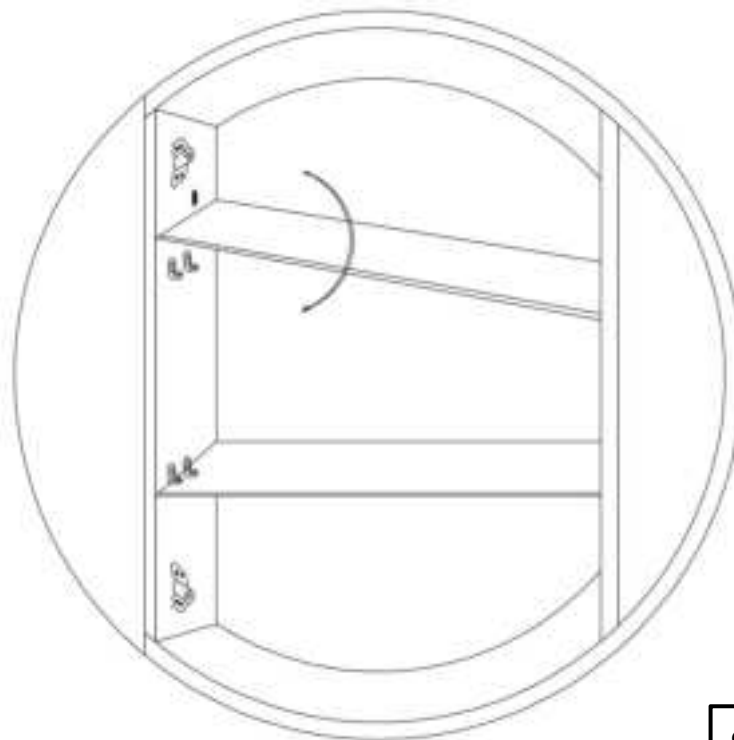
**STEP 8**

Step10: Cabinet Door Installation


1.Insert the hinges to the base ,then connect the doors with the cabinet

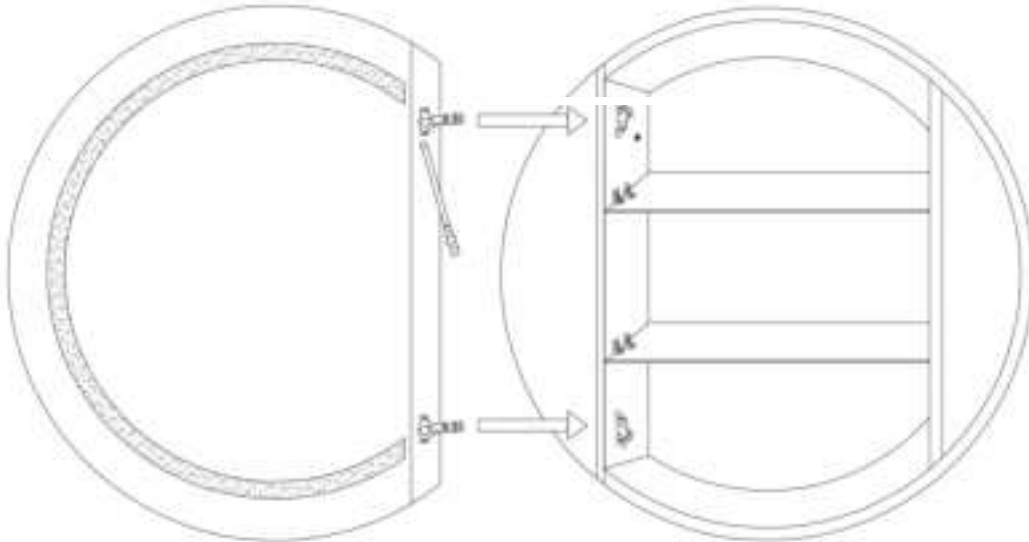


2.If necessary , adjust corresponding screws on the hinge to align the doors, ensure that gaps are even and the doors open and close smoothly

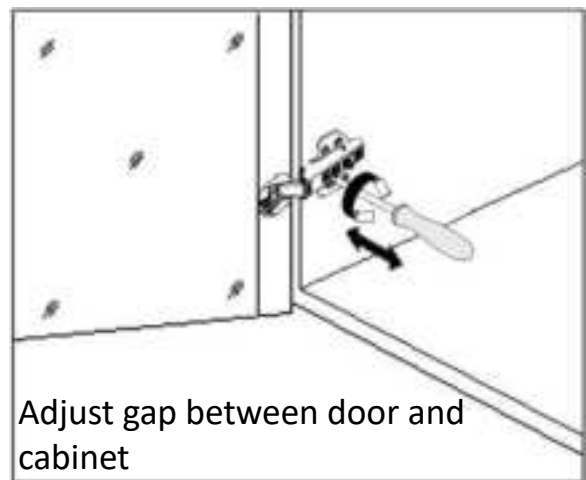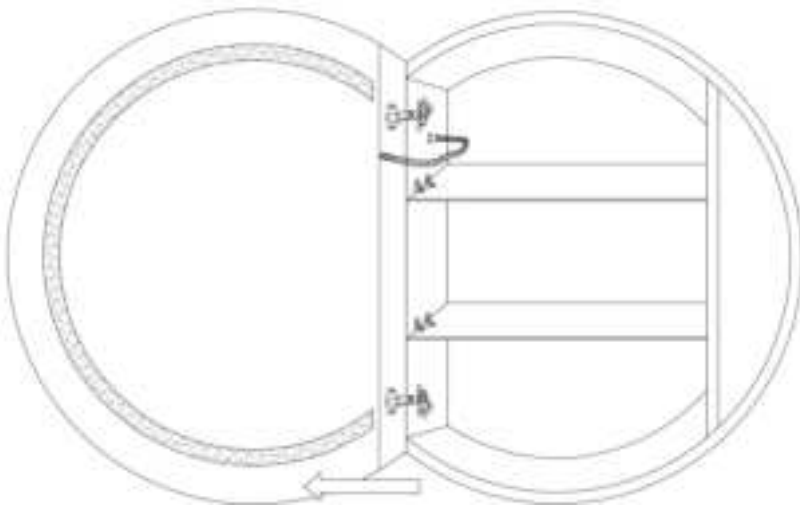

3. Connect the electrical cord on the door to the cabinet and tighten it properly.

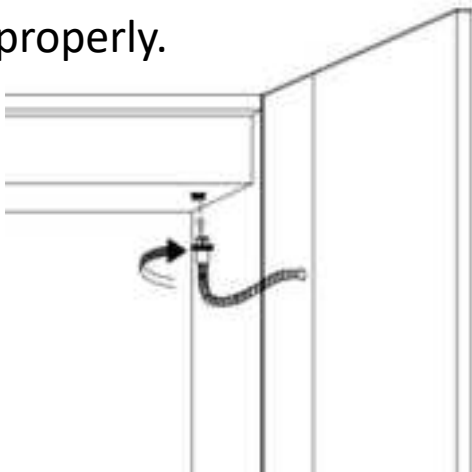

Operating Manual

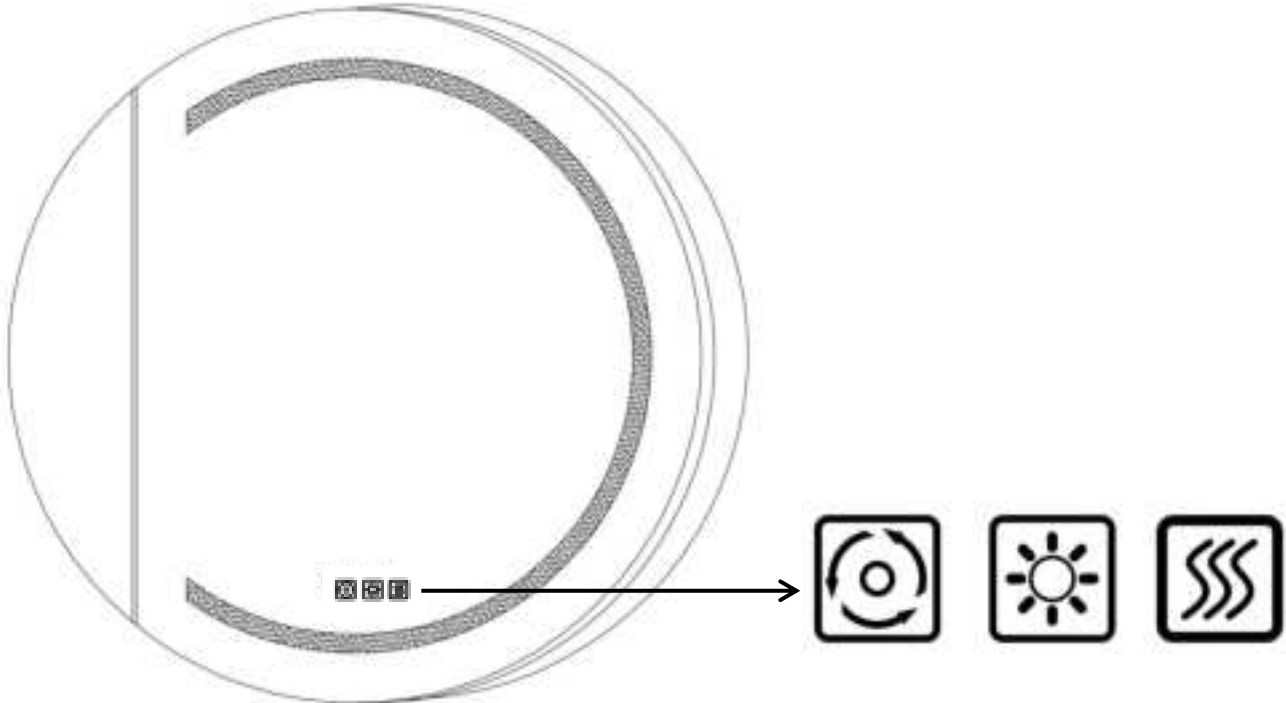

The buttons turn blue when connected to the main power supply and turn white after a brief touch.



- Briefly touch the button to turn the mirror on or off.
- Press and hold the button to change the color temperature when the mirror is on.
- Optional to be wired to wall switch by ON/OFF memory function.



- Briefly touch the button to turn the mirror on or off.
- Press and hold the button to adjust the brightness.
- Release the button when the brightness reaches your desired level



- The mirror begins to warm up and defog after you press the defogger button.
- Press the button again to turn off the anti-fog function.
- **Press and hold the button to turn the blue backlight on or off.**
- Note: To prevent damage from prolonged high temperatures, the defogger will automatically stop after 60 minutes of continuous operation.