



mars BCD-20A Cube Dehumidifiers User Guide

[Home](#) » [MARS](#) » mars BCD-20A Cube Dehumidifiers User Guide 

Contents


- [1 mars BCD-20A Cube Dehumidifiers](#)
- [2 SET UP INSTRUCTIONS](#)
- [3 OPERATING INSTRUCTIONS](#)
- [4 Bucketless mode:](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)



mars BCD-20A Cube Dehumidifiers



SET UP INSTRUCTIONS

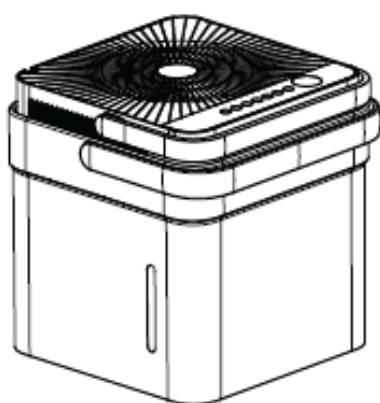

Nested Shipping &
Storage Position

Fig. 1a

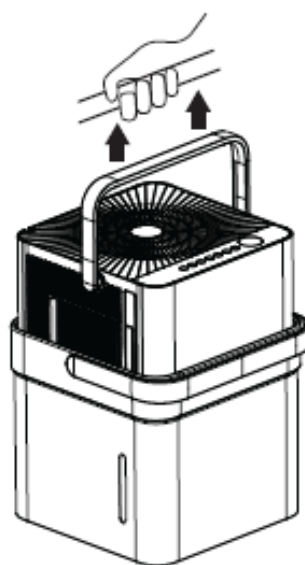


Fig. 1b

Step 1:

Separate dehumidifier & bucket from the nested shipping/storage position. Remove all packaging materials from the unit.

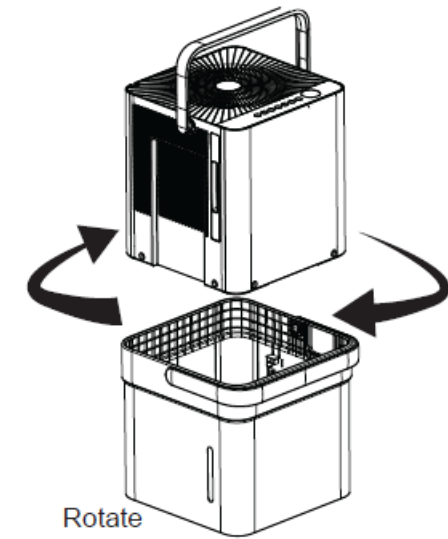


Fig. 2a

User Interface Buttons and Water Level Window Aligned on the Same Side

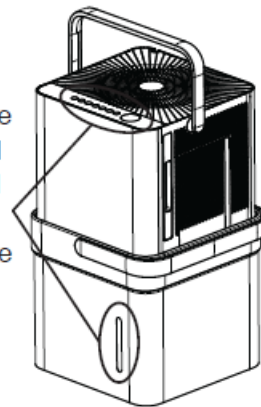


Fig. 2b

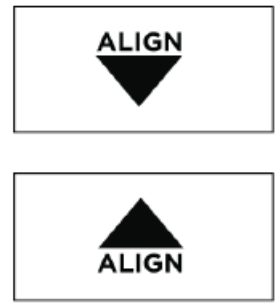


Fig. 2c

Step 2:

Rotate the dehumidifier 90° and align the arrows on the two labels (one on the bucket and one on the dehumidifier) and carefully sit the dehumidifier down onto the bucket.

The water level window in the bucket and the user interface buttons on the dehumidifier should be on the same side when properly stacked. Check to ensure the arrows on the unit and bucket are aligned as in Fig. 2c for proper operation.

Step 3:

Plug the unit in and press the power button and the unit is ready to run in normal (bucket) mode.

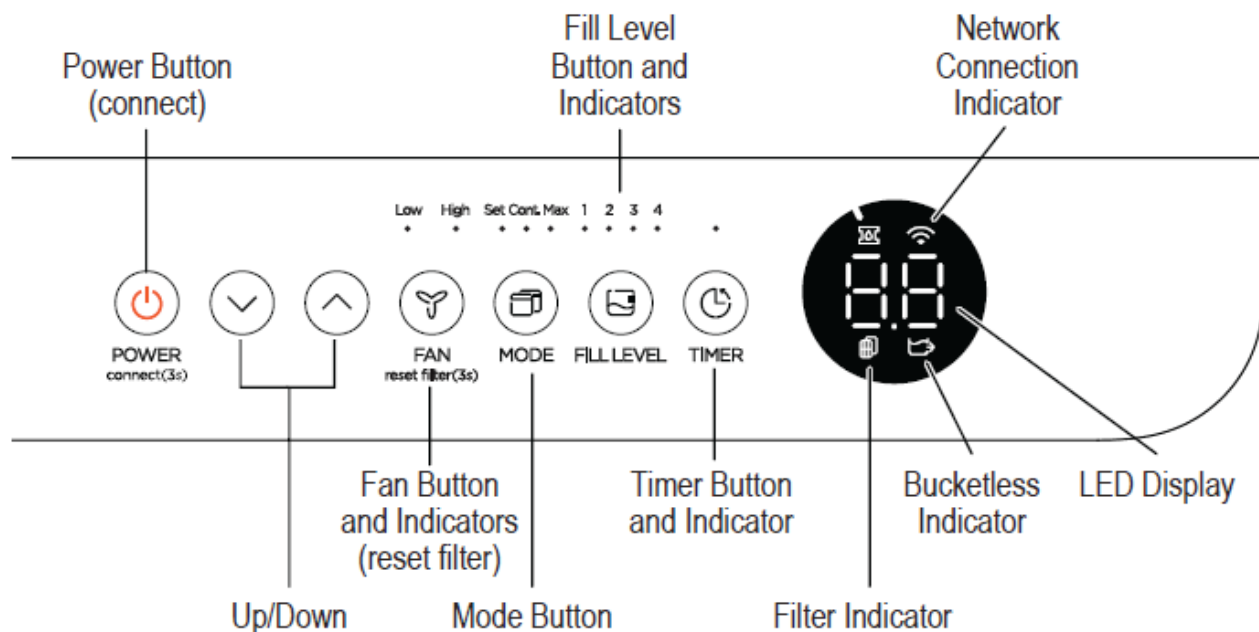


Fig. 3

To nest the unit:

Make sure the bucket is dry. Then press the tabs on the inside bucket feature in so that the unit can nest correctly. See Fig. 3

OPERATING INSTRUCTIONS



Connect:

Holding the power button for 3 seconds will place the unit in network connection mode to set up wireless control.

Fill Level Button:

Press this button to change the required water level before the bucket full switch activates. For more information about each fill level, see page 10 of the full user manual.

Bucketless mode:

Bucketless mode allows you to run the unit without the bucket in place. The included drain hose or a garden hose must be attached for proper bucketless mode operation. Please refer to fig. 4 & fig. 5, the drain hose must be properly sloped to the drain. To activate bucketless mode, the following steps must be completed within three minutes of plugging the dehumidifier in.

1. Press and hold the up and fill level buttons for 3 seconds until the bucketless icon appears on the display.
2. Ensure the dehumidifier is on flat level ground (free of debris).
3. Make sure the hose for Bucketless mode is sloped down to the drain and does not rise above the connection point
- 4.

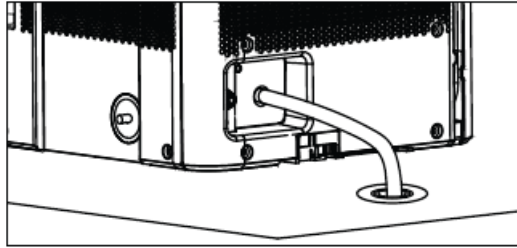


Fig. 4

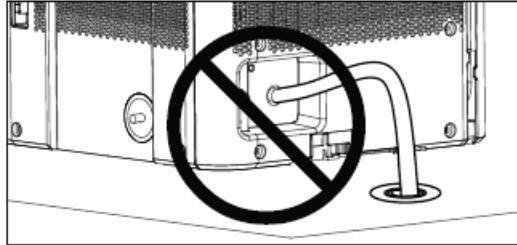


Fig. 5

Attempting to change the unit into bucketless mode while it is sitting on the bucket will have no effect. To remove the unit from bucketless mode, place the unit back on the bucket.

“This product complies with all California product labeling laws including, but not limited to, the Safe Drinking Water and Toxic Enforcement Act of 1986, more commonly known as Proposition 65.”

1900 Wellworth Ave., Jackson, MI 49203 • Ph. 517-787-2100 • www.marsdelivers.com

Documents / Resources

	<p>mars BCD-20A Cube Dehumidifiers [pdf] User Guide BCD-20A, BCD-35A, BCD-50A, BCDP-50A, Cube Dehumidifiers</p>
--	---