

Martin Jerry IOT Device User Manual

Home » Martin Jerry » Martin Jerry IOT Device User Manual

Contents

- 1 Martin Jerry IOT Device
- 2 Documents /

Resources

- 2.1 References
- 3 Related Posts



Martin Jerry IOT Device




READ HERE!!!

- 1. Confirm that both of the 3-Way Switches work well manually (Pressing buttons). If not, go back to the wiring part
- 2. 4G WiFi is available. NOT support 5G (802.11av)


Step 1: Set the Switch to Easy Pairing Mode

- 1. Press the tiny restart button under the main power button to restart the switch. You will see the indicator in RED.
- 2. Press and hold the power button for 5-8s until the indicator blinks quickly in pure blue (NOT red/purple)

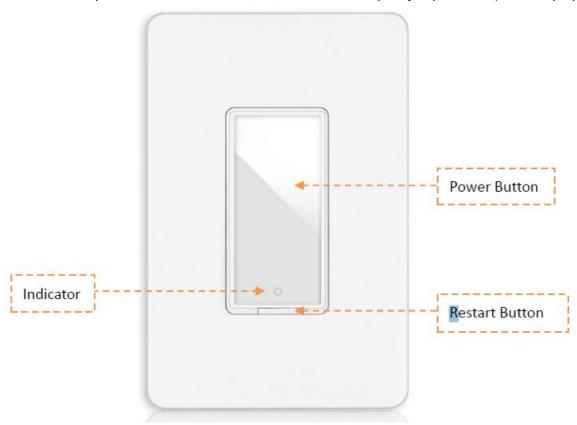

Step 2: Pair the switch on App

Confirm that you have downloaded the right Smart Life App (Same Logo as the right side) If not, download it from the links iPhone: https://itunes.apple.com/us/ app/smart-life-smart-living/id1115101477?mt=8 Android: https://play.google.com/store/apps/details? id=com.tuya.smartlife&hl=en_US2. Wall Switch 3 1."+"

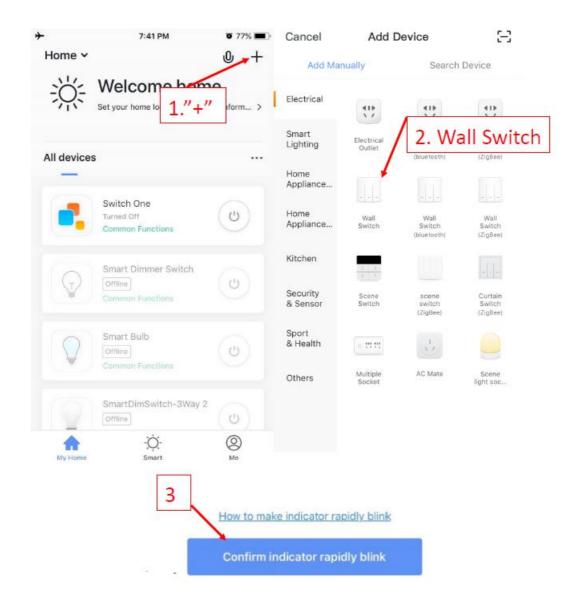


If the above pairing method failed several times, please go to the AP mode mentioned in coming pages.


Step 1: Set the switch to AP mode


- 1. Press the tiny restart button under the main power button to restart the switch. You will see the indicator in RED.
- 2. Press and hold the power button for 5-8s until the indicator blinks quickly in Blue.
- 3. Press and hold the power button for 5-8s until the indicator blinks slowly in Blue.


Step 2: : Pair the switch on SmartLife App (AP mode)

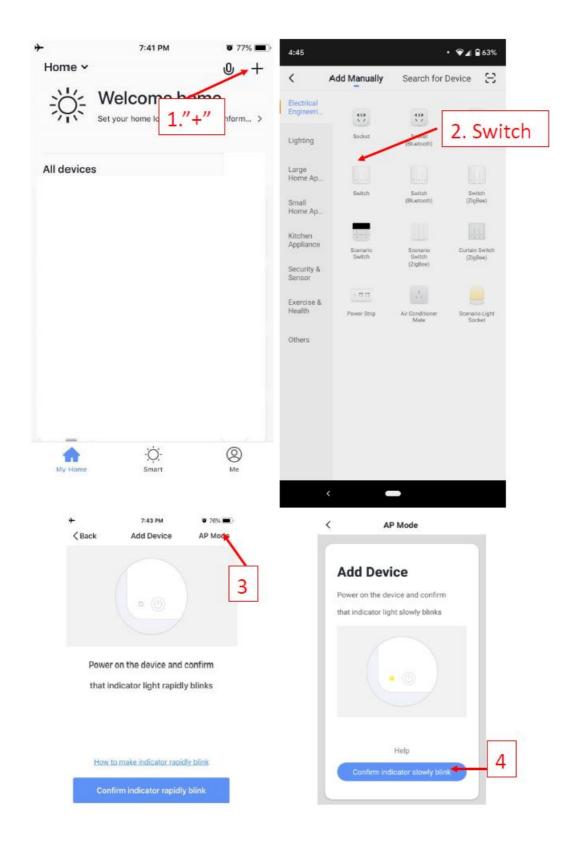



Then, input the password of your Wi-Fi router — > Connect the Hotspot from the Switch — > Back to App for pairing.

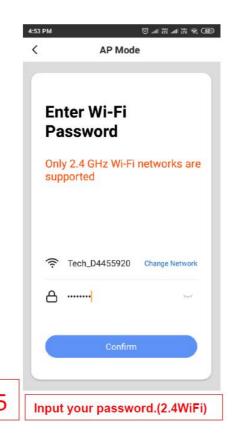

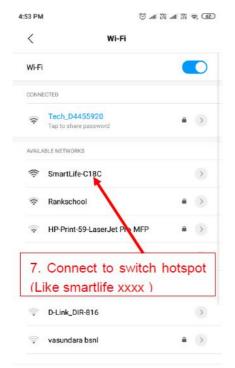

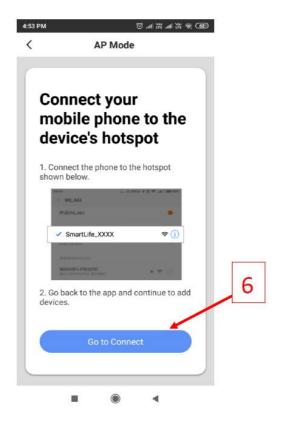

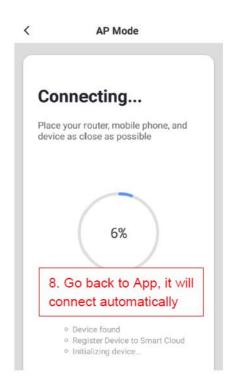

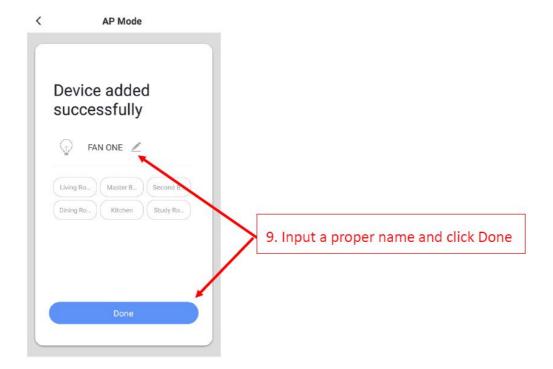

Tech support:

http://www.martinjerry.com/st01support.



Documents / Resources



References

- **ST01** | martinjerry
- Smart Life Smart Living on the App Store
- Smart Life Smart Living Apps on Google Play

Manuals+,