



Miele APFD 203 Complement Instruction Manual

[Home](#) » [Miele](#) » Miele APFD 203 Complement Instruction Manual 

Contents

- 1 Miele APFD 203 Complement Instruction Manual
- 2 Notes about these instructions
- 3 Symbols and conventions used in this document
 - 3.1 Warnings
 - 3.2 Additional information and comments
- 4 Example:
- 5 Example:
- 6 Example:
- 7 Definition of terms
 - 7.1 Queries and technical problems
 - 7.2 Items supplied
 - 7.3 Load carriers
 - 7.4 Disposal of the packing material
 - 7.5 Areas of application
 - 7.6 After reprocessing
 - 7.7 Read More About This Manual & Download PDF:
 - 7.8 Documents / Resources
 - 7.8.1 References

Miele APFD 203 Complement Instruction Manual



Notes about these instructions

Symbols and conventions used in this document

Warnings contain information which is important for safety. This alerts you to the potential danger of injury to people or damage to property.

Read these warning notes carefully and observe the procedural instructions and codes of practice they describe.

Warnings

Notes provide information of particular importance that must be observed.

Notes

Additional information and comments are contained in a simple frame.

Additional information and comments

Operating steps Operating steps are indicated by a black square bullet point.

Example:

- Select an option using the arrow buttons and save your choice with

OK.

Example:

- Select an

Display Display text can be identified from the special font.

Example:

Save.

Definition of terms

Cleaning machine In these operating instructions, the dishwasher or the washer-disinfector is referred to as “the machine”.

Load items The term “load items” is used wherever the items to be processed are not defined in any further detail.

Wash water The term “wash water” is used for the mixture of water and process chemicals.

The APFD 203 insert can be used to reprocess machine-reprocessable carrier frames for compressed air units in a Miele dishwasher or a machine. Follow the operating instructions for your dishwasher or the machine as well as the instructions issued by the manufacturer of the carrier frames for compressed air units.

The APFD 203 insert can be used together with the A 151 lower basket.


Queries and technical problems

If you have any queries or technical problems that you would like to discuss please contact Miele. Contact details can be found at the back of the Operating Instructions for your washer-disinfector or go to www.miele-professional.com.

Items supplied

Load carriers

Disposal of the packing material

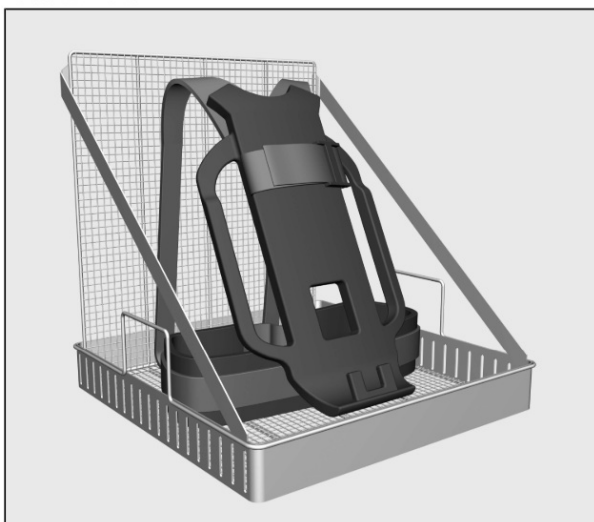

- APFD 203 insert, height 481 mm, width 470 mm, depth 470 mm

The packaging is designed to protect against transportation damage. The packaging materials used are selected from materials which are environmentally friendly for disposal and should be recycled.

Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the

amount of waste in land- fill sites.

- The inserts are only approved for use in the applications stated in the operating instructions. Applications that go beyond those listed and use of the inserts with additional components from the Miel range of components are described in the operating instructions of the components or are to be agreed with Miele. Conversions, modifications and any other use are not permitted.
- Prior to being used for the first time, new inserts must undergo thorough cleaning in the washer-disinfector without load
- Inspect all mobile units, baskets, modules and inserts as described in the “Maintenance” section of the operating instructions for your
- Only items which have been declared by their manufacturer as suitable for machine reprocessing may be processed. The manufacturer’s specific reprocessing instructions must be
- Follow the warnings and instructions provided by the breathing apparatus
- Any seals on the load items should be protected against prolonged contact with wash water. Therefore, always close unused connections with protective caps or blind
- Disposable items must not be

Areas of application

Preparing the load

- Remove the upper basket from the
- Pull the lower basket out of the wash cabinet onto the machine
- Place the insert into the lower
- The rear panel of the insert is facing the rear panel of the wash cabinet.
- Check whether the carrier frame requires manual pre-cleaning, g. to remove soot.

Carry straps that point upwards can get caught in the machine spray arm and affect the cleaning result or can tear off the spray arm or damage the machine when the insert is removed.

- If required, carry this pre-cleaning out in line with the manufacturer’s



- Place the carrier frame in the front part of the insert with the carry straps pointing
- Lean the carrier frame diagonally against the support grid in the rear part of the

The carry straps must hang loose to ensure the wash water cleans and rinses them completely.
The carry straps must hang loose to ensure the wash water cleans and rinses them completely.


- Push the lower basket with the insert into the wash

After reprocessing


It is essential that you pay attention to the “Application technology” chapter in the operating instructions for the dishwasher or the machine and the instructions specified by the manufacturer of the carrier frames for compressed air units

Read More About This Manual & Download PDF:

Documents / Resources

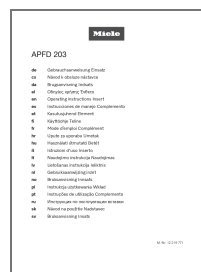	<p>Miele APFD 203 Complement [pdf] Instruction Manual APFD 203 Complement, APFD 203, Complement</p>
---	---

References

-  [Professional.com](#)
-  [Professional](#)
-  [Miele Professional FI | Tutustu ratkaisuihimme ammattilaisille](#)
-  [Miele Professional PT | Descubra as nossas soluções industriais](#)
-  [Miele Professional SE | Upptäck våra kommersiella lösningar](#)
-  [Professional](#)
-  [Miele A/S er leverandør af førsteklasses hårde hvidevarer.](#)
-  [Miele Professional – Üdvözöljük weboldalunkon](#)
-  [Miele Professional | Soluzioni per il Lavaggio Professionale](#)
-  [Miele Professional NO | Se våre profesjonelle løsninger](#)
- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.