



MIFAB MC-10-CO Water Closet Carrier Cleanout Installation Guide

[Home](#) » [MIFAB](#) » MIFAB MC-10-CO Water Closet Carrier Cleanout Installation Guide 

Contents

- [1 MIFAB MC-10-CO Water Closet Carrier Cleanout](#)
- [2 Product Usage Instructions](#)
- [3 CLEANOUT ASSEMBLY](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)



MIFAB MC-10-CO Water Closet Carrier Cleanout



Product Information:

This is the MC-10-CO Water Closet Carrier Cleanout Assembly. It is an alternative method for cleaning out the water closet carrier.

The assembly includes the following components:

- MC-10-CO – Water Closet Carrier Cleanout Assembly
- C1400-RD6-3 – 6 round stainless steel wall plate with screw
- Top fitting with integral 4 brass threaded cleanout plug
- Quarter bend fitting
- Support bracket
- MIFAB MC-10 Series water closet carrier not included
- Two MI-QXHUB-4 Quick Hub 4 heavy duty no hub couplings

The MC-10-CO Water Closet Carrier Cleanout Assembly is designed to be used with the MC-10 Series water closet carrier (not included).

Please note that this product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Product Usage Instructions

1. Ensure that the MC-10 Series water closet carrier is properly installed according to its user manual.
2. Identify the location where the cleanout assembly will be installed.
3. Attach the C1400-RD6-3 stainless steel wall plate to the wall using the provided screw.
4. Connect the top fitting with the integral brass threaded cleanout plug to the water closet carrier.
5. Connect the quarter bend fitting to the top fitting.
6. Secure the support bracket to the wall or floor to provide stability for the cleanout assembly.
7. Attach the MC-10-CO Water Closet Carrier Cleanout Assembly to the C1400-RD6-3 wall plate using the two MI-QXHUB-4 Quick Hub 4 heavy duty no hub couplings.
8. Ensure all connections are tightened securely.
9. Refer to the user manual of the MC-10 Series water closet carrier for further instructions on use and maintenance.

Please note that MIFAB reserves the right to make changes in material and design without formal notice and obligation. For any further assistance or inquiries, please contact the MIFAB customer support hotline at 1-800-465-2736 (USA) or 1-800-387-3880 (CAN).

Date of Manual: 2023-02-10

MC-10-CO


WATER CLOSET CARRIER

CLEANOUT ASSEMBLY

Specification: MIFAB® Series MC-10-CO water closet carrier cleanout assembly includes: one bottom cast iron quarter bend fitting, one top cast iron fitting with integral 4" brass threaded cleanout plug with blind tapped hole and 6" round stainless steel plate and screw, two pieces of the MI-QXHUB-4 Quick Hub heavy duty no hub couplings tested and certified to ASTM C1540 Standard and one all threaded support bracket.

Function: Save time and money by installing the MIFAB® MC-10-CO water closet carrier cleanout assembly. This eliminates the need to source and assemble several additional parts. Five no hub couplings are reduced to two. The 4" threaded brass cleanout plug is built into the top fitting instead of having to order a separate part. The stainless steel wall plate is included with screw.

The MC-10-CO ships complete in a box with the following components: 1) 2 pieces of the MI-QXHUB-4 Quick Hub couplings, 1 quarter bend fitting for the bottom, 1 top fitting with integral 4" brass threaded cleanout plug, 1 support bracket for assembly and one 6" round stainless steel wall plate with screw to assemble onto the finished wall.

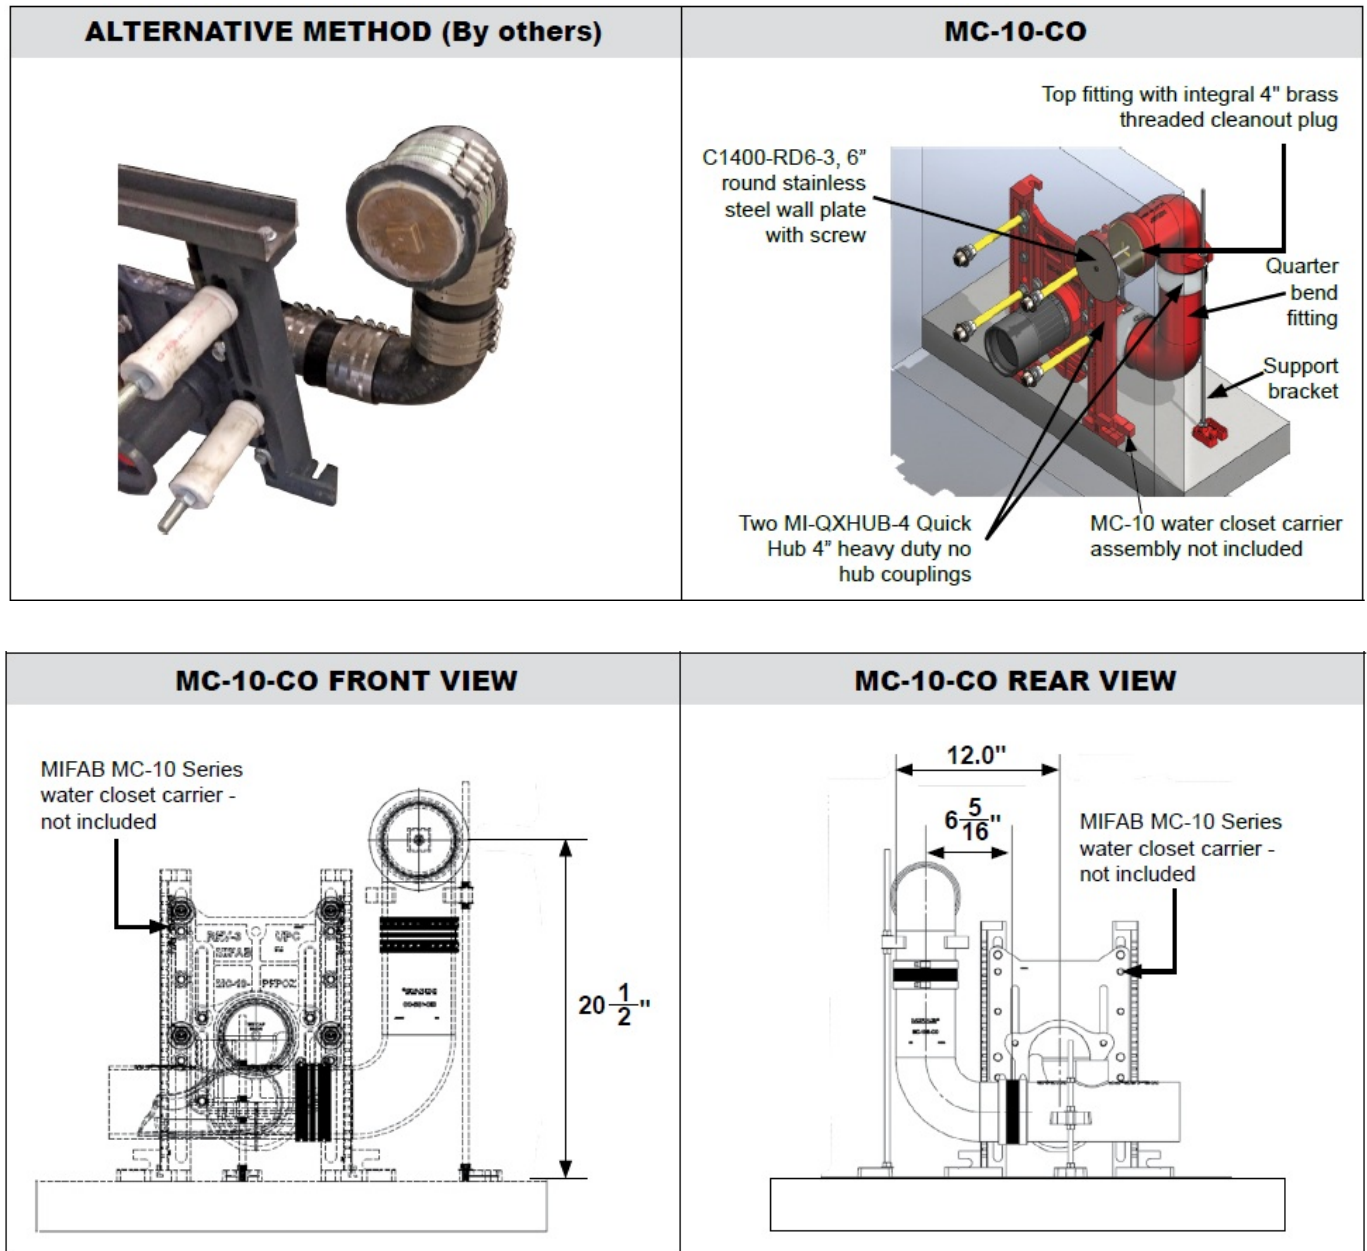


CALIFORNIA PROPOSITION 65 WARNING. This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Job Name:
 Section No:
 Schedule No:
 Page No:
 Contractor:
 Purchase Order No

MIFAB reserves the right to make changes in material and design without formal notice and obligation.

USA: 1-800-465-2736 www.mifab.com CAN: 1-800-387-3880

Documents / Resources

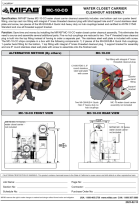	<p>MIFAB MC-10-CO Water Closet Carrier Cleanout [pdf] Installation Guide MC-10-CO Water Closet Carrier Cleanout, MC-10-CO, Water Closet Carrier Cleanout, Closet C arrier Cleanout, Carrier Cleanout, Cleanout</p>
---	---

References

- [🏠 Home | Mifab](#)