



# Motionics BlueKey Wireless Trigger Switch User Guide

[Home](#) » [motionics](#) » Motionics BlueKey Wireless Trigger Switch User Guide 



BlueKey Wireless Trigger Switch  
Wireless Trigger Switch

## Contents

- [1 Description](#)
- [2 Included in the Box](#)
- [3 Quick Start](#)
- [4 Documents / Resources](#)
- [4.1 References](#)

## Description

BlueKey is a Bluetooth switch that can be programmed to send a key command (F9) to any computer. It can be used as a wireless action trigger for remote action on any computer or software.

### 1. LED Indicator



– (Flashing) BlueKey is trying to pair



– (Light is off) BlueKey has paired



– (Flashing) BlueKey reset is complete

- 2. Trigger Button – press to capture data
- 3. Battery Cover – remove to change battery
- 4. Wristband – used to hold, attach switch



## Included in the Box

- BlueKey Wireless Trigger Switch 1x
- CR2032 Battery 1x
- User Guide 1x

## Quick Start

- For a first-time use, use a coin or flat screwdriver to open the battery cover and install the CR2032 battery. You will see a blue LED flashing.
- In Windows Settings on your PC, select Devices.
- Press +Add Bluetooth or other device button and select Bluetooth.
- Select BlueKeyXXXX from the list and the connection will start. XXXX are the last 4 digits of the BlueKey MAC address printed on the battery cover.
- Once the BlueKey is connected, the blue LED will stop flashing. Every time the trigger button is pressed, an F9 command is sent to the computer.
- After the first connection, BlueKey will automatically connect when the paired computer turns on.
- To connect to a different computer, click BlueKey from the list in Bluetooth & other devices in your computer's Settings and press Remove device. Press and hold the trigger button until you see the LED flash red.
- BlueKey doesn't have an on/off switch; it is always on as long as the battery is installed. If the user is not planning to use BlueKey for an extended time, it's recommended that the battery be removed.


**Motionics, LLC**

[info@motionics.com](mailto:info@motionics.com)

[www.motionics.com](http://www.motionics.com)

8500 Shoal Creek Boulevard, Building 4 Suite 209 Austin, TX 78757

## Documents / Resources

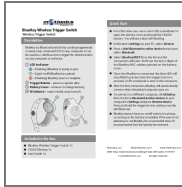

[Motionics BlueKey Wireless Trigger Switch](#) [pdf] User Guide  
BlueKey Wireless Trigger Switch, BlueKey, Wireless Trigger Switch, Trigger Switch, Switch

## References

- [🌐 Motionics LLC – Smart Tools for Monitoring and Diagnostics of Machinery](#)

Manuals+.