

**OBSBOT**

**OBSBOT  
v1.0  
Powered  
Framing  
And  
Autofocus**



# OBSBOT v1.0 Powered Framing And Autofocus User Manual

[Home](#) » [OBSBOT](#) » OBSBOT v1.0 Powered Framing And Autofocus User Manual 

## Contents

- [1 OBSBOT v1.0 Powered Framing And Autofocus](#)
- [2 Product Usage Instructions](#)
- [3 Reading Guide](#)
- [4 OBSBOT Tiny 2 Lite Overview](#)
- [5 Setting Up Tiny 2 Lite](#)
- [6 Zoom](#)
- [7 Various Shooting Modes](#)
- [8 Indicator Description](#)
- [9 OBSBOT Center](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)
- [11 Related Posts](#)

# OBSBOT

OBSBOT v1.0 Powered Framing And Autofocus



## Product Specifications

- Model: OBSBOT Tiny 2 Lite
- AI-Powered PTZ webcam with a two-axis gimbal
- Supported Intelligent Shooting Modes
- Gesture Control Functionality
- Connection: USB-C to Computer (Windows 10 64-bit or later, macOS 11.0 or later)
- Resolution: 4K Ultra HD
- Microphones: Dual Microphones
- Interface: UNC 1/4-20 Interface

## Product Usage Instructions

### 1. Placement on a Monitor:

- Open the built-in stand at the bottom of Tiny 2 Lite.
- Place Tiny 2 Lite on the monitor.
- Adjust the angle of the stand to make the base as parallel as possible to the horizontal plane.

2. **Placement on a Desktop:** Place Tiny 2 Lite directly on your desktop.

3. **Placement on a Tripod:** Use the UNC 1/4-20 nut connector on the base for mounting on a stand/tripod.

## Connecting to the Computer

- If the product heats up during prolonged use, it is normal.
- Use a standard data cable to connect to the computer.
- To avoid power-related issues, connect directly to your computer or use an expansion dock with independent

power supply.

- For 4K streaming, compatible third-party software is required.

## Gimbal and Sleep Mode

- **Manual Sleep:** Adjust the lens downward to activate sleep mode.
- **Device Auto Sleep:** Set sleep time using OBSBOT Center software for automatic sleep mode activation.

## Gesture Control 2.0

- **Turn On/Off Human Tracking:** Perform specific gestures to enter or exit human tracking mode.
- **Zoom Control:** Use gestures to zoom in/out or activate dynamic zoom functionality.

## Frequently Asked Questions (FAQ)

**Q: Where can I find tutorial videos for using OBSBOT Tiny 2 Lite?**

**A:** Tutorial videos are available on the official website at <https://www.obsbot.com/explore/obsbot-tiny-2-lite>.

## Reading Guide

### Note

Important consideration

### Recommendation

We recommend that users watch tutorial videos and read the user manual first to understand the usage process.  
<https://www.obsbot.com/download>



### Tutorial Video

Users can access and watch tutorial videos through the following link and QR code to learn how to use the product correctly. <https://www.obsbot.com/explore/obsbot-tiny-2-lite>



## OBSBOT Tiny 2 Lite Overview

### About Tiny 2 Lite

OBSBOT Tiny 2 Lite is an AI-powered PTZ webcam equipped with a two-axis gimbal. It supports a variety of intelligent shooting modes and is supplemented by a variety of gesture control function to meet users' needs from

different scenarios.

OBSBOT Tiny 2 Lite is connected to the computer via USB, plug and play. It also comes with OBSBOT Center software to expand more advanced functions.

### System Requirements

Windows 10 (64-bit) or later macOS 11.0 or later

Recommended for 1080p 60fps and 4K

### Recommended Apple computers:


1. MacBook Pro (2018, 8th Gen Intel® Core™ i5 Processors or later)
2. MacBook Air (2018, 8th Gen Intel® Core™ i5 Processors or later)
3. iMac Retina (2019, 8th Gen Intel® Core™ i5 Processors or later)

### Recommended PC configuration:

1. CPU: 7th Gen Intel® Core™ i5 Processors or later
2. RAM: 8GB

### Parts Info

1.

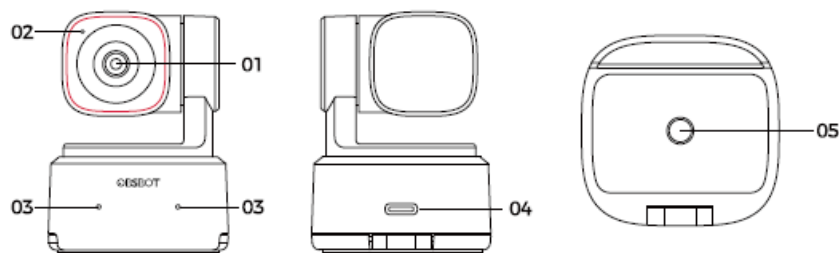

4K Ultra HD lens

2. Camera Indicator
3. Dual Microphones
4. USB-C Port
5. UNC 1/4-20 Interface

### Setting Up Tiny 2 Lite

#### Placement Instructions

1. Placement on a Monitor

Please operate as shown in the following figure:

1. Open the built-in stand at the bottom of Tiny 2 Lite.
2. Place Tiny 2 Lite on the monitor.
3. Adjust the angle of the stand to make the base as parallel as possible to the horizontal plane.



## 2. Placement on a Desktop

Place Tiny 2 Lite directly on your desktop.


## 3. Placement on a Tripod

OBSBOT Tiny 2 Lite is equipped with a standard UNC 1/4-20 nut connector on the base for mounting the camera to a stand/tripod.

## Connect to the Computer

OBSBOT Tiny 2 Lite is compatible with both Windows and Mac computers. To set up your OBSBOT Tiny 2 Lite, use the standard data cable to connect it to the USB port on your laptop or desktop computer. If necessary, use the provided USB-C to USB-A adapter. The webcam will automatically install on your device. Please wait a few seconds for the installation to finish before attempting to access the webcam. After the installation is complete, you can use popular video call platforms such as Zoom, Microsoft Teams, Skype, or Google Meet to start streaming with your Tiny 2 Lite.

1. If the product is in working condition for a long time, the bottom of the product will heat up, which is normal situation.
2. To avoid compatibility problems, be sure to use the standard data cable to connect the computer.
3. To prevent the product from malfunctioning due to insufficient power supply, please connect it directly to your computer or use an expansion dock with an independent power supply.
4. 4K streaming requires compatible third-party software.

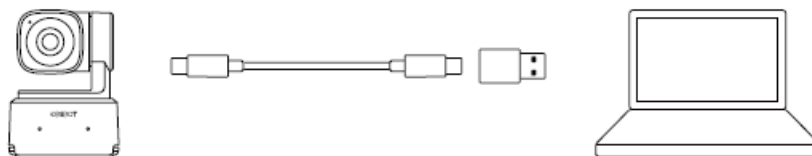

## Gimbal

OBSBOT Tiny 2 Lite is equipped with a 2-axis brushless motor gimbal. The controllable rotation range for the pan is  $\pm 140^\circ$ , and for the tilt is  $30^\circ$  to  $-70^\circ$ .


## Sleep Mode

### 1. Manual Sleep

Please adjust the lens to point straight down. If the indicator light is off, it means that the sleep mode is activated.

### 2. Device Auto Sleep

You can use OBSBOT Center software to set the sleep time so that it automatically enters sleep mode as needed.

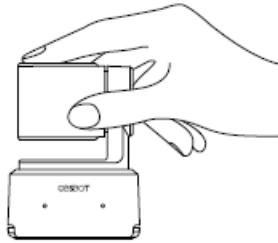

## Gesture Control 2.0

### Turn On/Off Human Tracking

To enter human tracking mode, perform the gesture as shown in the figure. The current status light will flash twice in succession and then turn to a steady blue state, indicating that you have successfully entered human tracking mode.

To exit human tracking mode, perform the same gesture again. The blue status light will flash twice continuously and then turn to a steady green state, indicating that you have successfully exited human tracking mode.



### Zoom to 2x (default) / Cancel

Perform the gesture control as shown in the figure. The status light will flash twice continuously to indicate that the zoom in/out operation has been performed.

### Dynamic Zoom

Perform gesture control as shown in the figure until the status light starts flashing, at which means the dynamic zoom function is activated. Zoom in or out as the distance between your hands changes, until no gesture is detected or the zoom status can no longer be adjusted.



- Please be careful not to cover your face with your hands and keep your fingers open for the gesture control.
- Please go to the link below to find the tutorial video for gesture control.

<https://www.obsbot.com/explore/obsbot-tiny-2-lite>

## Zoom

OBSBOT Tiny 2 Lite supports 4x digital zoom.

### 1. Gesture Control

By default, the zoom setting is 2x. Users can create customized gesture zoom settings from 1x to 4x via OBSBOT Center software.

## 2. Manual Control

Users can do the manual control for zoom settings from 1x to 4x via OBSBOT Center software.

### **Focus**

The OBSBOT Tiny 2 Lite supports two focusing methods.

#### 1. Auto-Focus

Utilizing OBSBOT's advanced AI technology, the auto-focus feature intelligently adjusts the lens in real time, ensuring that you remain in focus at all times, regardless of your proximity to the camera.

#### 2. Manual Focus

Users can disable the auto-focus feature and manually adjust focus when using OBSBOT Center software.

### **HDR**

By default, HDR feature is disabled. However, users have the option to enable HDR= on the OBSBOT Center software to enhance their appearance on video, even in low light or direct sunlight.

### **Various Shooting Modes**

The OBSBOT Tiny 2 Lite offers three shooting modes, with landscape mode being the default.

#### 1. Landscape shooting

This mode is suitable for conventional mounted cameras.

#### 2. Portrait shooting

By horizontally placing the camera through an external accessory, it will automatically enter into the portrait mode.

The automatic rotation feature can only be used in software that supports it, such as OBS, etc. Some other software may require manual rotation.

#### 3. Up-side-down shooting

The camera can be installed upside down, and the screen will automatically rotate for use.

The camera can be installed upside down, and the screen will automatically rotate for use.

### **Human Tracking**

Activate human tracking using gesture control or OBSBOT Center software. OBSBOT Tiny 2 Lite will automatically track and ensure that the figure is in the best composition position.

### **Group Mode**

When you activate the group mode, the view will automatically adjust as participants join or leave the image. This ensures that everyone is properly covered and visible. By using the group more, the view will always focus on the right amount of the view.

### **Indicator Description**

Equipment Status	Indicator status
Power-on initialization	Blue light flashes slowly
No target is selected	Green light keeps on
Execute gesture control	The indicator for the current state blinks twice in succession it will either switch to the post-recognition indicator state upon successful recognition or maintain the pre-recognition indicator state in case of recognition failure
Enable human tracking	Blue light keeps on
Target losing	Yellow light keeps on
Enable group mode	Purple light keeps on
Firmware upgrading	Blue/yellow flash alternately
Firmware upgrade failed	Red light flashes slowly
Device in fault, such as gimbal failure, AI errors, etc.	Red light keeps on
Sleep mode	Light off

## OBSBOT Center

### Software Overview

OBSBOT Tiny 2 Lite provides advanced users of Windows and Mac with a control software for OBSBOT Center, which allows you to perform a series of extended operations on the camera, such as controlling the motion trajectory of the pan-tilt, selecting or canceling tracking targets, setting presets or expanding various creative gameplay.

### Download and Installation


Download and install OBSBOT Center through <https://www.obsbot.com/download> to further enhance your user experience.

### Firmware Upgrade

OBSBOT Tiny 2 Lite upgrades through OBSBOT Center software. When firmware is available for update, there will be corresponding prompts after connecting the device. Please follow the info on prompts.

Do not disconnect the camera during firmware upgrade process.

## Documents / Resources

	<p><a href="#">OBSBOT v1.0 Powered Framing And Autofocus</a> [pdf] User Manual v1.0 Powered Framing And Autofocus, v1.0, Powered Framing And Autofocus, Framing And Autofocus, And Autofocus, Autofocus</p>
---	---

## References

- [Download Center | OBSBOT](#)
- [Explore More About OBSBOT Tiny 2 Lite](#)
- [User Manual](#)



## **Manuals+. Privacy Policy**

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.