



ORBiT Q40 Extended Warranty Keyboard User Guide


[Home](#) » [Orbit](#) » ORBiT Q40 Extended Warranty Keyboard User Guide 

Contents

- [1 ORBiT Q40 Extended Warranty Keyboard](#)
- [2 Product Information](#)
- [3 Usage Instructions](#)
- [4 Introduction](#)
- [5 In the Box](#)
- [6 Orientation of the Device](#)
- [7 Further Information](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)



ORBiT Q40 Extended Warranty Keyboard

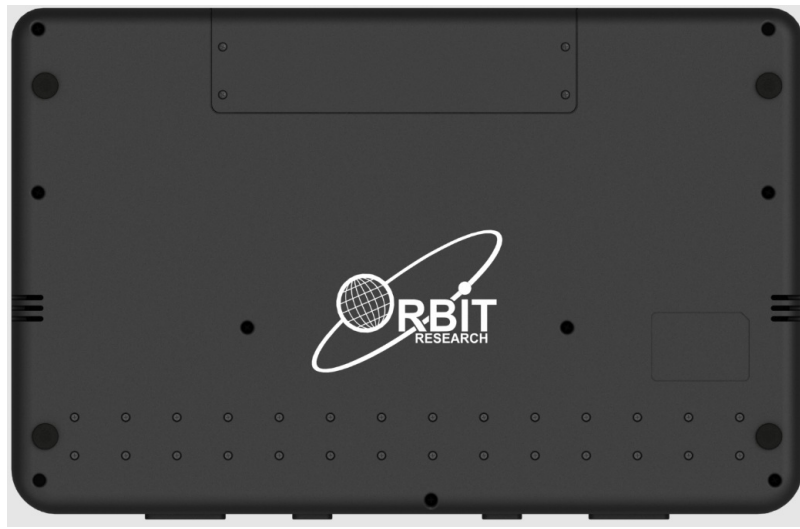

Product Information

Specifications

- Device: Orbit Reader Q40 Electronic Braille Display
- Features: 3-in-1 device for reading braille, taking notes, and accessing computer/smartphone functions
- Display: 40 braille cells with 8 pins each
- Connectivity: Standard USB A host port, SD card slot, USB Type C port

Usage Instructions

In the Box

The package includes the Orbit Reader Q40 device, USB Type C charging cable, charger, and SD card with user guide.

Charging the Device

Plug the small end of the cable into the USB Type C port on the right side of the unit and insert the other end into the supplied charger or a USB port on a computer to charge the device fully.

Powering On and Off:

To turn on the device, press and hold the power button for 2 seconds. Press and hold the power button for 2 seconds to turn it off. The device will go to sleep after 10 minutes of inactivity.

Language Settings

You can adjust the language settings through the device's menu options.

Reading:

Insert the SD card with braille material to access files. Use the Up and Down Arrow keys to navigate through files and press Enter to open a file. Use panning buttons to read through content and Backspace to exit.

Creating and Editing Files:

Press CTRL + N to create a new file. The blinking cursor indicates the typing position. Use QWERTY keyboard keys to type text. Change language using Alt + F1 to F4 keys.

Frequently Asked Questions (FAQ)

Q: How do I charge the Orbit Reader Q40?

A: Use the USB Type C charging cable provided to connect to a charger or USB port for charging.

Q: How do I navigate through files on the device?

A: Use the Up and Down Arrow keys to scroll through files, press Enter to open a file, and use panning buttons for reading.

Introduction

This guide provides the basic instructions for using the Orbit Reader Q40 Electronic Braille Display. For more information and complete instructions, consult the Orbit Reader Q40 User Guide included on the SD card.

The Orbit Reader Q40 is a unique 3-in-1 device that enables a blind or visually impaired user to read books and documents in braille, take notes and save them as braille or text files. It helps the user to easily access all the functions of a computer or smartphone such as web browsing, email, and text messaging.

Reading materials that were previously available in braille embossed on paper, can now be read on the compact and portable Orbit Reader Q40. Thousands of books can be stored on the small memory cards, known as SD cards. Blind people who used to write notes using a slate and stylus or a Perkins Braille can now type in braille with the Orbit Reader Q40, which includes a QWERTY keyboard and is much quieter and faster, as well as being fatigue-free. The notes are stored on the SD card and can be transferred to a computer or smartphone and read by anyone.

The Orbit Reader Q40 produces braille symbols using 8 pins that can move up and down to produce braille dots and can show a line of 40 such symbols, also known as cells. Any text or braille content can be instantly displayed on the device, 40 symbols at a time and once you have read the first line of 40 symbols, you can move to the next line by pressing a button, known as the pan button.


In the Box

The following items are included in the package. Contact your distributor if anything is missing or damaged.


- Orbit Reader Q40 unit
- Charger
- USB Cable (USB-A to USB Type C)
- SD Card with User Guide and content (installed in unit)
- Printed Quick-Start Guide

Orientation of the Device

The normal operating orientation of the device is with the four Thumb keys closest to you. Above the Thumb keys is the line of braille cells. On the left and right side of the braille line are two buttons. These buttons are used to skip to the next or previous line of braille and are known as the pan keys. The small buttons located above each braille cell are cursor routing buttons, used to move the cursor to the desired location while editing. Above the cursor routing keys is the QWERTY keyboard. The QWERTY keyboard is used for entering commands and writing data in the file. On the right side of the device, from front to back, is the recessed Power button (front), USB Type-C (middle), and 3.5mm Audio Jack (back).

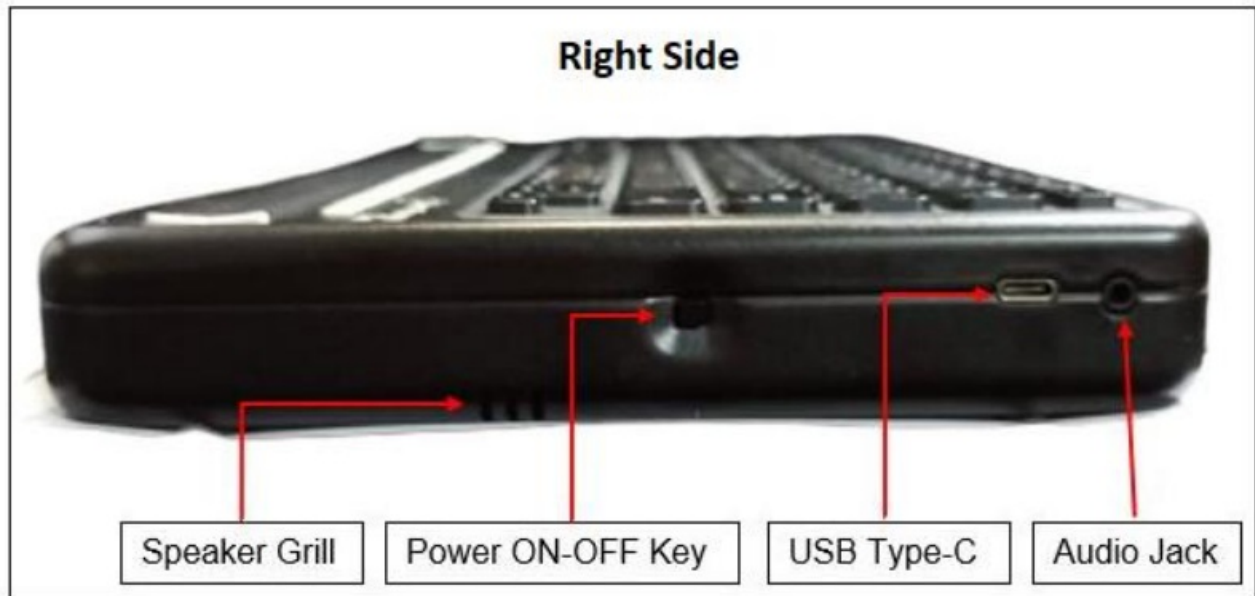


On the left side of the device, is the Standard USB A host port.

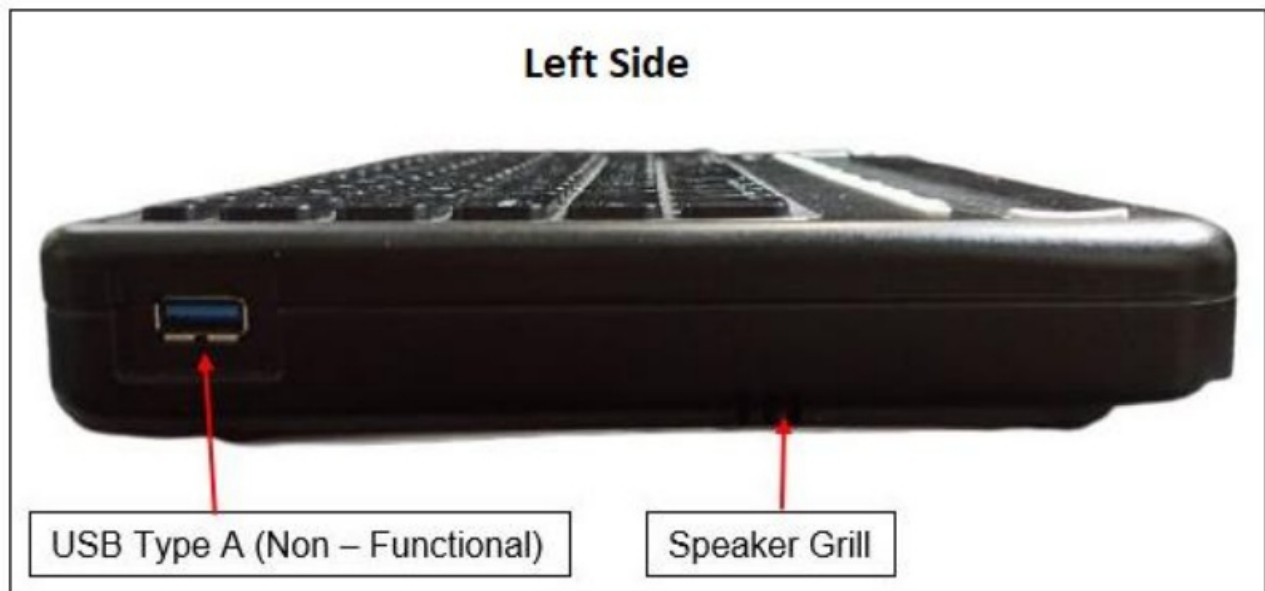

At the back side of the device, is the SD card slot



. At the bottom of the device, is the switch to Power cut-off of the device.

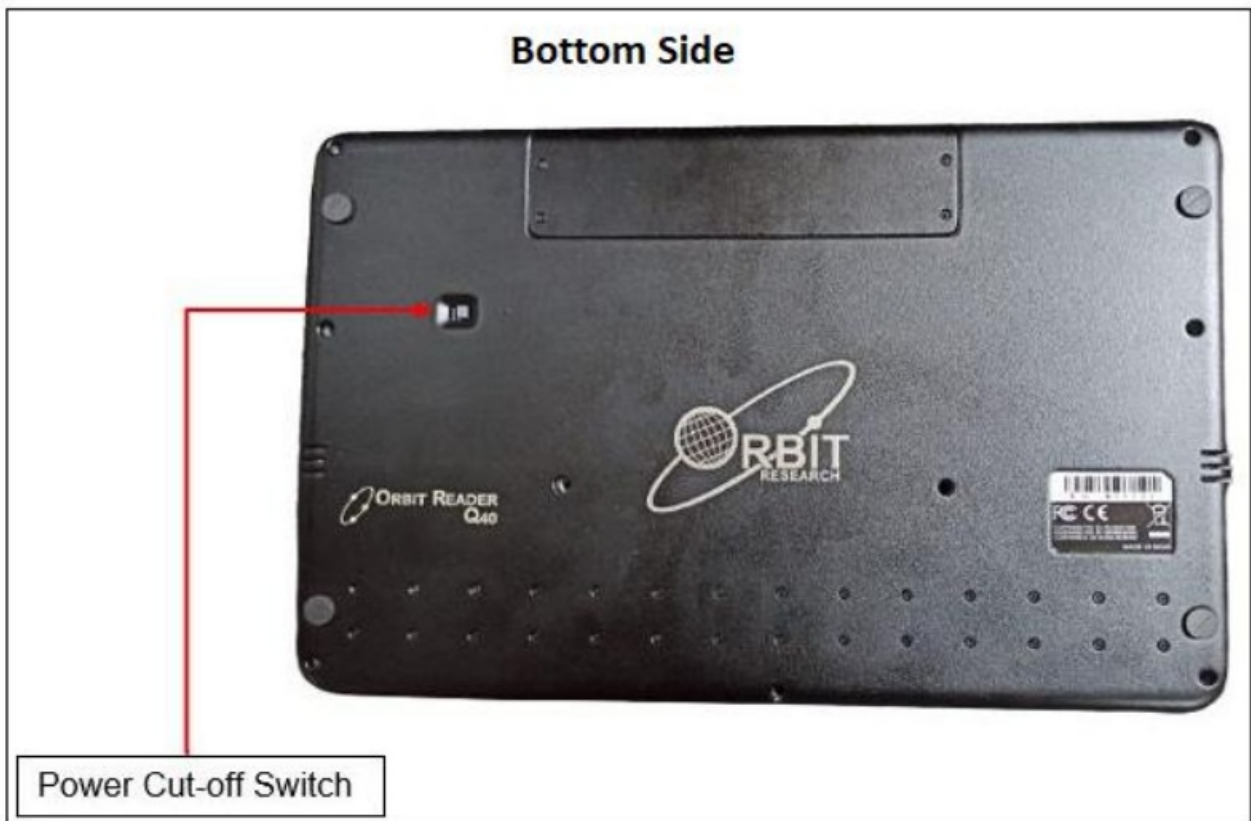

Charging the Device

We recommend charging the device fully before or during the first use. To charge the battery, plug the small end of the cable into the USB Type C port on the right side of the unit and insert the other end into the supplied charger or a USB port on a computer.

Powering On and Off

To turn on the device, press and hold the power button for 2 seconds. If the device is already on, pressing and holding the power button for 2 seconds will turn it off. If the device is running on batteries and you do nothing with it for 10 minutes, it goes to sleep automatically to conserve power. The device will activate all the dots momentarily to indicate power-on and power-off.

Language Settings

Your Orbit Reader Q40 comes with support for several languages and more can be loaded from the SD card as needed. You can select a language by pressing the Alt key and one of the Function keys together. The Alt + F1 keys will choose UEB Grade 1 (uncontracted) braille for reading and writing. All the messages and menus will also be shown in UEB Grade 1 (uncontracted). The Alt + F2 keys will choose UEB Grade 2 (contracted). The Alt + F3 keys will choose the BRF format, which is independent of language. The Alt + F4 keys will choose the language you have loaded from the SD card. Many other options provide a lot of flexibility. Please refer to the User Guide for more details.

Reading

The Orbit Reader Q40 comes with an inserted SD card containing the User Guide and translated braille material already on it. If the SD card is removed or there is no SD card present when the unit is turned on, the Orbit Reader Q40 displays “SD card [no media]”. To insert a card into the slot, make sure its contact fingers are facing down and gently push it in until you hear or feel a click. To remove a card, press and release it.

When you first power the device on, the display shows the name of the first file or folder on the SD card. You can scroll through the list of files using the Up and Down Arrow keys on the QWERTY keyboard.

To open a file in the list for reading, press the Enter key. To read a file, use the panning buttons to move forward or back through the contents forty characters at a time. To exit from reading a file and return to the list of files and folders, press the Backspace key.

Creating and Editing Files

To create a new file, press the CTRL + N. You will notice that dots 7 and 8 (the two dots at the bottom) in the first cell will start blinking. This is known as the cursor and shows the position at which the text you type will be inserted. Start typing using the QWERTY keyboard keys. Choose the language you would like to type in, using the Alt + F1 to F4 keys.

To edit a file you are reading, press the CTRL + E.

To exit the Editor, press the ESC key and then press Enter key. The cursor disappears and returns you to the file you were reading. If you have created a new file, the editor automatically names the file with the first 40 characters of the file. You can rename the file if you like.

Setting Preferences

The Orbit reader Q40 offers several options which are accessed through the menu. This allows you to do things such as checking the battery status, configuring the way braille is displayed, etc.

- To see the menu, press the Windows + P key
- To move through the menu items, press Up or Down Arrow keys
- To see the options for an item in the menu, press Right or Left Arrow keys
- To select or unselect an option, press the Enter key
- To close the Menu, press the Backspace key

Connecting to a Computer or Smartphone

The Orbit Reader Q40 can connect to computers and mobile devices to access all of their functions and features using Braille. The connection can be either through USB or Bluetooth. The access to the computer or mobile device's features is through a software program called a Screen Reader. This software is available for all platforms including Android, iOS, Windows, Mac OS, Chrome, and Amazon FireOS and has been fully tested to operate seamlessly with the Orbit Reader Q40. For further details, please refer to the User Guide.


Further Information

For the latest information, specifications, troubleshooting tips, software upgrade instructions, care and use information, warranty information, and more detailed instructions, contact us at

techsupport@orbitresearch.com.

© 2021 Orbit Research. All rights reserved.

Documents / Resources

<div><div></div><div>ORBiT Reader Q40™ Quick start Guide</div></div> <div><p>Introduction</p><p>This quick start guide is for the ORBiT Reader Q40™. It contains information on how to use the device, how to connect it to a computer, and how to use the software. It is intended for users who are new to the device and the software.</p><p>Getting started</p><p>1. Unpack the device and the software.</p><p>2. Connect the device to a computer.</p><p>3. Install the software.</p><p>4. Run the software.</p><p>Key features</p><p>• The device is a small, portable, and easy to use.</p><p>• The device can be used to read and write data.</p><p>• The device can be used to connect to a computer.</p><p>• The device can be used to install software.</p><p>• The device can be used to run software.</p></div>	<div><div>ORBiT Q40 Extended Warranty Keyboard [pdf] User Guide</div><div>Q40 Extended Warranty Keyboard, Q40, Extended Warranty Keyboard, Warranty Keyboard, Keyboard</div></div>
---	--

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.