



Oreck XL AIRP Series Air Purifier User Manual

[Home](#) » [ORECK](#) » Oreck XL AIRP Series Air Purifier User Manual 

Contents

- [1 Oreck XL AIRP Series Air Purifier User Manual](#)
- [2 Safety](#)
- [3 Accessories](#)
- [4 Operation](#)
- [5 Cleaning the Air Direction Grill](#)
- [6 Maintenance](#)
- [7 Troubleshooting](#)
- [8 Warranty](#)
- [9 Related Posts](#)

ORECK

Oreck XL AIRP Series Air Purifier User Manual



Important!

Read all instructions carefully, and keep them for future reference. Thank you for purchasing an Oreck Professional Air Purifier! You will enjoy years of cleaner, fresher air with the Oreck air purifier in your home. It includes six different air purification technologies to provide unique protection against airborne pollutants and allergens:

- **Stage 1.** The pre-filter removes large particles, including dust, lint, and hair.
- **Stages 2 and 3** are part of the Truman Cell™ proprietary technology.
- **Stage 2.** Positive charging wires electrostatically charge smaller particles such as dust, smoke, pollen, bacteria, molds, viruses, and fungi.
- **Stage 3.** The electronic Truman Cell™ collects the electrostatically charged particles and destroys bacteria, molds, viruses, and fungi.
- **Stage 4.** The optional odor absorber removes common household odors and chemical fumes.
- **Stage 5.** The oxygenator changes atmospheric ozone to harmless oxygen.
- **Stage 6.** The optional air revitalizer negative ion generator provides additional air freshness and a pleasant, clean scent through the release of negative ions.

This combination of technologies provides broad protection against a wide range of contaminants to make your home healthier, cleaner, and more livable. Enjoy! At Oreck, we understand that our customers are unique and expect superior service. To meet your needs, we offer different customer service options to work with your lifestyle and preferences. Welcome to our Call. Click. Visit. customer service program.



To speak with an Oreck representative call:

USA: 1-800-989-3535

Canada: 1-888-676-7325



On the web, point and click at: www.oreck.com Visit us in person at one of over 450 store locations.

To find the nearest store, please call 888-Oreck store (888-673-2578) or visit www.oreckstore.com.



Safety

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS AIR PURIFIER WARNING To reduce the risk of fire, electric shock, or injury:

- Do not use it outdoors or on wet surfaces.
- Use only as described in this manual.
- Do not use a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center or call customer service at: USA: 1-800-989-3535 Canada: 1-888-676-7325
- Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord.
- Do not handle plugs or appliances with wet hands.
- Do not put any objects into openings. Do not use any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Turn off all controls before unplugging.
- Do not use appliances in an enclosed space where oxygen, flammable, explosive or toxic vapors are given off or in an area where flammable dust is present.
- You should consult your oxygen and medical equipment providers before using the air purifier around oxygen tanks, hoods, or other medical devices using concentrated oxygen. Using electronic devices, including an air purifier, in the presence of oxygen and other combustible gases could result in fires or explosions, potentially

causing serious injury or even death.


CAUTION! Installing a wet or even damp Truman Cell™ into the air purifier may cause the melting of internal components during use.

- DO NOT place a wet or damp Truman Cell™ in the air purifier.
- DO NOT wash the odor absorber. Replace, if necessary.
- Dry the Truman Cell™ thoroughly outside of the air purifier before reinstalling it into the air purifier. Ensure that all areas including corners and areas that may trap water are dry before reinstalling the air purifier.

FOR COMMERCIAL USE:

High voltage from Truman Cell™ may cause ignition of flammable or explosive gases/particles in the circulating air.

- DO NOT use in an area that contains flammable or explosive gases/particles in the circulating air.

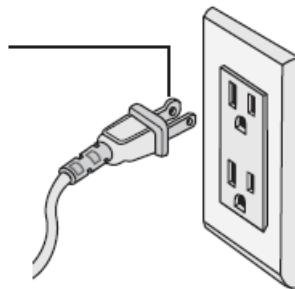

- Do not place open flames, including candles, directly in front of the air purifier. Doing so may result in minor or moderate injury.
- Keep objects away from the front grill.

It is important to consider the following when deciding where to locate the air purifier:

- Position the air purifier on a flat, solid, stable surface.
- Position the air purifier so that the dirty air is not drawn across your head or body while sitting or sleeping.
- Position the air purifier so the plug on the power cord easily reaches a standard electrical outlet for a polarized plug.
- Do not use an extension cord.
- Do not place the air purifier near sources of heat, such as stove tops, ovens, radiators or computers.

A polarized plug has one rounded prong and one straight prong. The rounded end goes into the longest socket slot. To reduce the risk of electric shock, this equipment has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact qualified personnel to install the proper outlet. Do not alter the plug in any way. All accessories and replacement parts are sold separately. To order, call our customer service group or visit our website. Please have your model number from the data label on the bottom of the unit.

Accessories

Item Part Number

Item	Part Number
Assail-a-Cell Collector Cell Cleaner, 20 oz.	32358
Spring Mulberry Scent Cartridges, 8 pack	FA2PK
Blooming Jasmine Scent Cartridges, 8 pack	FA3PK
Odor Absorber	AP1PKP

Replacement Parts

Item Part Number

- Pre-Filter 21024-01
- Truman Cell™ 09-21058-0

Operation

Simply follow the numbered steps to use your Air Purifier. Each call-out describes the features of the Air Purifier and how it functions.

Top Cover - Easily removed by sliding forward and lifting off.

Oxygenator - Permanent cartridge converts ozone into oxygen.


Odor Absorber - Optional feature that removes odors and chemical fumes from glue, solvents and synthetic materials. The purifier continues to clean the air with or without the odor absorber.

Truman Cell™ - Electrostatically charges and collects small particles such as dust, smoke, pollen, bacteria, molds, viruses, and fungi.

Pre-Filter - Removes large particles such as dust, hair and lint.

Front Grill - Slides off for easy cleaning. Slide to the left to remove. The grill must be closed securely for the unit to operate.

Cleaning Brush - (not shown)
Included to clean air direction grill and areas around the air purifier.

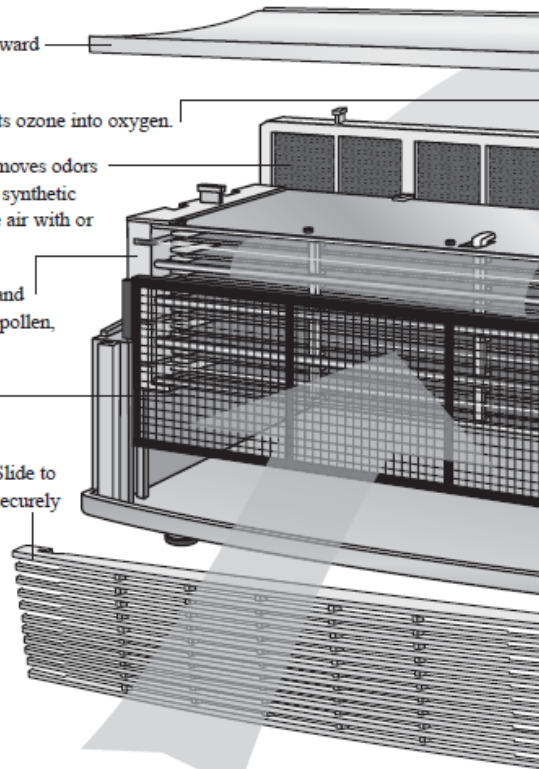

Collector Cell Light


Turns red when the Truman Cell™ needs cleaning. Hold down the Air Revitalizer button until the light blinks three times to reset the timer after cleaning.


Odor Absorber Light

Turns red when the optional odor absorber has been in use 12 months. Hold down the Night Light button until the light blinks three times to reset the timer after replacing the odor absorber.

Air Revitalizer Light

Indicates when the Air Revitalizer is ON.

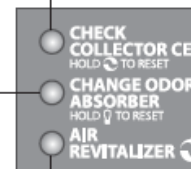

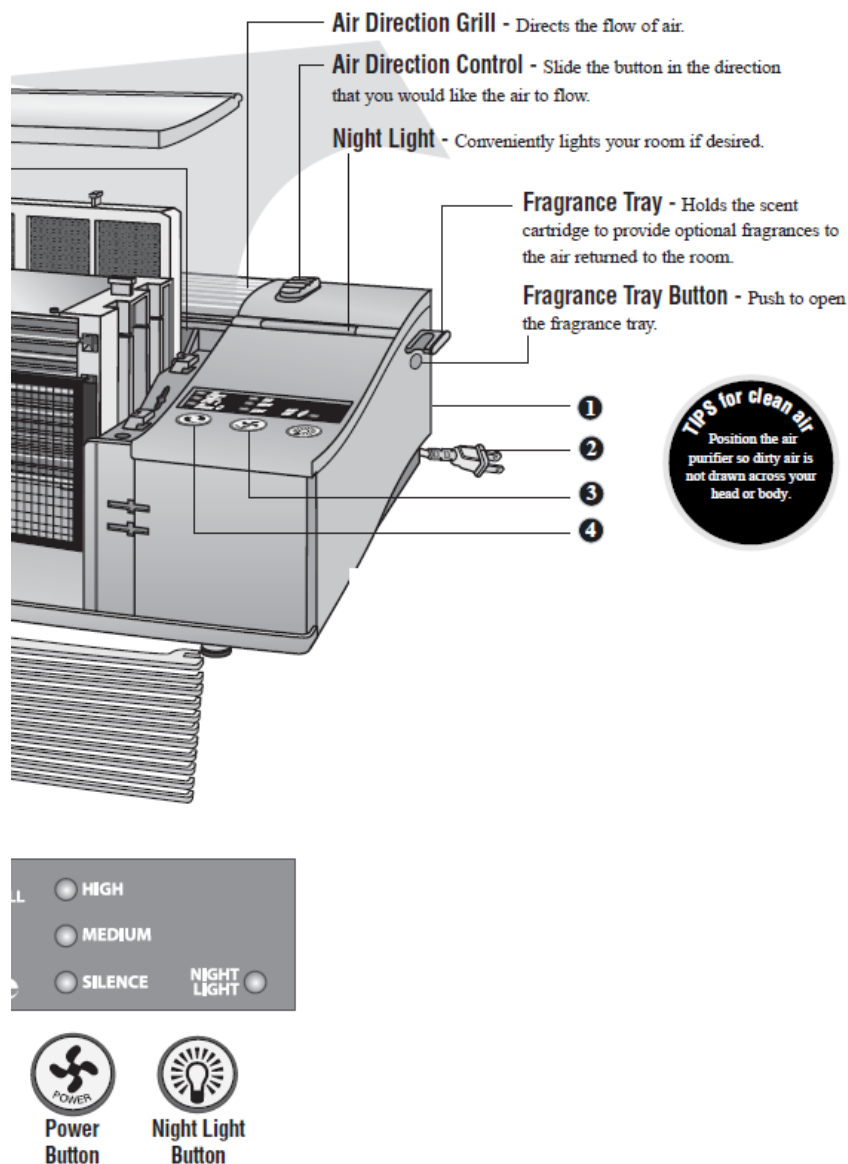

1. Place.

Locate the air purifier on a hard surface such as a table or desk. Be sure the grill is not blocked by other objects, there are no candles or flames near the unit.

2. Plug-In.

Plug into the nearest standard electrical outlet that accepts a polarized plug.

Select the air cleaning speed.

Press the power button for the desired speed.

- High for maximum cleaning.
- Medium for normal use.
- Silence for Silence Technology®.

The quietest setting cleans the air as effectively but more slowly than the higher settings.

Turn on the Air Revitalizer

Provides additional air freshness and a pleasant, clean scent through the release of negative ions. Negative ions may cause dust to settle from the air onto the air purifier and surrounding furnishings. Designed to run continually, but may be turned off if desired.

Cleaning Times


Proper care and cleaning of the air purifier is critical to performance. The following chart shows the cleaning intervals and methods.

Part	Cleaning Time	Method
Cabinet	As needed	Wipe with damp cloth first. If required, follow with mild non-abrasive cleaner. ® Spray Oreck Assail-a-Cell cleaner or soak in warm water with mild detergent. Rinse and dry thoroughly. Gently wipe cell wires with a dry ® cotton swab, Spray Oreck Assail-a-Cell cleaner or soak in warm water with mild liquid detergent. Rinse and dry thoroughly. Rinse thoroughly in warm water. Replace (optional for odor removal). Do not wash or get wet. Vacuum to clean, if necessary. Use the brush provided with the air purifier to brush away debris in between the slots. Vacuum the front with a soft brush attachment. Do not use any liquids for cleaning.
Truman Cell™	2 to 4 weeks, or as needed	
Truman Cell™	If arcing occurs*	
Pre-filter	2 to 4 weeks, or as needed	
Odor	12 months,	
Absorber	or as needed	
Air Direction Grill	As needed	
Oxygenator	As needed	

Arcing is a sharp snapping sound that can occur when dust particles build up in the Truman Cell™.

WARNING!

Cleaning the unit while it is plugged in may result in electric shock, electric spark, and serious injury. Unplug the unit before cleaning or maintenance. Remove the unit from the wall if it is wall mounted.

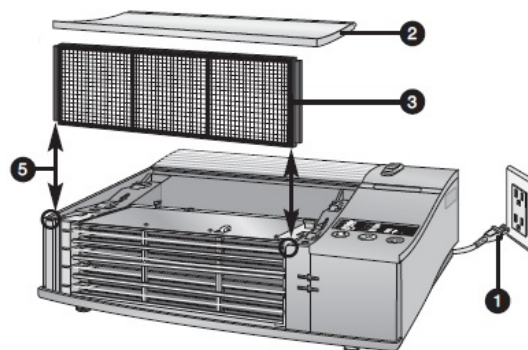


1. Unplug the air purifier.
2. Remove the top cover by sliding it forward and lifting it off.
3. Pull the pre-filter straight up and out of the cabinet.

4. Thoroughly rinse the pre-filter and let it air dry before placing it back in the cabinet. Do not use heated or compressed air as part of the drying process.
5. Place the pre-filter back into the unit by sliding it straight down into the slots.
6. Place the top cover back on the cabinet, sliding back to lock it into place.

Cleaning the Truman Cell™

Note: The Truman Cell™ may require more frequent cleaning if “arcing” occurs. Arcing is a sharp snapping sound that occurs when large particles of dust are collected in the Truman Cell™. If prolonged or continuous arcing occurs the Truman Cell™ should be cleaned

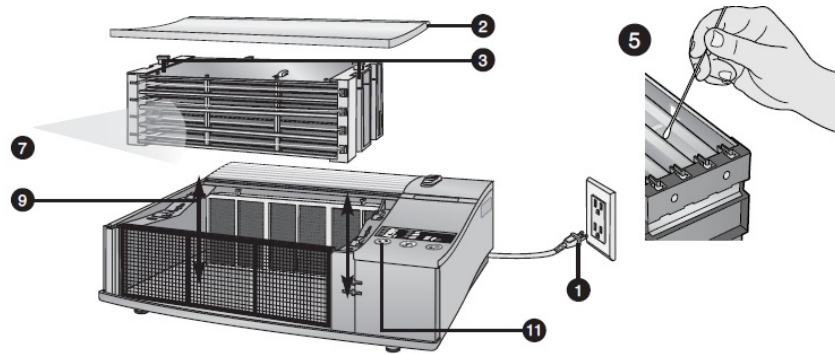


IMPORTANT: Do not try to clean the Truman Cell™ by inserting a cloth, brush, or other objects between the cell plates.

1. Unplug the air purifier.
2. Remove the top cover by sliding it forward and lifting it off.
3. Pull the Truman Cell™ straight up and out of the cabinet by using the two small handles on each side of the Truman Cell™.
4. Based on the frequency of arcing or how dirty the cell has become, perform one or both of the following steps:
5. If the cell is arcing frequently a “quick clean” can be performed by gently wiping a dry cotton swab along the length of each of the four wires near the front of the cell to remove any built-up particles from the wires. Go to Step 9.
6. For a more complete cleaning, place the Truman Cell™ in a sink, bathtub, dishwasher or other location where cleaner and contaminants will rinse away without damaging surfaces and proceed to
7. Step 7. Note: If placed in the dishwasher, do not insert dishwasher tongs directly into the collector cell as this may cause damage to the wires or cell plates.
8. Spray Oreck Assail-a-Cell® cleaner thoroughly between each cell plate and cover each surface. Allow the cleaner to soak for a few minutes and rinse with clean water. Do not let the cleaner dry on the Truman Cell™.
9. An alternative method to clean the Truman Cell™ is to soak it in warm water for two to three hours.
10. Mild liquid dish detergent may be used to help break down dirt. Rinse thoroughly with clean water.
- Note:** Do not insert objects to clean the Truman Cell™. Tough residue such as tar from tobacco smoke may need additional applications or longer soaking. Allow drying completely outside of the air purifier. Do not use heated or compressed air to dry.
11. **IMPORTANT:** Do not reinsert the Truman Cell™ until it is completely dry. If the “Check Collector Cell” light blinks red after replacing the Truman Cell™, then the Truman Cell™ may still be wet. Remove the Truman Cell™ and allow it to finish drying. Place the Truman Cell™ back into the unit by sliding it straight down into the slots. The Truman Cell™ is specially designed so that it can be inserted only in one direction.


12. Replace the top cover, sliding it back to lock it into place. Be sure the top cover and front grill are securely closed or the unit will not operate. Reset the "Check Collector Cell" timer by holding down the Air Revitalizer button until the "Check Collector Cell" light blinks three times

Cleaning the Air Direction Grill

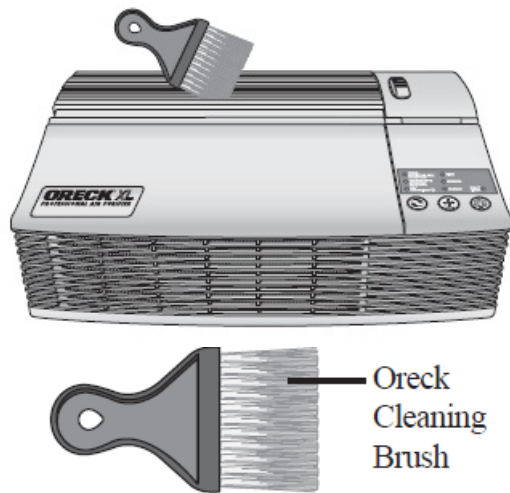

1. Using the cleaning brush (located on the bottom of the top cover), brush away any debris that may have collected between the grill slots


Cleaning the Oxygenator

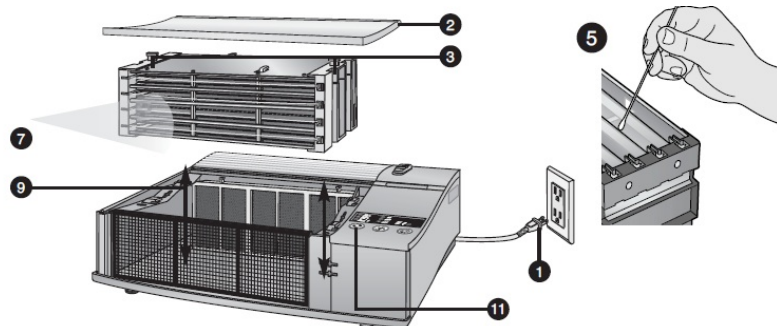

1. Unplug the air purifier.
2. Remove the top cover odor absorber, pre-filter, and Truman Cell™.
3. Lightly vacuum the front only with a soft brush attachment. Do not use liquids to clean. Liquids will damage the oxygenator.
4. Replace all parts in step 2.

Maintenance

Cleaning the Oxygenator

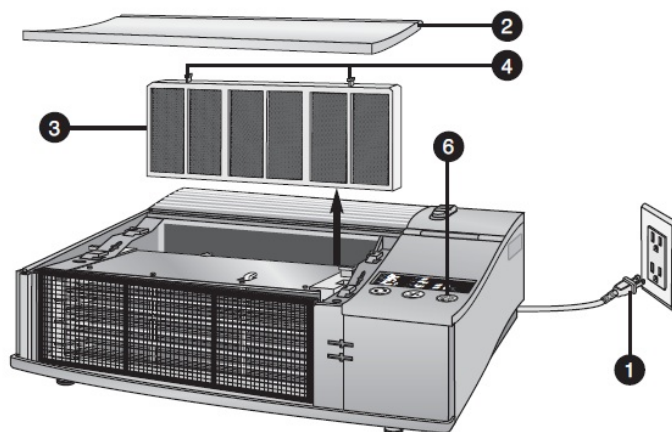

1. Unplug the air purifier.
2. Remove the top cover by sliding it forward and lifting it off.
3. Pull the odor absorber straight up and out of the cabinet.
4. Replace with a new odor absorber. The handles on the odor absorber should point up. Do not force the odor absorber into the slot.
5. Replace the top cover, sliding it back to lock it into place.
6. Reset the “Check Odor Absorber” timer by holding down the Night Light button until the “Check Odor Absorber” light blinks three times.

Troubleshooting

Service problems that appear to be major can often be solved easily. You can be your own troubleshooter by reviewing this guide. All other servicing should be done by an Oreck-authorized service center.

Problem	Check	What to do
Unit does not turn on.	<ul style="list-style-type: none"> • Power Cord • Power Button • Front Grill • Top Cover 	<ul style="list-style-type: none"> • Plug in the power cord. • Set power button for desired blower speed. • Reinsert front grill, sliding right until it locks into place. • Top cover should be replaced and slid back to lock.
“Check Collector Cell” has turned red.	<ul style="list-style-type: none"> • Truman Cell™ 	<ul style="list-style-type: none"> • Wash Truman Cell™. Make sure it is thoroughly clean and dry before reinstalling. • Hold down the Air Revitalizer button until the light blinks three times to reset the timer after cleaning.

“Check Collector Cell” light is flashing red.	<ul style="list-style-type: none"> • Truman Cell™ 	<ul style="list-style-type: none"> • Truman Cell™ may need cleaning. Clean Truman Cell™. • Truman Cell™ may not be completely dry. Allow it to air dry longer. • Truman Cell™ may be damaged. Contact Oreck for service.
Unit does not remove pollutants.	<ul style="list-style-type: none"> • Truman Cell™ 	<ul style="list-style-type: none"> • Wash Truman Cell™. Make sure it is thoroughly clean and dry before reinstalling.
Unit sparks, crackles and pops.	<ul style="list-style-type: none"> • Truman Cell™ 	<ul style="list-style-type: none"> • Sparking or popping noise (arcing) can occur when dust particles build up in the Truman Cell™. Gently wipe the cell wires with a dry cotton swab, or clean the entire cell with Assail-a-Cell or soapy water. • If excessive arcing continues after proper cleaning, the cell may be damaged or wet. If damaged contact Oreck for service.
“Check Odor Absorber” light has turned red.	<ul style="list-style-type: none"> • Odor Absorber 	<ul style="list-style-type: none"> • Hold down the Night Light button until the light blinks three times to reset the Check Odor Absorber timer after replacing. • Replace odor absorber if desired. • If the odor absorber is not replaced, remove old odor absorber to turn off “Check Odor Absorber” light.
Does not remove odor.	<ul style="list-style-type: none"> • Odor Absorber 	<ul style="list-style-type: none"> • Vacuum odor absorber with a soft brush attachment if dirty. Do not use any liquids to clean the odor absorber. • Replace odor absorber if desired.
Unit still does not operate properly.	<ul style="list-style-type: none"> • Check all the above points. 	<ul style="list-style-type: none"> • Contact Oreck for service.

Warranty

ORECK MANUFACTURING COMPANY: (Oreck Manufacturing Company gives you the following limited warranty for this product only if it was originally purchased for residential use, not resale, from Oreck or an Oreck Authorized Retail Dealer.) Oreck will repair or replace, free of charge, to the original purchaser, any part that is found to be defective in material or workmanship within three (3) years of the date of purchase and a lifetime warranty on the Truman Cell™ for all residential models. NOTE: If the unit is used commercially, a one (1) year overall warranty applies. This limited warranty does not cover the replacement of expendable or consumable parts such as filters, cartridges, and other parts subject to normal wear unless they are defective in material or workmanship.

This limited warranty does not apply to any part subjected to accident, abuse, commercial use, alteration, misuse, damage caused by act of God, the use of volt-ages other than on the data plate of this product or the service of this product by other than Oreck or a participating Factory Authorized Service Center.

Oreck does not authorize any person or representative to assume or grant any other warranty obligation with the sale of this product.

Oreck's limited warranty is valid only if you retain the proof of purchase from Oreck or an Oreck Authorized Retail

Dealer for this product. If you purchase this product from any other source, your purchase is "AS IS," which means Oreck grants you no warranty, and that you, not Oreck, assume the entire risk of the quality and performance of this product, including the entire cost of any necessary servicing or repairs of any defects.

Oreck's liability for damages to you for any costs whatsoever arising out of this statement of the limited warranty shall be limited to the amount paid for this product at the time of original purchase, and Oreck shall not be liable for any direct, indirect, consequential or incidental damages arising out of the use or inability to use this product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD, AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THIS PERIOD. Some states do not allow limitations on the duration of implied warranties, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Download PDF: [Oreck XL AIRP Series Air Purifier User Manual](#)