



PETKIT P9903 Purobot Ultra With Camera User Manual

[Home](#) » [PETKIT](#) » PETKIT P9903 Purobot Ultra With Camera User Manual 

Contents

- [1 PETKIT P9903 Purobot Ultra With Camera](#)
- [2 PACKAGE LIST](#)
- [3 PRODUCT DESCRIPTION](#)
- [4 Component Description](#)
- [5 PRODUCT INSTALLATION](#)
- [6 PRODUCT USAGE](#)
- [7 Description of Displayed Functions](#)
- [8 CLEANING AND MAINTENANCE](#)
- [9 VIDEO GUIDE](#)
- [10 BASIC SPECIFICATIONS](#)
- [11 MESSAGE TO OUR VALUED CUSTOMERS](#)
- [12 SAFETY INSTRUCTIONS](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)
- [14 Related Posts](#)

PETKIT™

PETKIT P9903 Purobot Ultra With Camera




USER MANUAL

PETKIT PUROBOT ULTRA WITH CAMERA SELF-CLEANING CAT LITTER BOX

Please read the user manual carefully before using the product and keep it properly.

PACKAGE LIST


Before installation and use, please take out the accessory box from the trunk and check if all accessories are complete according to the following list:

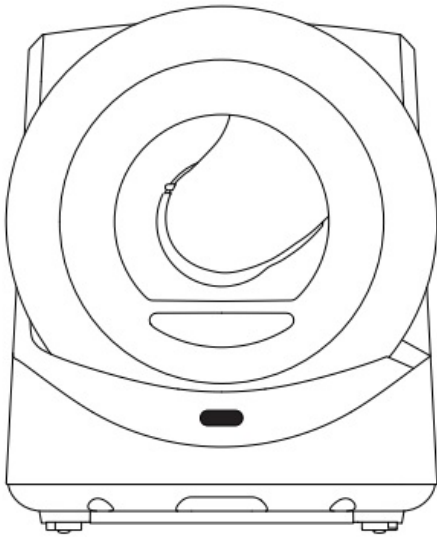


Main Unit



AI Camera

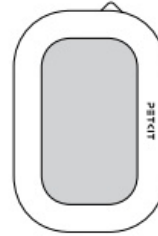

Refill Ring

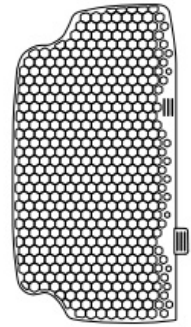

Litter Sifter P99032
(Exclusive for
mineral cat litter)



Power Adapter



**Pet Odor
Eliminator N60**



Screw * 4





Hex Key



User Manual

PRODUCT DESCRIPTION

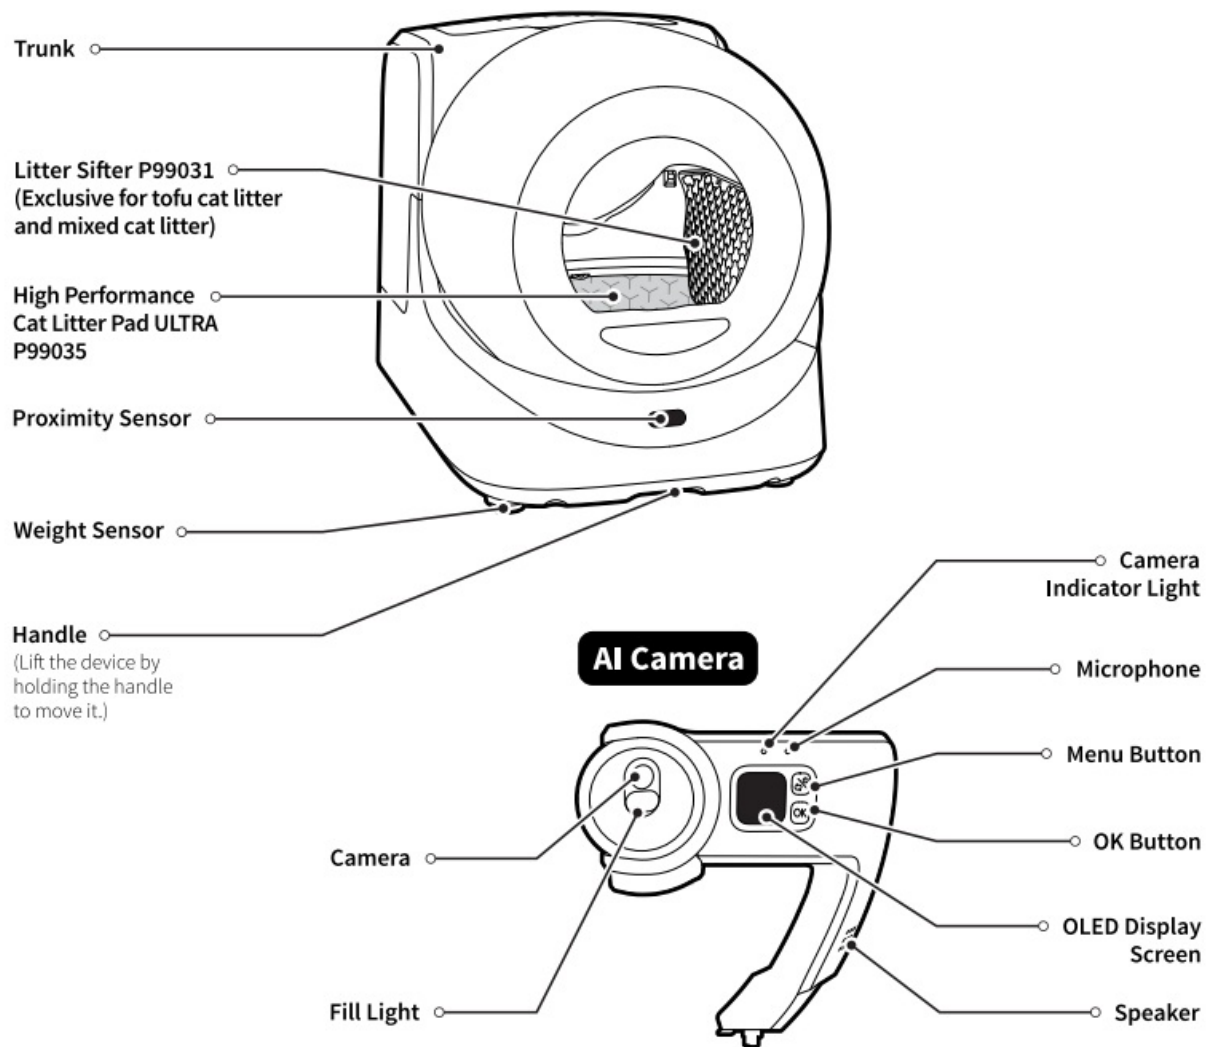

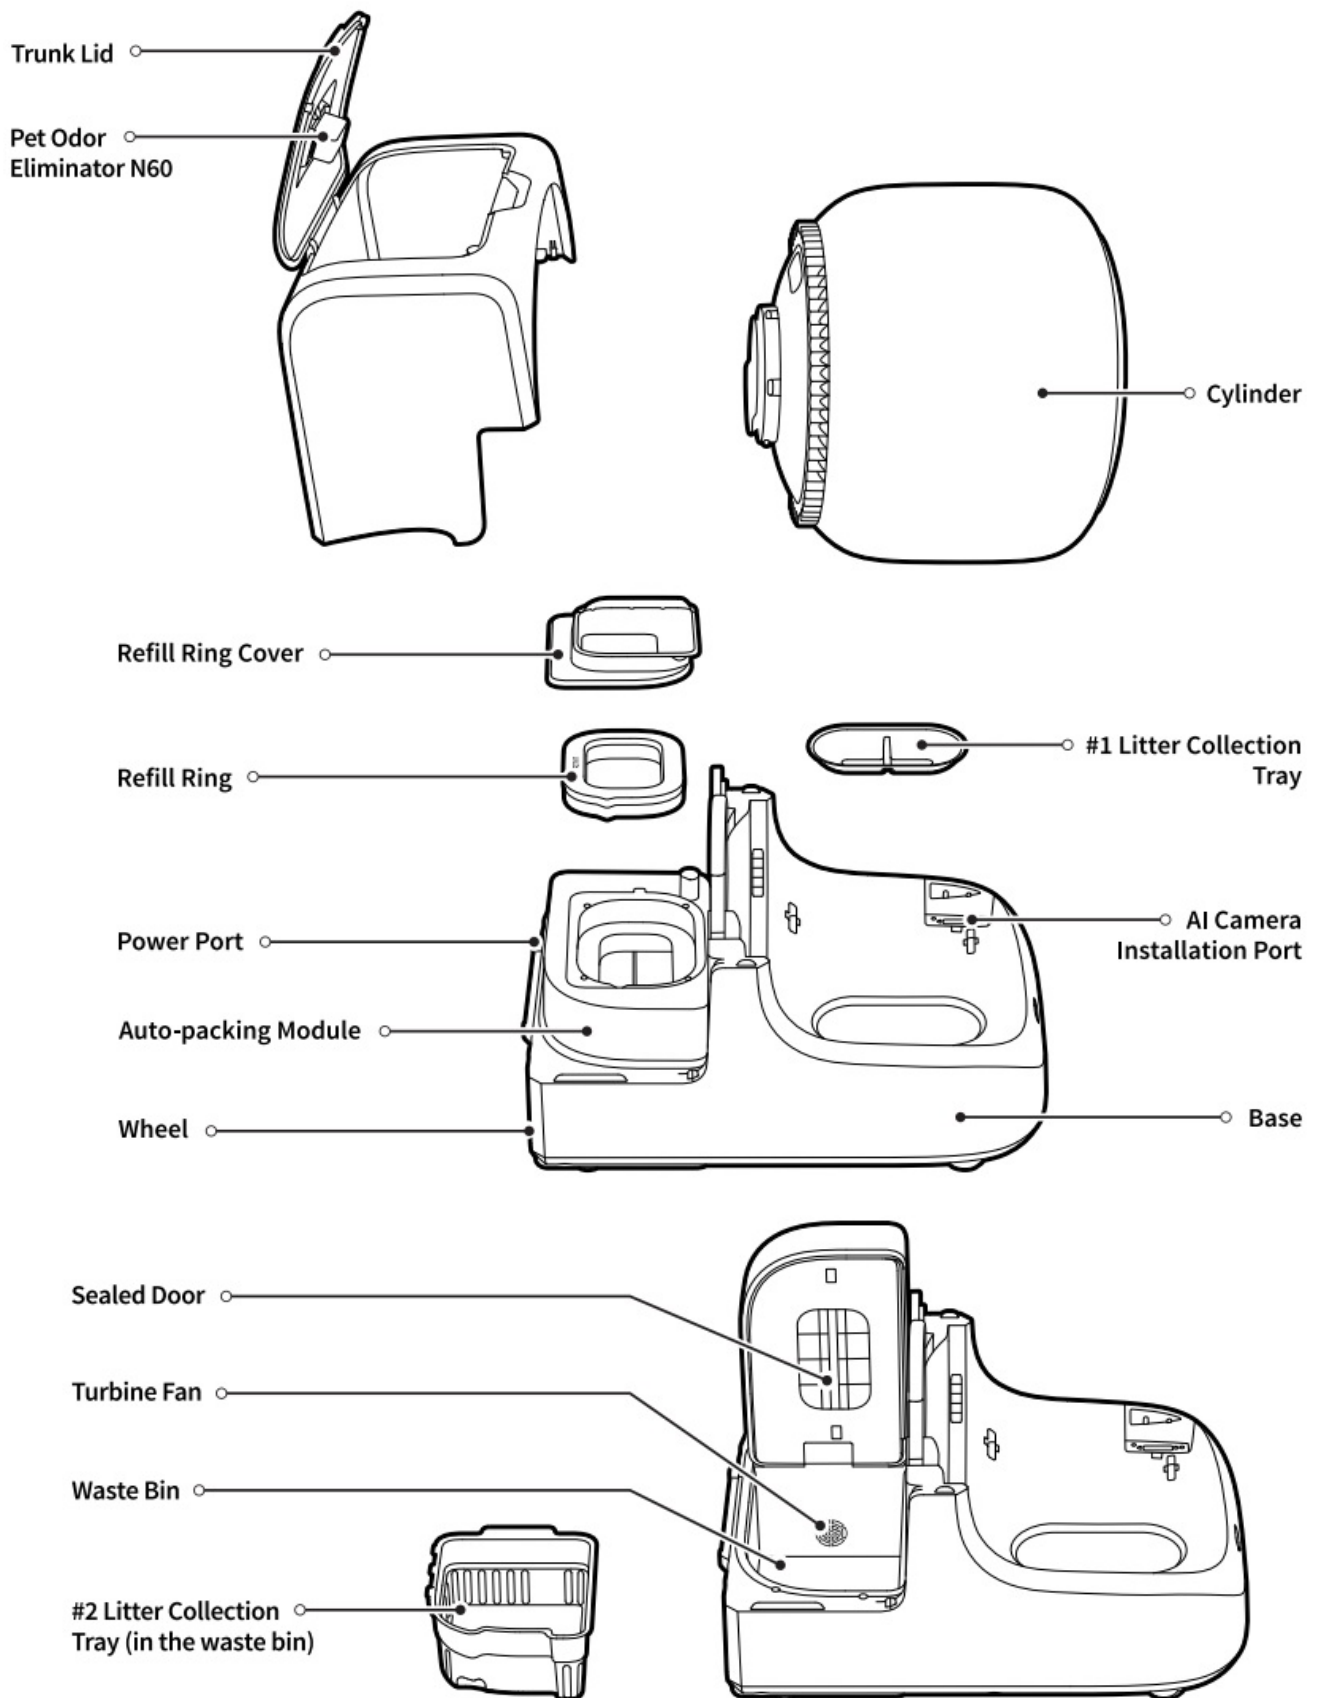

Component Description



Components	Functional Description
AI Camera	Real-time monitoring of pet's toilet status
Auto-packing Module	Auto packing and refilling trash bag
Litter Sifter P99031	Effectively filter clumps without jamming or missing; suitable for tofu cat litter and mixed cat litter
Litter Sifter P99032	Effectively filter clumps; suitable for fine granular cat litter such as mineral cat litter, bentonite
High Performance Cat Litter Pad ULTRA P99035	Non-stick, scratch-resistant, waterproof, and easy to clean
Pet Odor Eliminator N60*	Long-lasting fragrance and non-irritating

- High Performance Cat Litter Pad ULTRA P99035* is hereinafter referred to as litter pad.
- Pet Odor Eliminator N60 is hereinafter referred to as N60.


PRODUCT INSTALLATION

Install AI Camera


1. Unlock the latch to remove the cylinder.

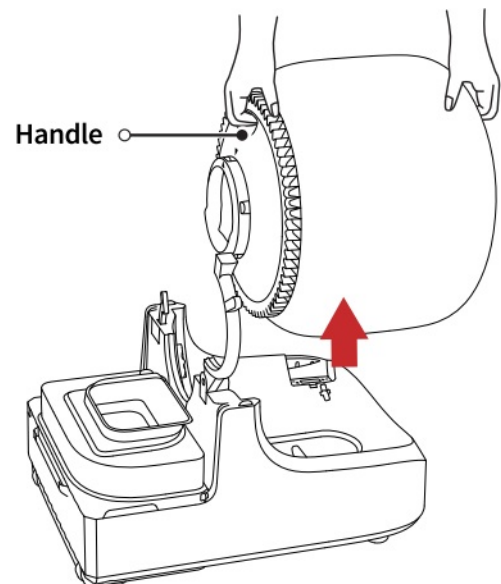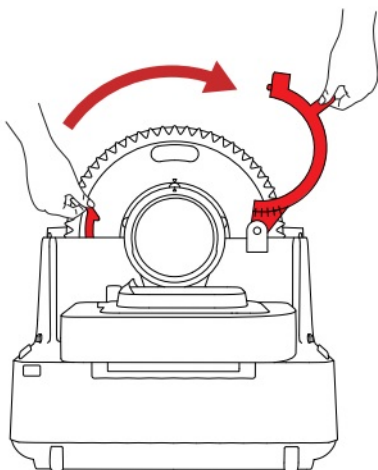

2. Insert the AI camera into the installation port. (as shown in the figure)
3. Install the "1" and "2" screws first (in a horizontal direction), then install the "3" and "4" screws (in a vertical direction), and tighten them with the he key.

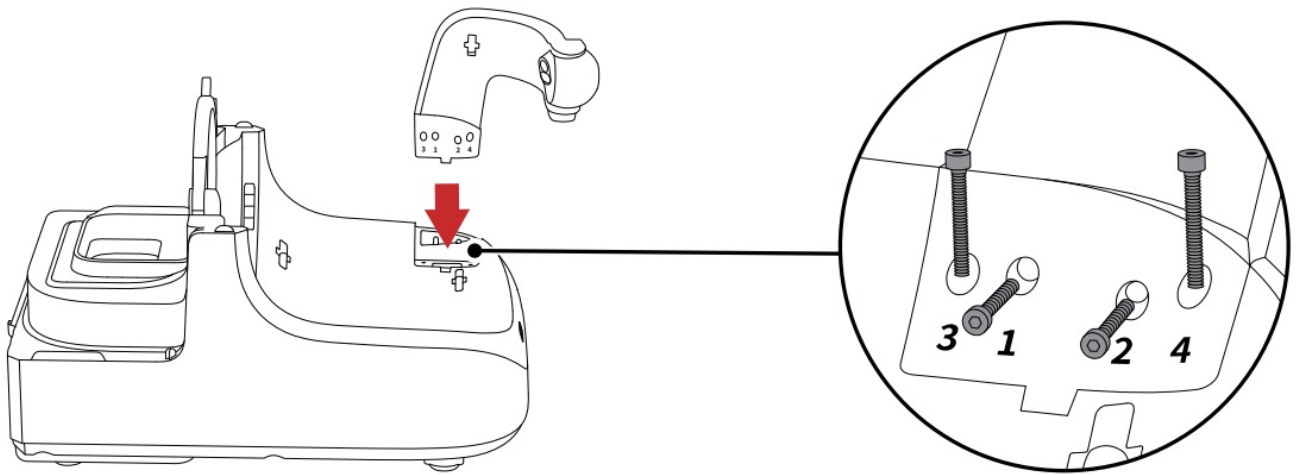


4. Place the cylinder on the base and lock the latch, ensuring the latch is fastened. * Handle it gently and do not bump the AI camera.


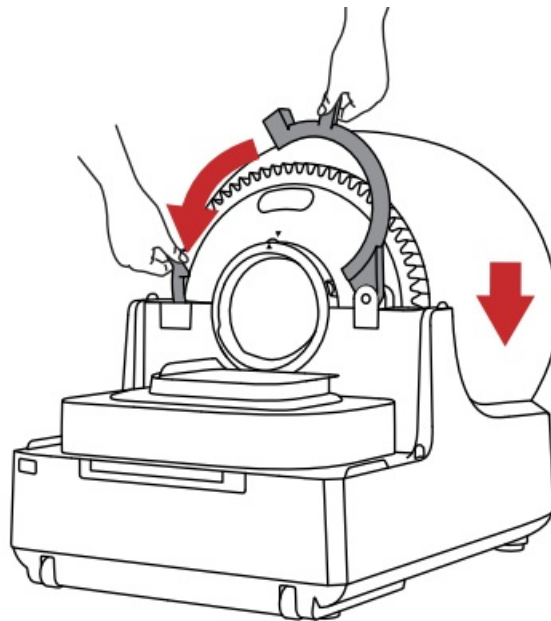


Install Refill Ring and N60

1. Remove the refill ring cover, put the refill ring in, and put the cover back.


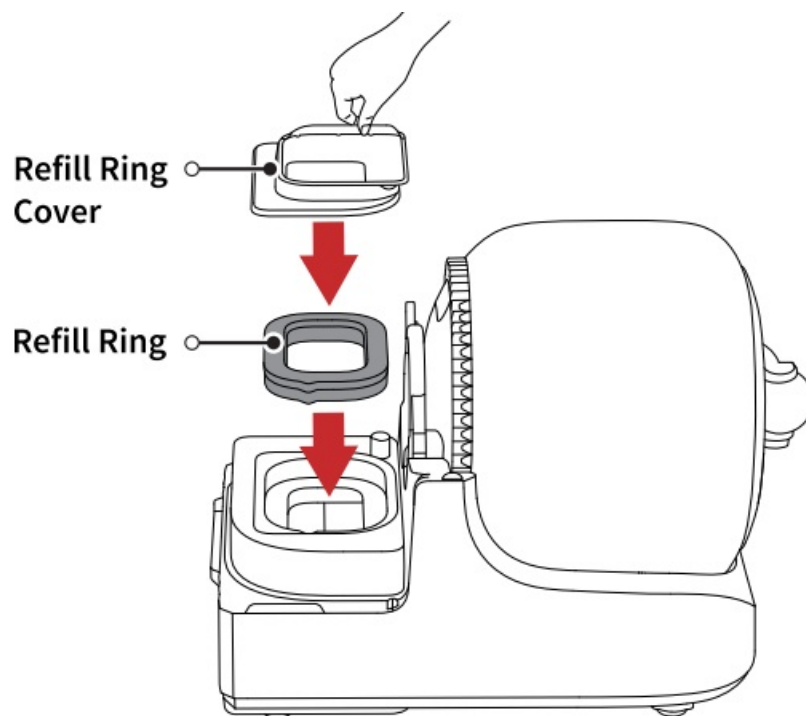


2. Install the trunk, ensuring that it attaches to the magnets on both sides.
3. Open the lid, install the N60, and close the lid. * Do not place anything on the lid to avoid risks of damaging the device.

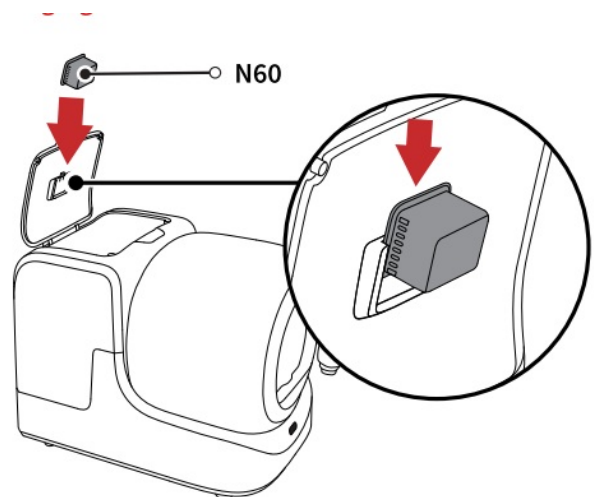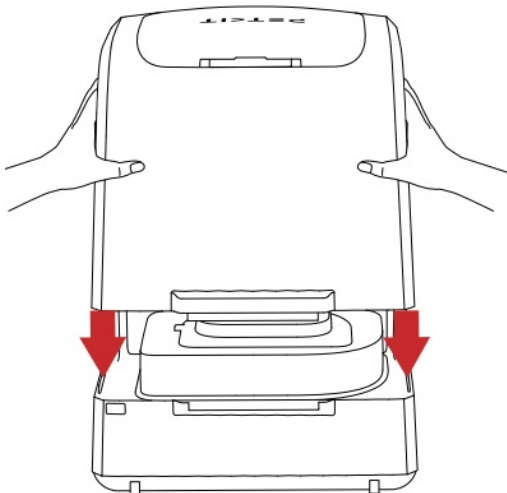


Connect to Power Supply


1. Connect the device to the power supply, and the cylinder will reset automatically.
2. The camera will rotate.
- 3.

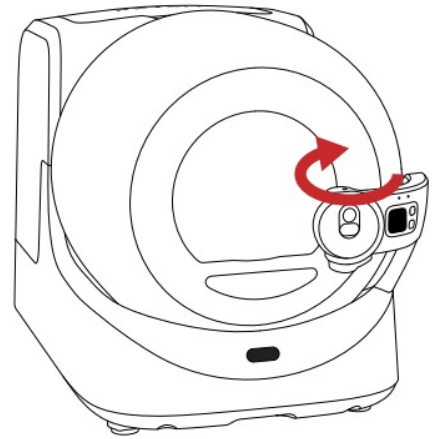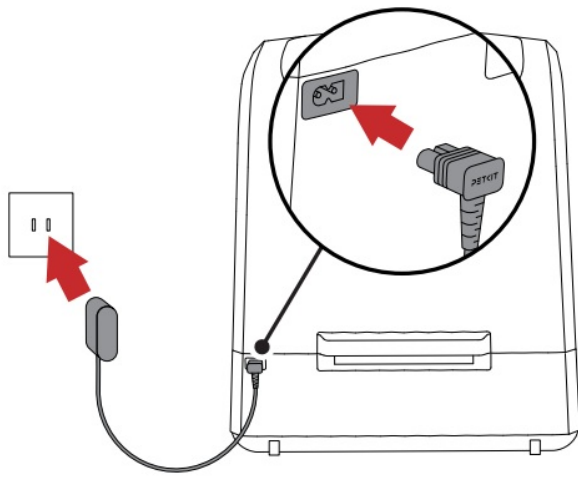


Select the litter sifter according to the cat litter. Please use the litter sifter P99032 if it is mineral cat litter. Pour in the cat litter (Do not exceed the MAX line), and level the cat litter in the App. (See 5.1 and 5.2 for the replacement method of litter sifter)

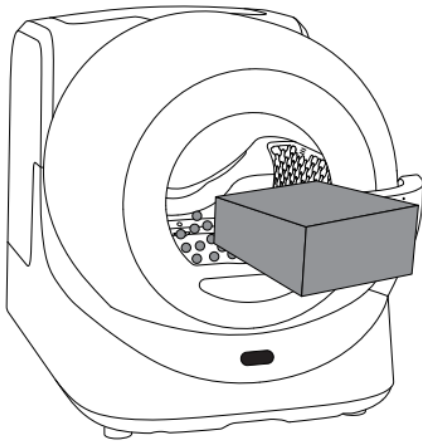

Litter Sifter P99031
(Exclusive for tofu cat
litter and mixed cat litter)

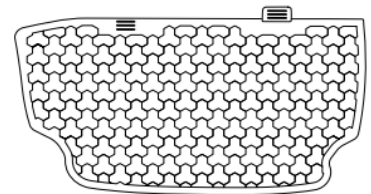

Litter Sifter P99032
(Exclusive for
mineral cat litter)

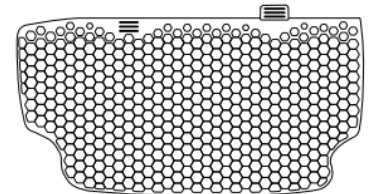


PRODUCT USAGE


Device Binding

* Please bind the app before using the device for the first time. The device can be used only after successful binding.

1. Download the PETKIT App from the App Store or Google Play. Or scan the QR code to download.
2. Open the App, click “+” to add the device, and bind the device according to the guide.

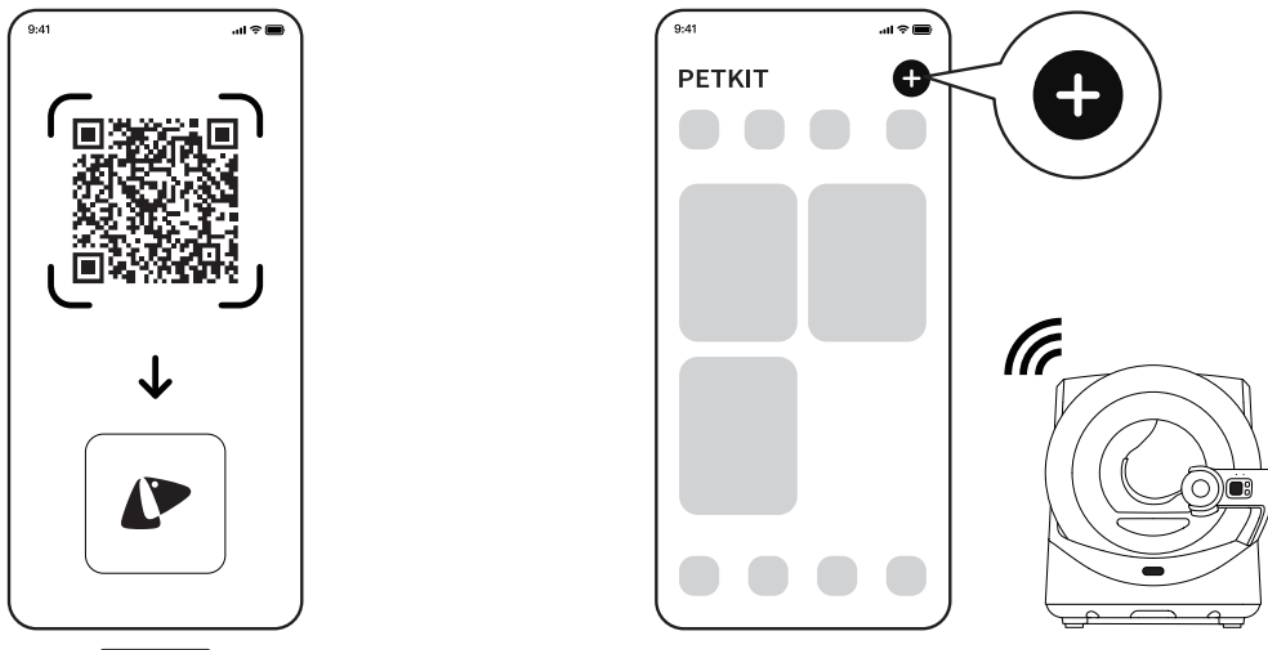



3. When the screen displays the following icon, the binding is successful.

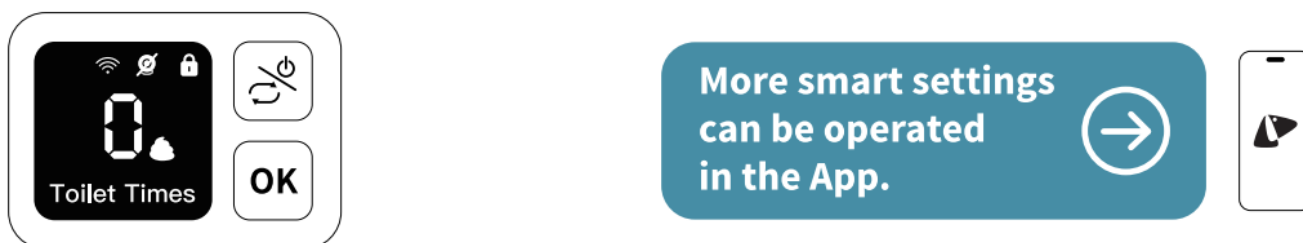

Auto Packing



The auto-packing function needs to be operated on the control panel. Do not leave the device during the packing process. * When packing and refilling, the device will emit a sound, which is normal and does not indicate any issues with the product's quality.

1. Press to select "Packing" and press and the device will start packing. , then double press ok as prompted on the screen, and the device will start packing.
- 2.

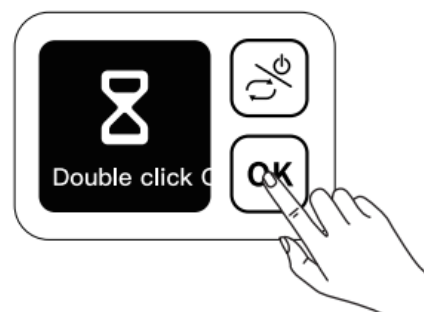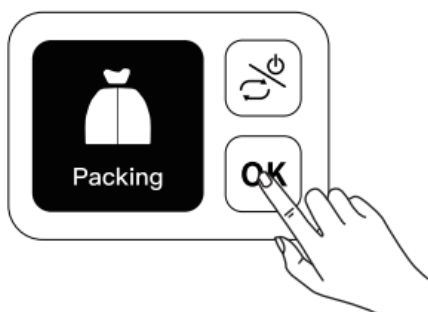

After the screen shows the following icon and the device plays the prompt voice, open the lid, take out the packed trash bag, and close the lid.

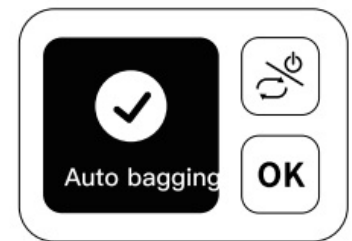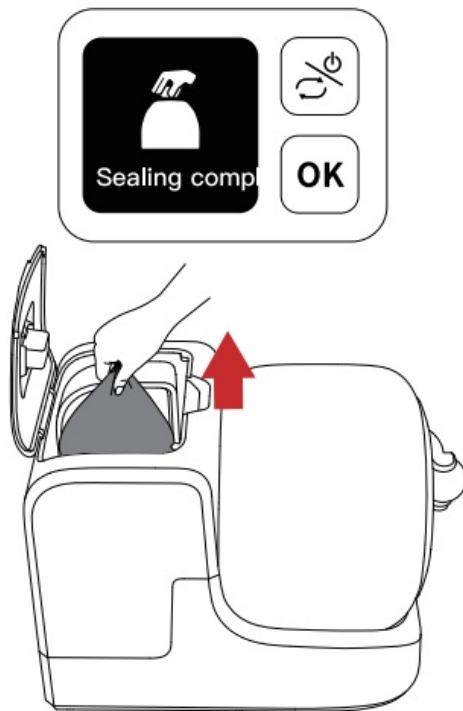

3. After removing the packing trash bag, please double press according to the screen and voice prompts to start auto refilling.





Empty Cat Litter


Do not leave the device during the emptying process.

After emptying the cat litter in the cylinder, you can replace the new cat litter or clean the device.

1. Press  de cylinder. to select "Empty cat litter", then press , and the device will automatically empty cat litter in the

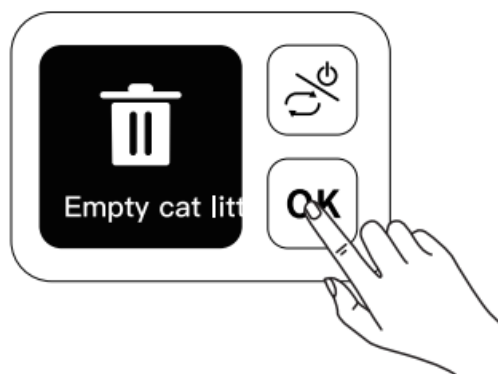

2. If the waste bin is full during the emptying process, the device will stop emptying and start auto packing. After packing, please take out the packed trash bag, and then double press  to start auto refilling.

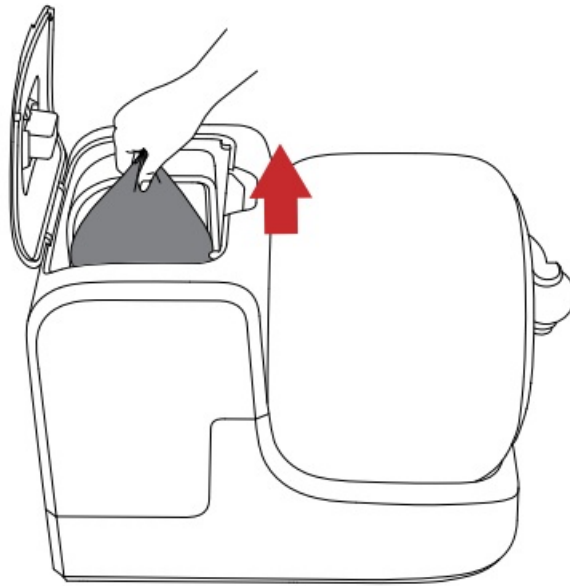


AI Camera Privacy Protection



More privacy settings about AI camera can be viewed in the e-manual.


Camera Indicator

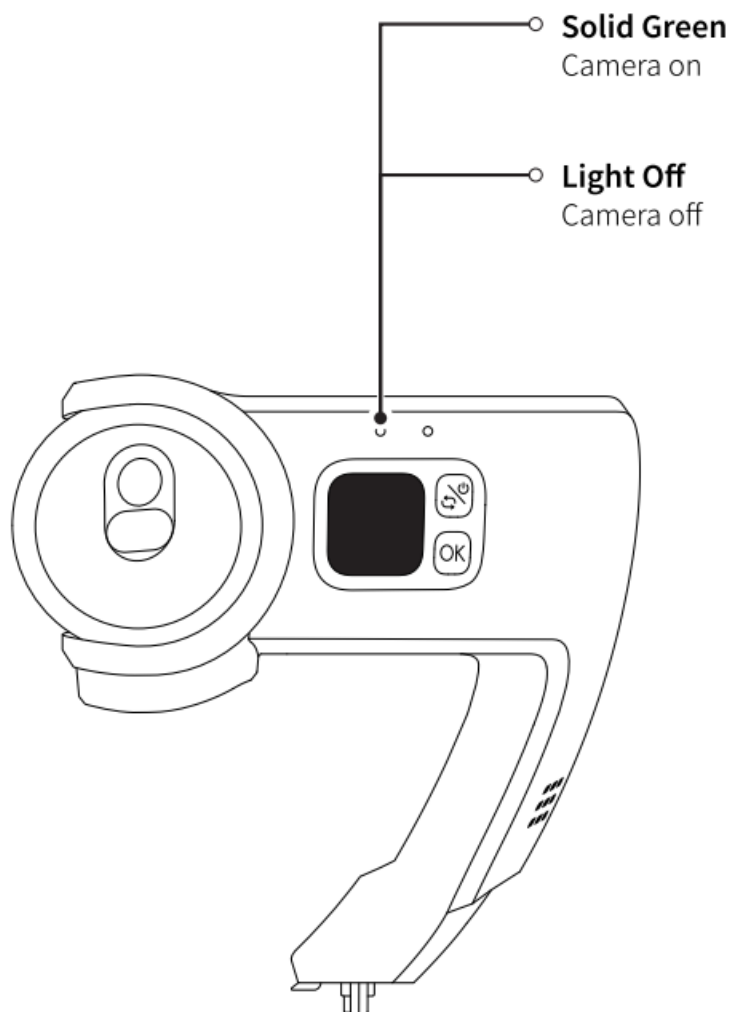Light Turn off the camera or set the working period of the camera in the PETKIT App.



Control Panel

Press  to switch functions and press  to execute the function.

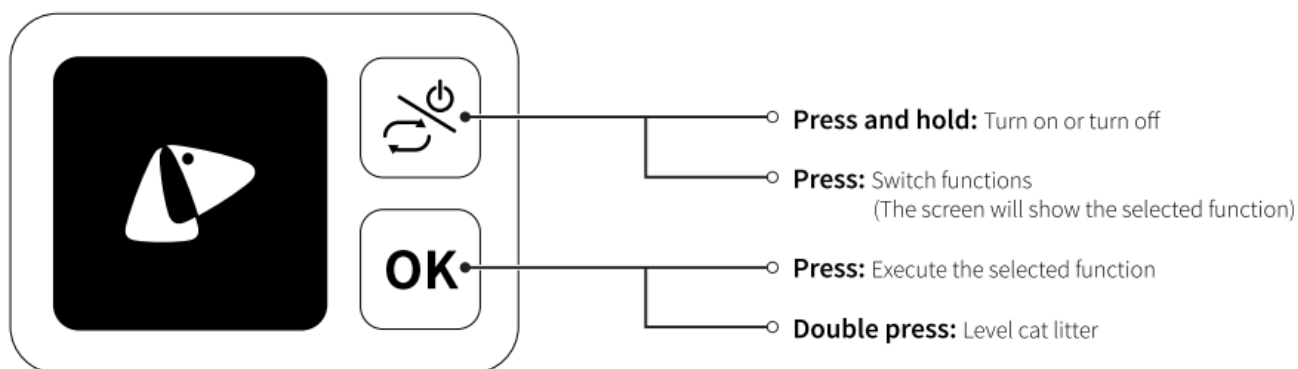

Description of Displayed Functions



Clean now

Start auto cleaning cat litter



Level cat litter

Level cat litter in the cylinder;
Use it after refilling cat litter



Packing

Automatically seal and pack the trash bag



Empty cat litter

Empty cat litter in the cylinder



Light on

Turn on the fill light in the camera



Configure network

Pair the device with the App;
Use it when binding the App



Open / Close sealed door


Open or close the sealed door of the
auto-packing module



Reset





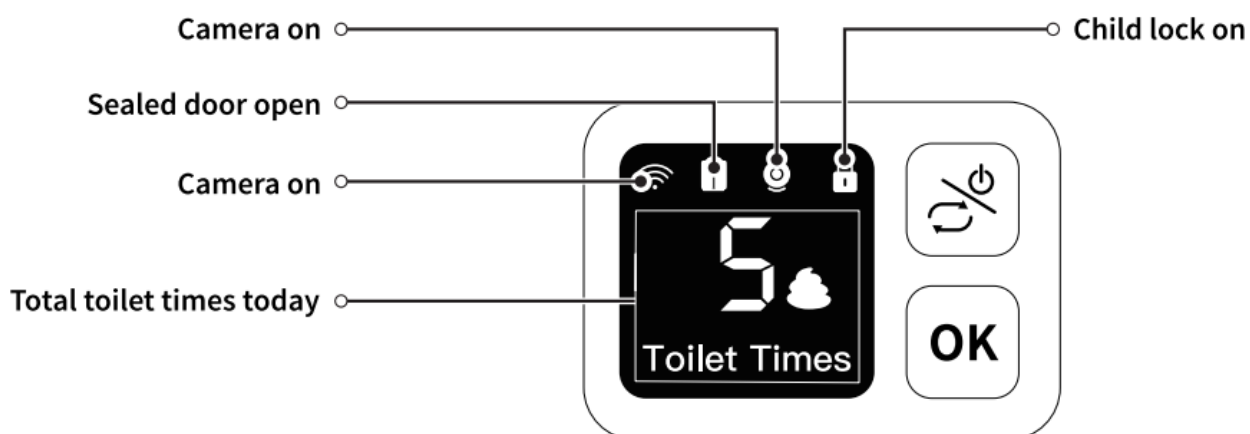

Reset the cylinder to its original position

Description of displayed status




Description of other prompts

There will be scrolling text at the bottom of the screen.

Prompts	Description	Prompts	Description
 Trash Bag runs out soon, please replace on time	The trash bag is running out. Please prepare a new refill ring.	 Out of Trash Bag, refill now	The trash bag runs out. Please replace a new refill ring.
 Insufficient cat litter, please add more	The cat litter is sufficient. Please refill in time.	 The back cover of the device is not installed	The trunk is not installed. Please check.
 The cat has approached the detection zone	The cat approaches or enters the litter box during operation. (The device will automatically pause and alert, and it will resume after the pet leaves.)	 Device failure	Device failure, please check the details in the App.

CLEANING AND MAINTENANCE

For the cat's health, it is suggested to regularly clean and replace these parts. Do not rinse or soak these parts: base, AI camera, and packing module; otherwise, it may lead to device damage. Only wipe them.

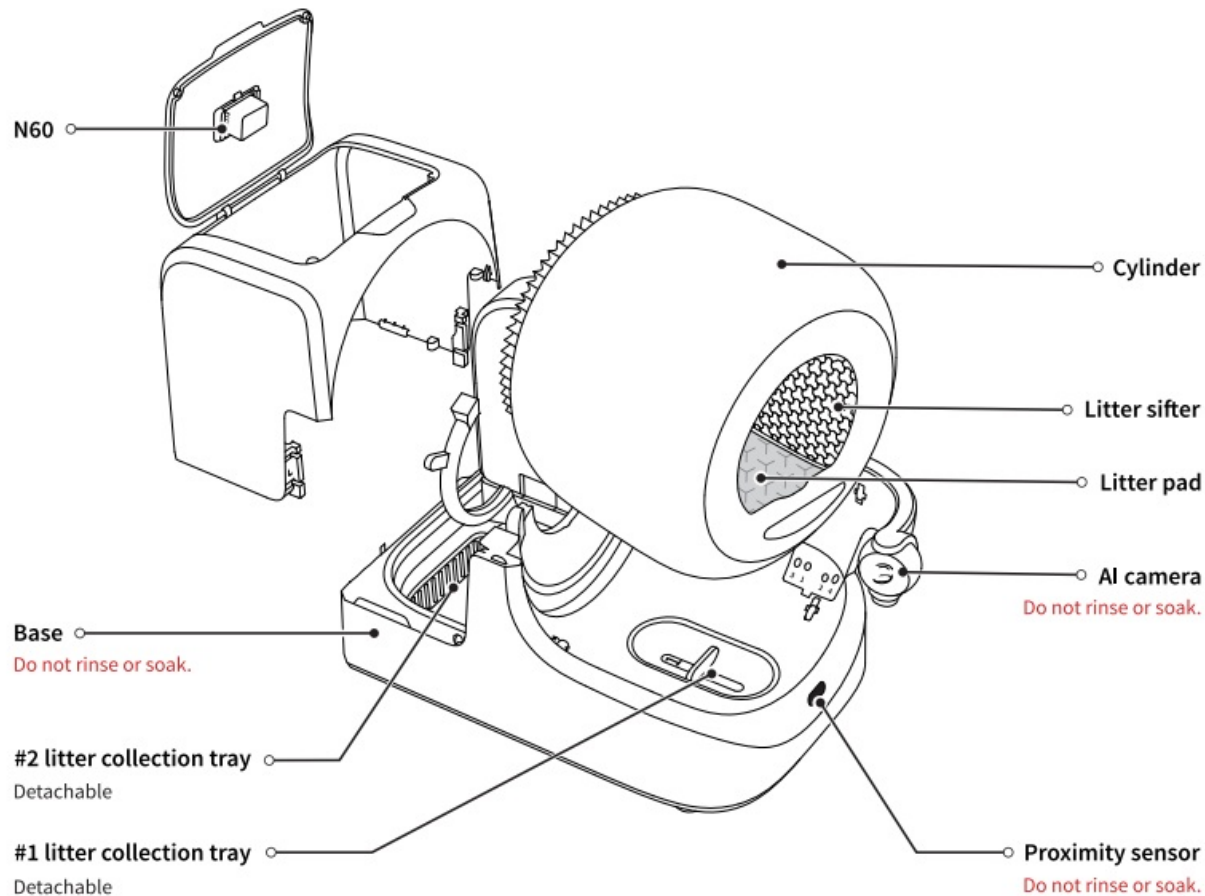



Detach Cylinder and Clean It

Before removing the cylinder, please empty the cat litter in it.

Before disassembly, please turn off the device or unplug it.



1. Remove the trunk, unlock the latch, and remove the cylinder.

2.

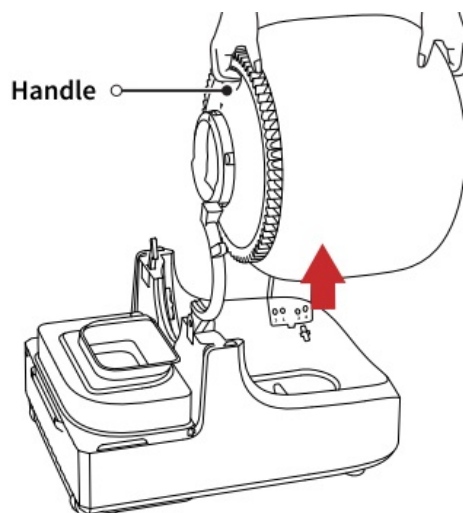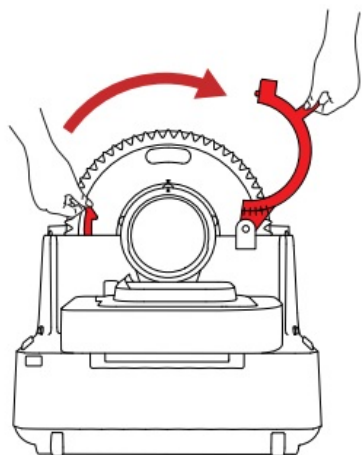




Pinch the handle of the litter sifter to pull it out.

3. Pinch the handle of the litter pad to pull it out.

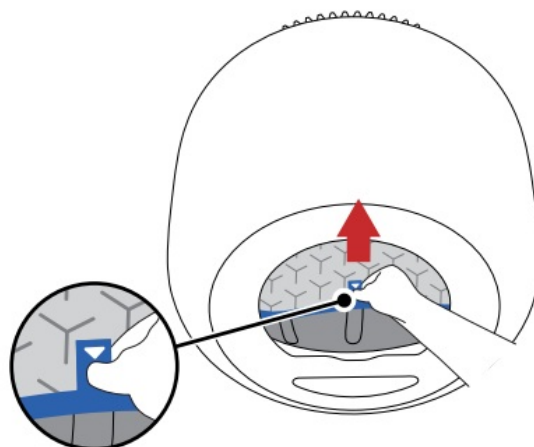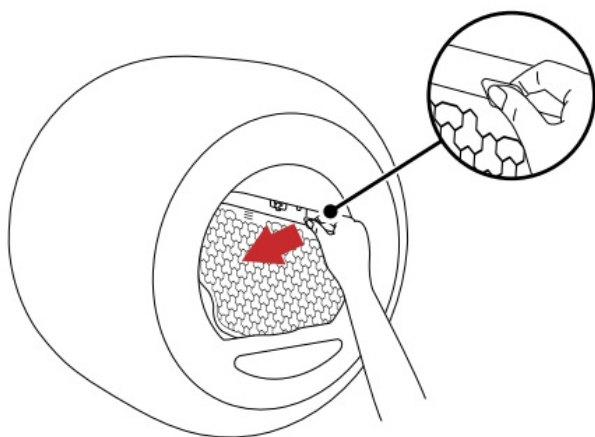

4. Clean the cylinder and the litter sifter with a brush, and rinse them. Wipe the litter pad with a soft cloth.


* Do not brush the litter pad violently to avoid damaging the coating. Do not clean with alcohol, disinfectant, bleach, non-neutral detergent, etc.

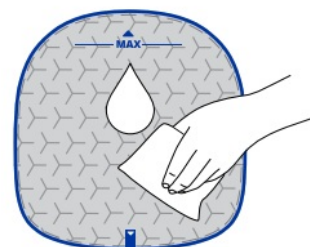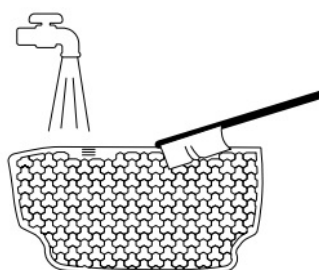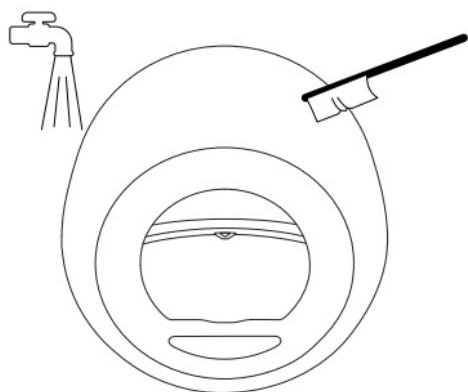


Install Components

Install components only when they are completely dry.


1. Place the cylinder against the wall.

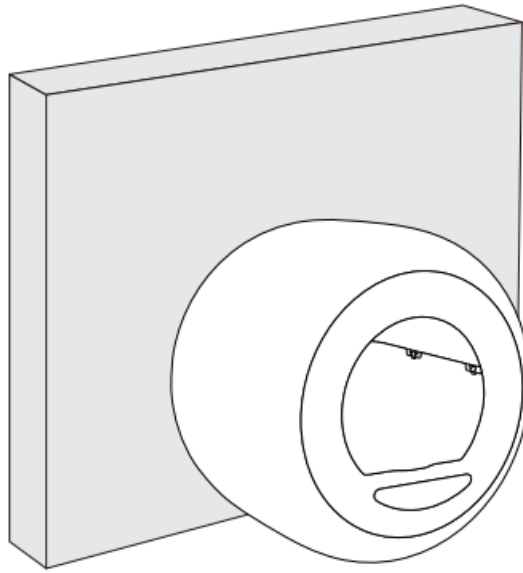


2. Grasp the litter pad, insert the top of it into the groove (arrows need to be aligned), and then insert the bottom of it into the groove (arrows need to be aligned).

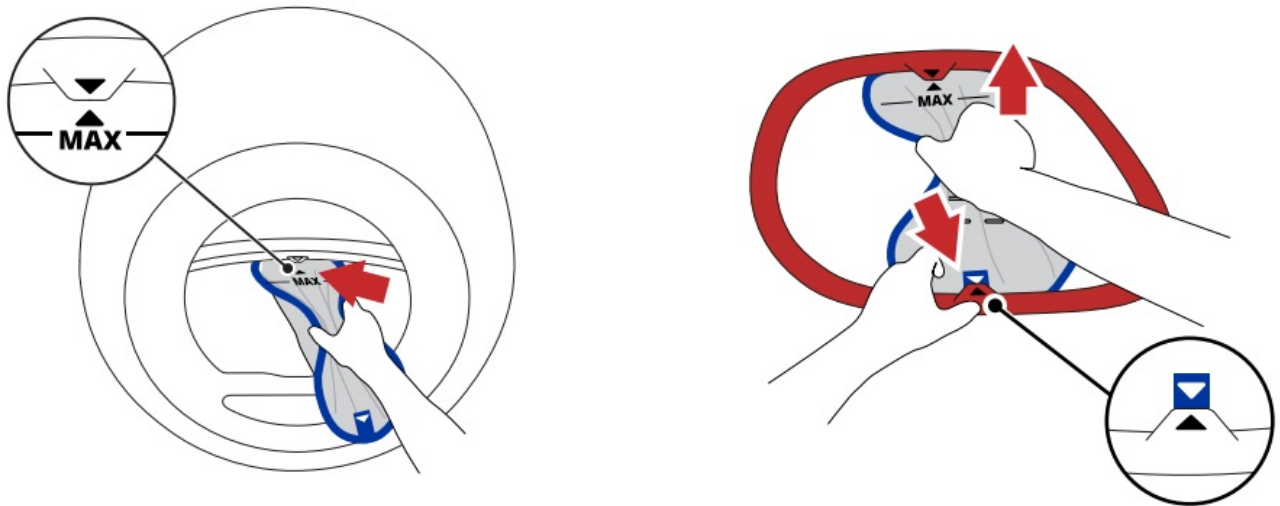



3. Gently press and release the pad, and the two sides of it will be naturally stuck into the groove.
 * Before use, ensure that the blue edge is fully stuck into the groove and that the arrows on both ends are aligned with the indicated direction.

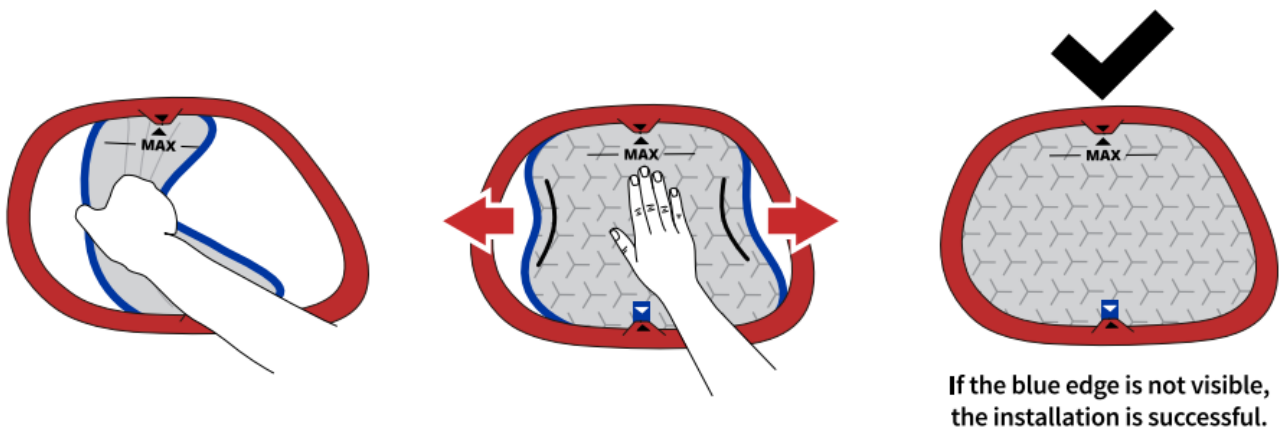

4. Pinch the handle of the litter sifter, first insert one buckle into point A, then insert the other buckle into point B.
 * Please check: If the little sifter can swing back and forth, the installation is successful.

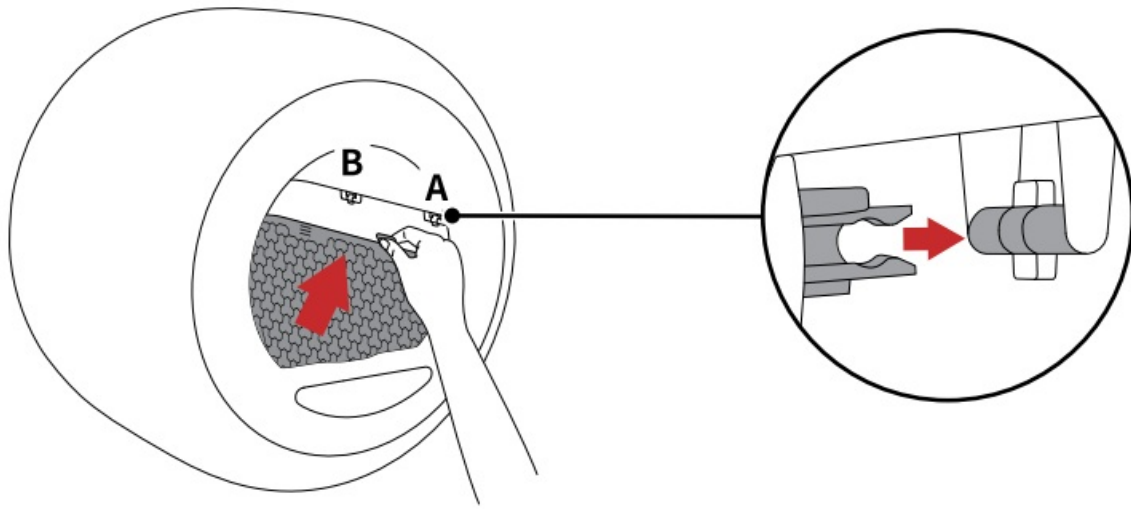


5. Put the cylinder on the base, lock the latch, and make sure the latch is fastened.
6. Install the trunk back, and the installation is finished.

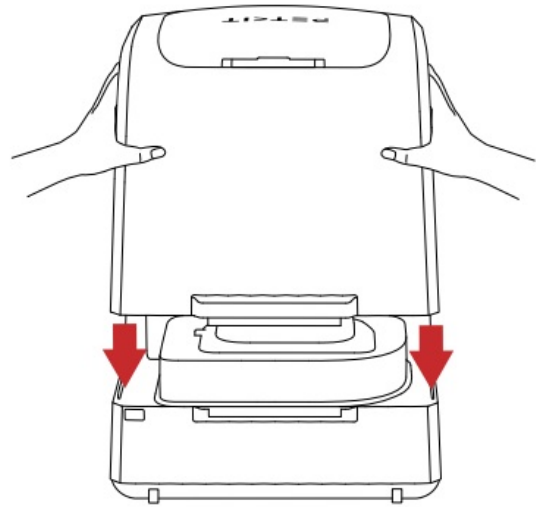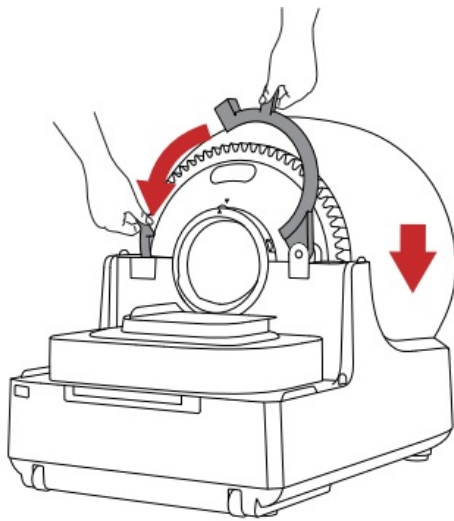


Maintenance of Other Components

1. Wipe these components with a soft cloth: AI camera, base, and proximity sensor.
- 2.

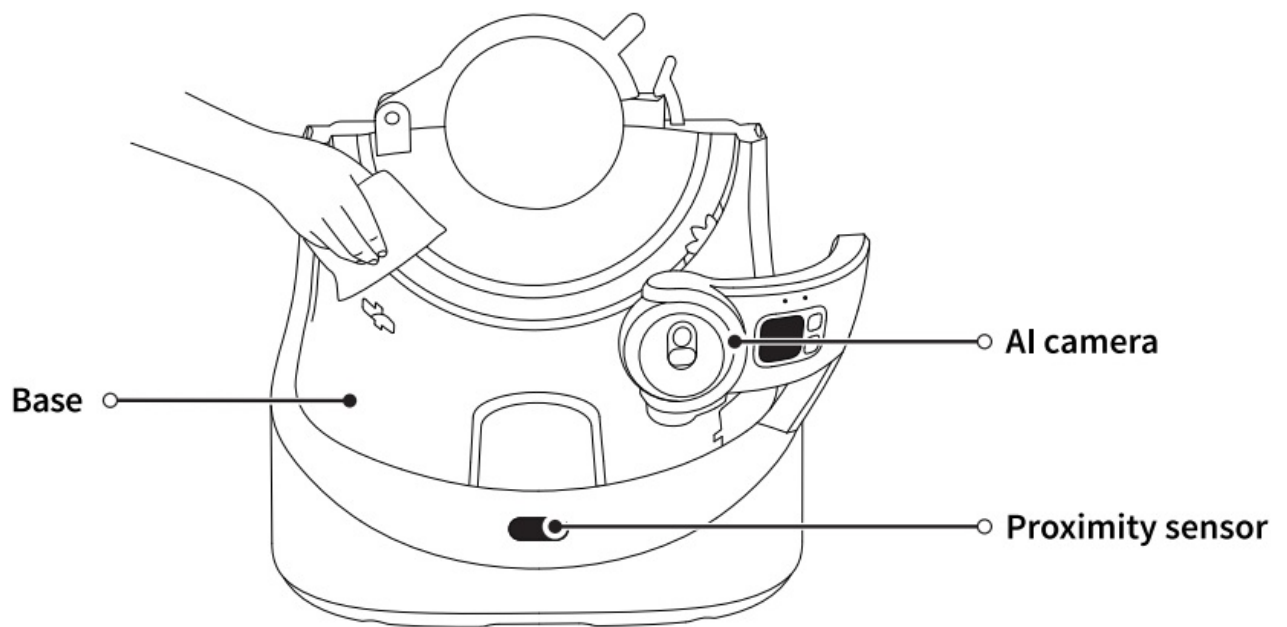

If there is some litter in the #1 and #2 litter collection trays, take them out, dump the litter, and put them back.

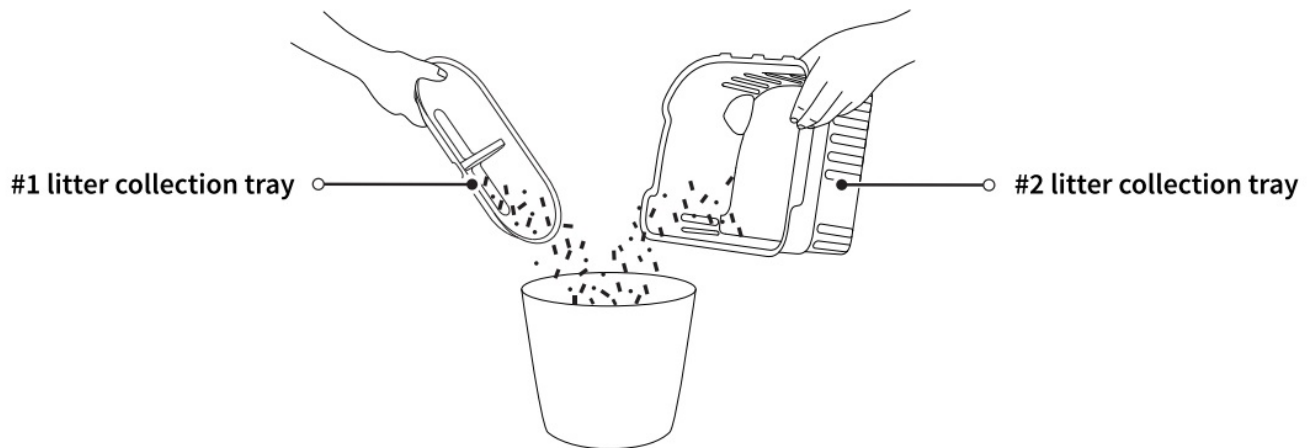

Components	When to Clean	How to Clean	When to Replace	How to Detach	Caution
AI Camera	Clean it when the lens is not clear.	Wipe with a soft cloth.	/	/	Do not rinse or soak.
Base	Clean it after removing the cylinder.	Wipe with a wet tissue.	/	/	Do not rinse or soak.
Cylinder	Clean it when the inner surface is dirty.	Clean with a brush.	/	See 5.1-①	/
Litter Sifter	Clean it when your pet has loose stools.	Clean with a brush.	Replace it when it is damaged or broken.	See 5.1-②	Avoid squeezing or exposure to sunlight.
Litter Pad	Clean it when it's dirty.	Wipe with a soft cloth. Do not scrub.	Replace it when it sticks to cat litter or is broken.	See 5.1-③	Do not clean with alcohol, disinfectant, bleach, non-neutral detergent, etc.
N60	/	/	About two months.	Slide upward.	/

VIDEO GUIDE

1. Video of Installation and Usage
2. Video of Cleaning and Maintenance



Scan to watch



Scan to watch

BASIC SPECIFICATIONS

Product Name	PETKIT PUROBOT ULTRA WITH CAMERA SELF-CLEANING CAT LITTER BOX	Weight	about 14.6 kg (32.18 lbs)
Product Model	P9903	Rated Input	12V \equiv 4A
Materials	ABS, PP, TPE, Silicone	Connection	Wi-Fi
Dimensions	532 x 818 x 612 mm (20.94 x 32.20 x 24.09 in)	Range of Application	Cats older than 6 months

MESSAGE TO OUR VALUED CUSTOMERS

- Thank you for choosing the PETKIT PUROBOT ULTRA WITH CAMERA SELF-CLEANING CAT LITTER BOX.
- Please read the user manual carefully before installing and using the product. Any installation or usage indicates that you have read and accepted the safety guide below.
- PETKIT is not responsible for or legally liable for any accidents or injuries resulting from the improper use of the product.
- PETKIT reserves the right to interpretation and revision.

SAFETY INSTRUCTIONS

- Failure to follow the safety guides below may result in product malfunction or other unforeseen losses.
- Please install and use the device according to the user manual.
- Kittens younger than 6 months old are prohibited from using this device. Cats weighing less than 1.5 kg are prohibited from using this device.
- Do not drag the AI camera.
- Do not scratch the lens with sharp objects.
- Do not place the device in a high-temperature or high-humidity environment.
- The device is for indoor use only. Avoid direct sunlight exposure and keep it away from open flames.
- Although the device is powered by a low voltage, electric leakage may occur if the pet bites the power cord. Please keep your pets from biting the power cord.
- Please use only the original adapter to avoid device damage or safety hazards.
- Place the device on a firm, level surface, and avoid touching the wall.
- Do not tilt the device to avoid safety hazards.
- Do not rinse or soak the bottom of the device.
- There are weight sensors at the bottom of the device. Please handle it gently.
- Unplug it if the device is not used for an extended period.
- Children should use this device under the supervision and guidance of adults.
- Repairs should only be performed with professionals' guidance to avoid accidental damage.
- Do not place anything on top of the device or press the top of it.
- Before leaving for an extended period, please ensure that there is sufficient cat litter in the litter box and enough space in the waste bin.
- If you have any problems with the product, please contact our customer service for assistance.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

FCC warning: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The antenna(s) used for this equipment must be installed and used in a separation distance of at least 20 cm from all persons.

IC warning

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Disposal


The European directive 2012 / 19 / CE on Waste Electrical and Electronic Equipment(WEEE), requires that old household electrical appliances must not be disposed in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

PETKIT Network Technology(Shanghai) Co.,Ltd.

www.petkit.com

support@petkit.com

Documents / Resources

	PETKIT P9903 Purobot Ultra With Camera [pdf] User Manual P9903, P9903 Purobot Ultra With Camera, Purobot Ultra With Camera, Ultra With Camera, Camera
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.