

Pipishell PIBTC05 Square Toilet Seat Instruction Manual

Contents

1 INSTRUCTION MANUAL

1.1 PIBTC05

1.1.1 Toilet Seat

1.1.2 Note

1.1.3 Maintenance

1.1.3.1 Cautions

1.1.4 Tools Needed (Not Included)

1.1.5 Contents

2 Documents / Resources

2.1 References


3 Related Posts



INSTRUCTION MANUAL

Rev01(B)

PIBTC05

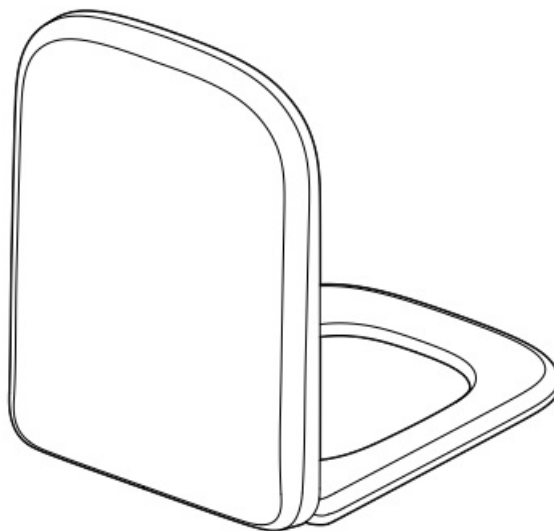

Toilet Seat



(US/CA) 1-800-556-9829

(UK) 44-808-196-3885



support@pipishell.net

supportjp@pipishell.net (JP)



www.pipishellav.com



AMZLAB GmbH
Laubenhof 23, 45326 Essen

info@amz-lab.de



THEMIS AR support Ltd.
85 Great Portland St, London, United Kingdom.


info@amz-lab.de

Manufacturer: BESTQI INNOVATION (HONG KONG) TECHNOLOGY CO., LIMITED
Address: FLAT/RM 185 G/F HANG WAI IND CENTRE 6 KIN TAI ST TUEN MUN NT

Note

- Please read the instructions carefully to get to know the product. Follow the instructions to install the toilet seat correctly.
- Please keep the instructions after reading. If you have any questions or concerns, please contact our technical support line at 1-800-556-9829 (US/CA) / 44-808-196-3885 (UK) or customer service at support@pipishell.net.
- Please do not open the toilet seat lid over 105° before you fix the seat on the ceramic toilet bowl.

Maintenance

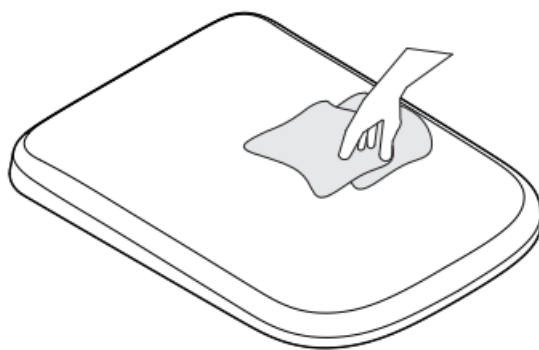


- Wipe the toilet seat with a soft wet cloth.
- Clean the toilet seat using neutral cleaner, and dry it with a clean cloth.

Cautions



To extend the lifespan of the soft-close toilet seat, do not force the seat down to close it.

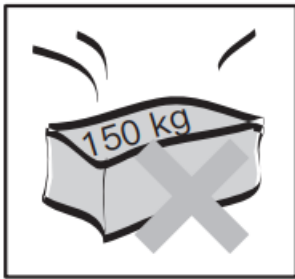

Maximum load 150 kg. Do not exceed the maximum weight capacity.




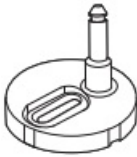





Do not expose the toilet seat directly to sunlight for long periods. Avoid any direct strong light or high temperature.


Tools Needed (Not Included)



Contents


 01 x 1		
		
A x 2	B x 2	C x 2
		
D x 2	E x 2	F x 2

[1A]

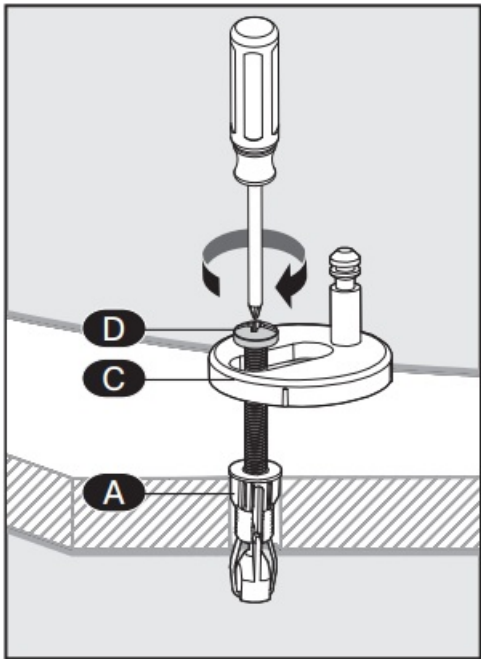


Option A: Insert the expansion anchors [A] into the toilet, then thread the bolts [D] through hinges [C] and into the anchors. Do not fully tighten the bolts.

[1B]

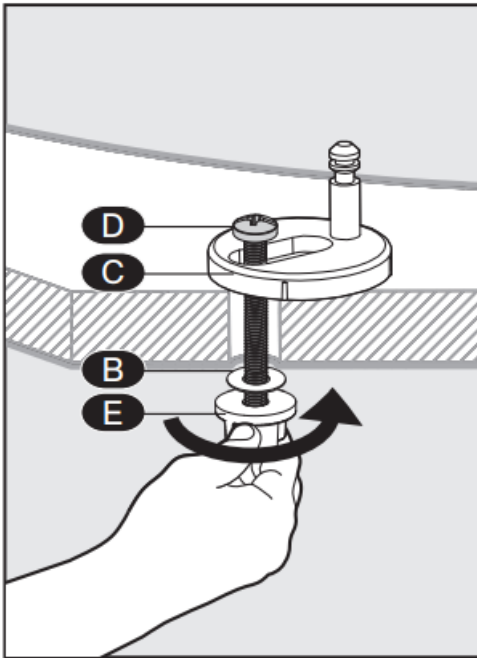


Option B: Thread the bolts [D] through hinges [C], washers [B], and the toilet, then attach the washers [B] and nuts [E] to the other ends of the bolts. Do not fully tighten the bolts.

[2]

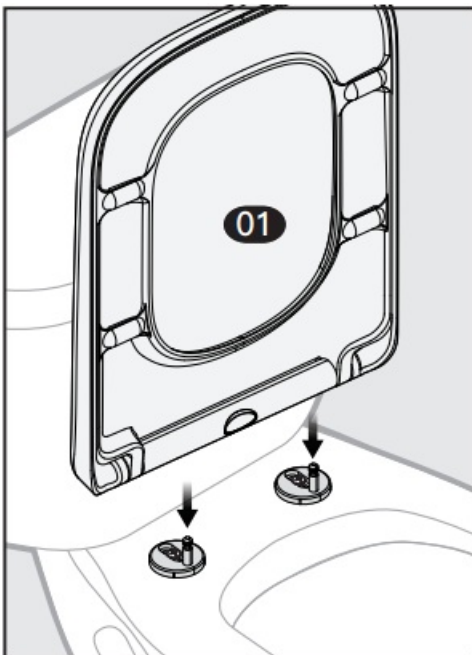


Align the holes on the toilet seat to both hinges, and push the toilet seat into the hinges.

[3]

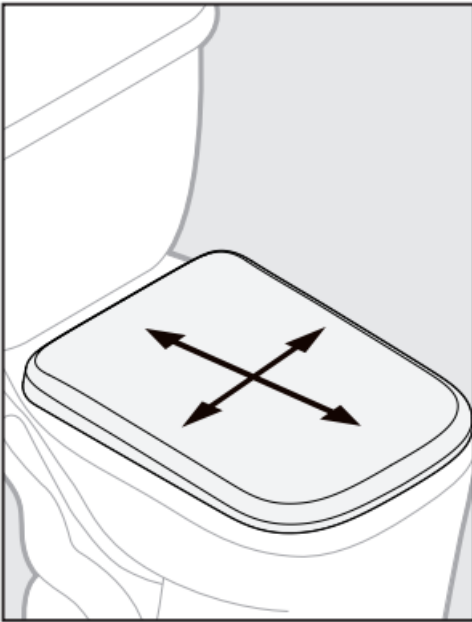


Adjust the toilet seat until it is centered.

[4]

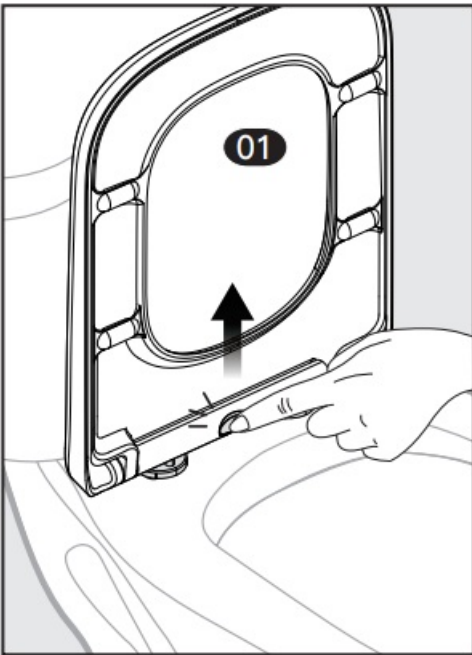


Press the quick release button to remove the toilet seat from the hinges.

[5A]

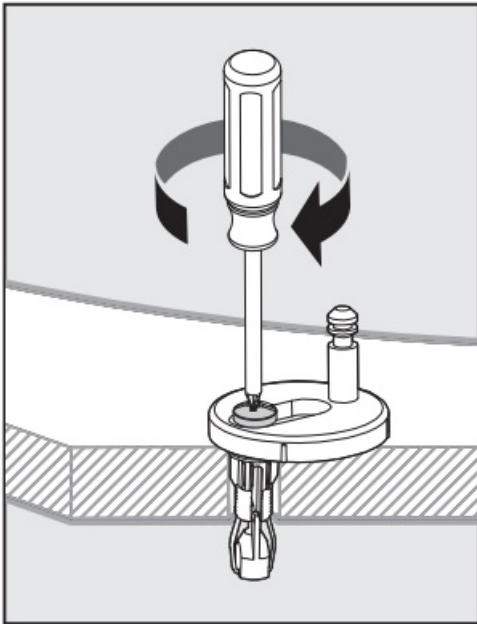


Option A: Fully tighten the bolts [D]

[5B]

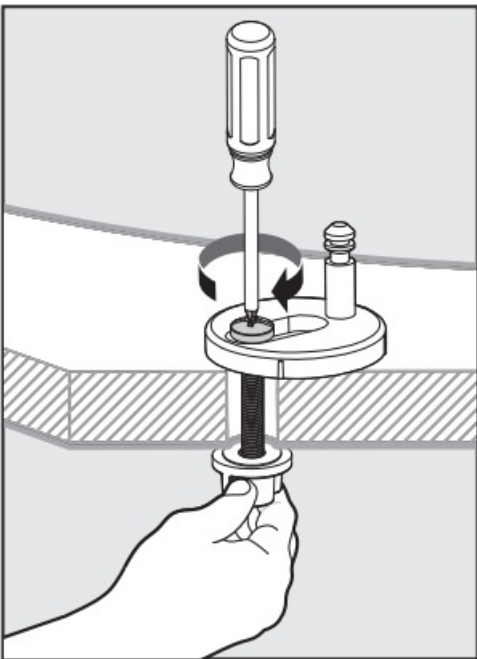

Option B: Tighten the bolts [D] further while holding the nuts [E] underneath.


[6]

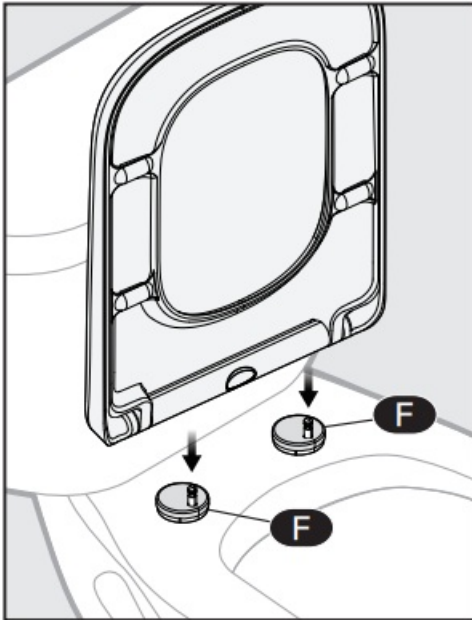

Add the hinge caps and reattach the toilet seat.

860-00069-01 Rev01

Documents / Resources

	<p>Pipishell PIBTC05 Square Toilet Seat [pdf] Instruction Manual PIBTC05 Square Toilet Seat, PIBTC05, Square Toilet Seat, Toilet Seat, Seat</p>
---	---

References

- [Web Server's Default Page](#)
- [Pipishell Heavy Duty Full Motion TV Wall Mounts Make Your Life Better](#)
- [User Manual](#)