



[Home](#) » [PIVOT](#) » **Pivot PA-KA22A Bluetooth Keyboard with Trackpad User Guide** 

Contents [[hide](#)]

- [1 Pivot PA-KA22A Bluetooth Keyboard with Trackpad](#)
- [2 Product Description](#)
- [3 iPad Compatibility](#)
- [4 Identifying PA-KA22A Parts](#)
- [5 Installing PA-KA22A](#)
- [6 PA-KA22A Bluetooth Pairing](#)
- [7 Indicator Light Description](#)
- [8 Fn Key Descriptions](#)
- [9 Use Configurations](#)
- [10 PA-KA22A Articulation](#)
- [11 Incorrect Use](#)
- [12 Trackpad Function](#)
- [13 Product Specs](#)
- [14 Sleep Mode Function](#)
- [15 Safety Precautions](#)
- [16 FAQs](#)
- [17 Documents / Resources](#)
 - [17.1 References](#)



Pivot PA-KA22A Bluetooth Keyboard with Trackpad



Specifications

- Product Name: PIVOT Bluetooth Keyboard with Trackpad
- Model: PA-KA22A
- For Use With PIVOT A22A Case
- Compatibility: Multiple generations of iPad
- Connection: Bluetooth
- Charging Port: USB-C

Product Description

The PA-KA22A Bluetooth Keyboard is designed to provide seamless compatibility between the iPad and the ser, combining functionality and aesthetics. It ensures maximum performance when properly connected to the PIVOT A22A case.

Identifying PA-KA22A Parts

- Camera Turret
- iPad Shell
- USB-C Charging Port
- PA-KA22A Keyboard
- Hinge Power Switch

- Trackpad
- Removable Silicone Keyboard Cover

Installation Instructions

STEP 1:

Remove the iPad from the PIVOT A22A case by pressing around the edges to release the iPad in the specified order.

STEP 2:

Place the PA-KA22A keyboard into the PIVOT A22A case body.

STEP 3:

- Align the PA-KA22A USB-C charging port properly with the PIVOT A22A case body and press the keyboard into place.

STEP 4:

Open the iPad shell in preparation for installing the iPad.

STEP 5:

Align the iPad camera turret with the corresponding camera lens window in the iPad shell.

STEP 6:

Press the corners of the iPad into the iPad shell, starting with the camera and button, until it snaps securely into place within the case's perimeter seal.


Bluetooth Pairing Instructions

1. Locate the power switch on the bottom right of the keyboard and set it to the On position.
2. Press the Fn + C keys to start the Bluetooth pairing connection.
3. In your iPad settings, ensure Bluetooth is on. The PA-KA22A pairing information will appear as PIVOT-KB001 in the Bluetooth list. Select it to pair and connect.

PIVOT BLUETOOTH KEYBOARD WITH TRACKPAD

Read Before Use

Your PA-KA22A Bluetooth Keyboard is designed to provide seamless compatibility between the iPad and the user, while combining functionality and aesthetics. Following the recommendations in this guide ensures maximum performance with proper case connection.

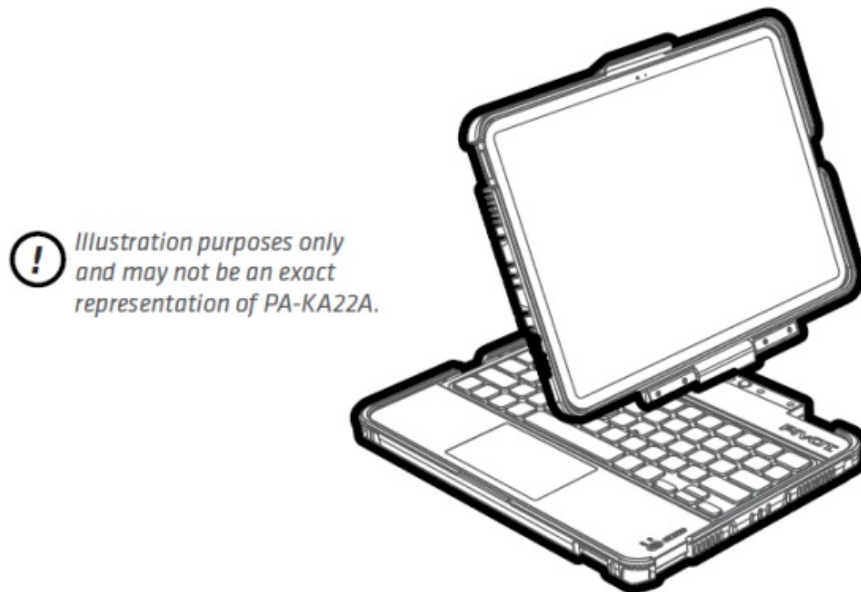

Product Description

- The PA-KA22A is a Bluetooth Keyboard solution for users who frequently use their iPad for data entry or document editing. The PA-KA22A is an accessory to be used in combination with iPads housed in the protective *PIVOT A22A case.
- The PA-KA22A enhances the convenience, functionality, and transportation of the iPad and keyboard by combining them into one easy-to-manage assembly.
- This versatile solution features a 360-degree hinge, which allows for a variety of usage configurations: laptop mode, tablet mode, and transit mode.
- The PA-KA22A is case-specific and only compatible with the PIVOT A22A case.
- PIVOT A22A case sold separately.

iPad Compatibility


The PA-KA22A is compatible with multiple generations of iPad. Before attempting to install your iPad, refer to the information below to confirm compatibility.

The PA-KA22A supports the following iPads:

- iPad (A16)
- iPad (10th gen.)
- Did You Know?


Similar to the PIVOT A22A case, not all PA-KA22A compatible devices have the same buttons, speakers, or camera placements. That's why the access openings in the PA-KA22A case are specifically designed to suit the varying features of all compatible iPad types.

Identifying PA-KA22A Parts

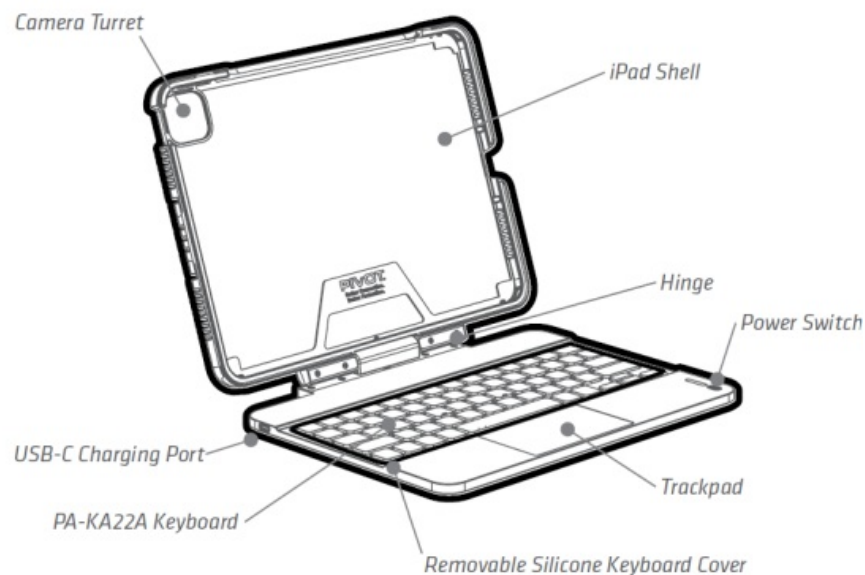


Installing PA-KA22A

- STEP 1: Remove the iPad from the PIVOT A22A case. Beginning with the bottom edge near the charging port, press firmly using your thumbs to disengage the case seal. Continue carefully pressing around the edges of the case to release the iPad in the order shown. Do not attempt to pry or force the iPad from the case.
 - A. Start at the bottom and move left.
 - B. Continue around the top edge.
 - C. Release the right edge to remove the iPad.

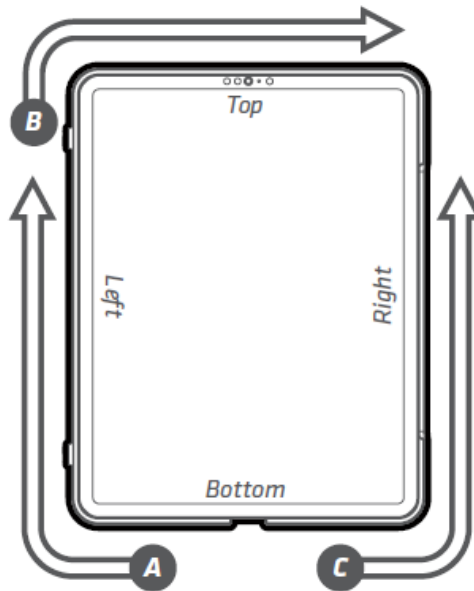

- STEP 2: Place the PA-KA22A keyboard into the PIVOT A22A case body.

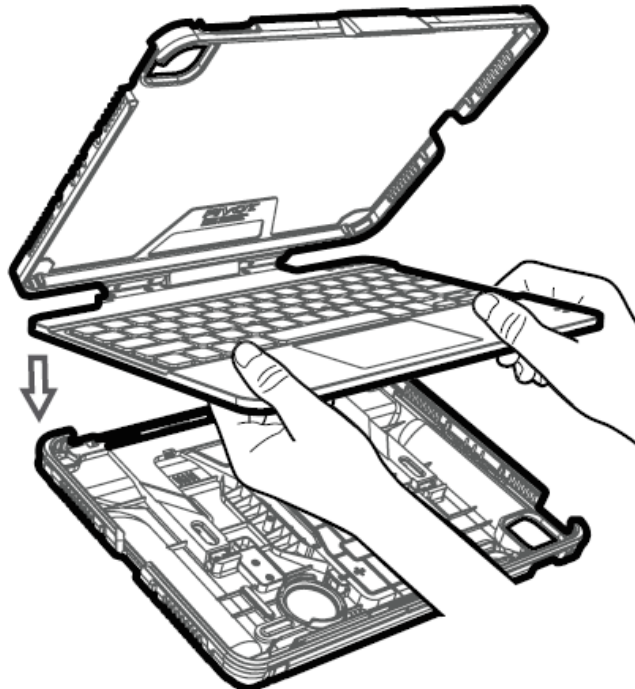


- STEP 3: With the PA-KA22A USB-C charging port aligned properly with the PIVOT A22A case body, press the keyboard into place within the case body.




- STEP 4: Open the iPad shell in preparation for installing the iPad.



- STEP 5: Align the iPad camera turret with the corresponding camera lens window in the iPad shell.

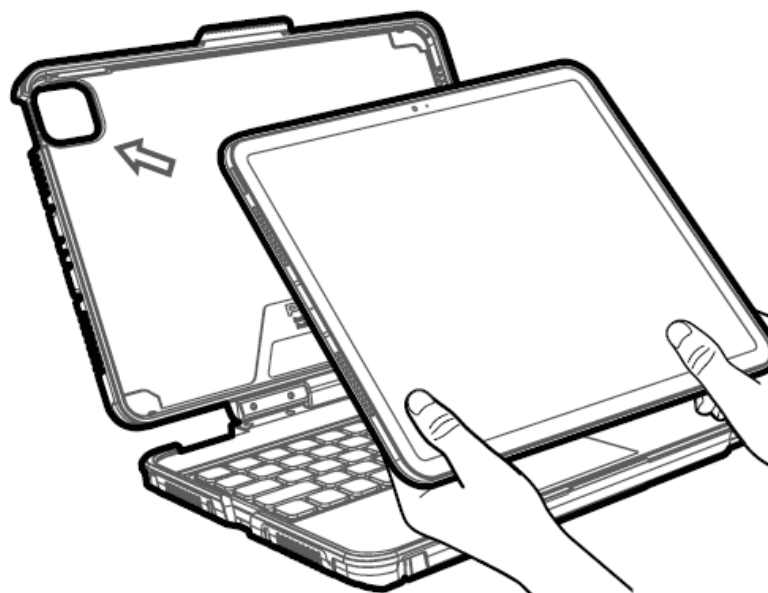

- STEP 6: Press the corners of the iPad into the iPad shell, beginning with the camera and button. The iPad will snap securely into the case's perimeter seal. Reference STEP 1 if necessary.

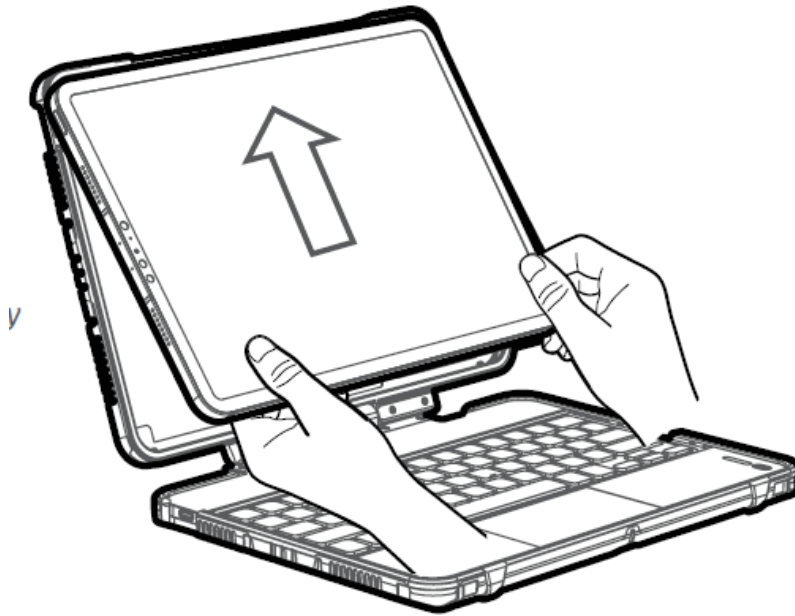



- Congratulations!

Assembly is now complete. You are now ready to pair the PA-KA22A with your iPad via Bluetooth. See the next page for the steps.



PA-KA22A Bluetooth Pairing


1.  Locate the power switch on the bottom right of the keyboard and set it to the position On.
2.  Press the Fn + C keys to start Bluetooth pairing.
(The keyboard will automatically reconnect when you turn it on for the second time.)
3. A) Open the iPad and find "Settings".
B) Make sure the "Bluetooth" function is on, as shown on the left.
C) The PA-KA22A pairing information will appear as PIVOT-KB001 in the Bluetooth list

on your screen, as shown on the left.

D) Select PIVOT-KB001 to pair and connect.

! Important!


Immediately after pairing, press and hold the Fn + iOS keys (Fn+ iOS) to activate the iOS formatting. The pairing process is not complete until the iOS formatting is activated.

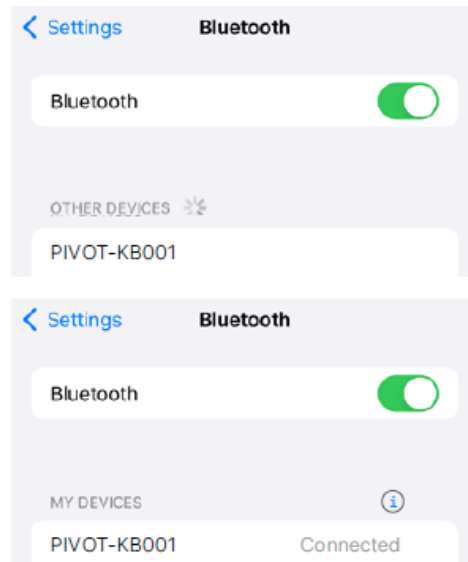

Pro Tip!


If the Fn + C keys are pressed by mistake after pairing is successful, the Bluetooth connection will be disconnected. If this occurs, turn the keyboard off and then on to automatically reconnect. If you need to reconnect manually, delete the connected PA-KA22A by clicking PIVOT-KB001 from the Bluetooth list before reconnecting using the same pairing steps above.

Indicator Light Description

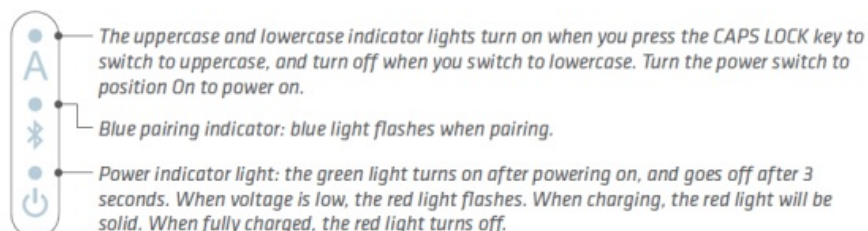

Fn Key Descriptions

The blue character functions of certain keys must be used in combination with the Fn key. To activate, press and hold the Fn key + the desired blue character function key. See below for the PA-KA22A keyboard layout and the described function keys.

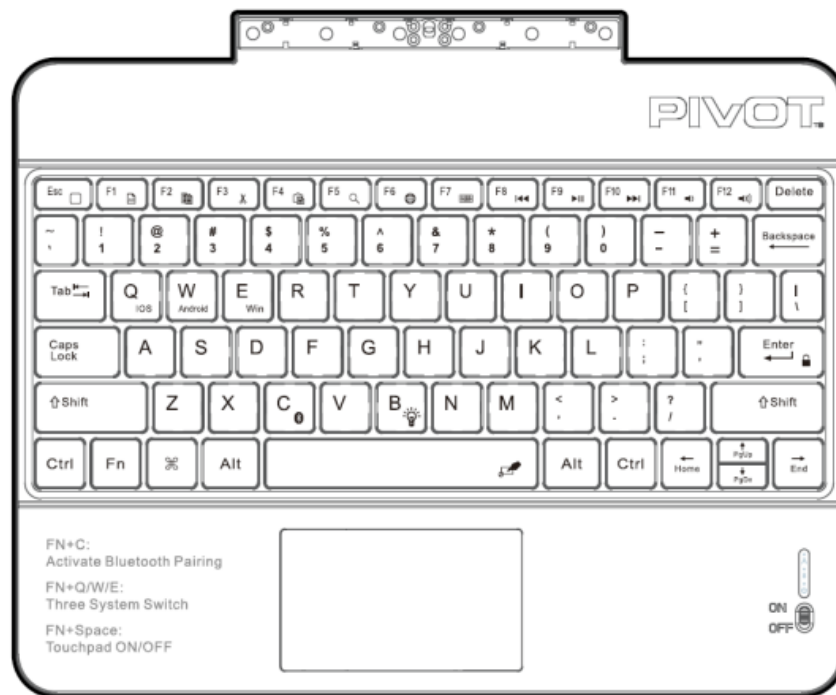

Button Icon	Function Description	Button Icon	Function Description
	Return to main page		Volume down
	Select all		Volume up
	Copy		Bluetooth pairing
	Cut		Switch iOS system
	Paste		Backlight switching
	Search		Beginning of line
	Switch input method		End of line
	Soft keyboard		Previous page
	Previous track		Next page
	Play / pause		Lock screen
	Next track		Trackpad on / off

Use Configurations

A. Laptop Mode
B. Tablet Mode
C. Transit Mode




PA-KA22A Articulation

A. The durable hinge provides 360° rotation.



B. The keyboard and iPad shell open up to 180°.

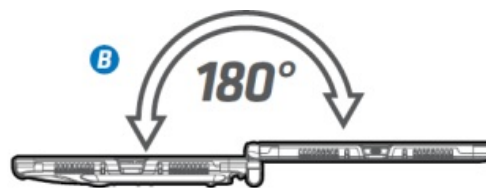


! WARNING!
To avoid hinge damage, do not open or rotate the hinge with excessive force.

Incorrect Use


- The PA-KA22A is durable if used as intended, but can be damaged if subjected to repeated stress and misuse.
- Do not attempt to force the PA-KA22A beyond its maximum open position of 180°.
- **WARNING!**

Do not use excessive force when opening, closing, or adjusting the PA-KA22A, or attempt to force beyond its intended range of motion. Damage resulting from such misuse is not covered under warranty.

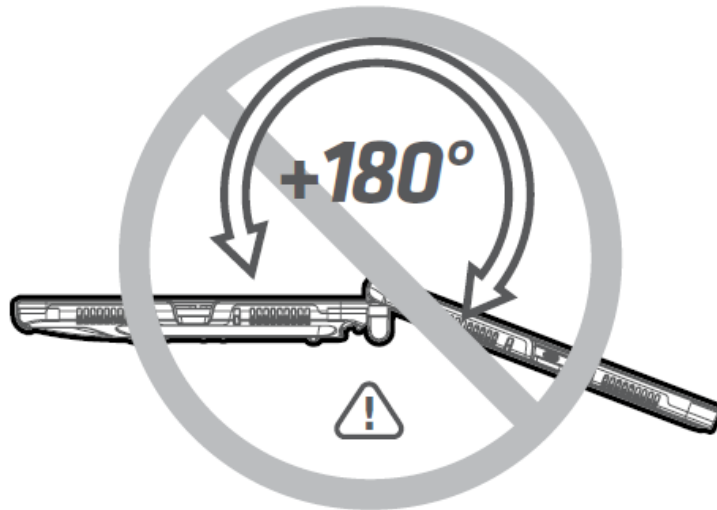


Trackpad Function


*One finger tap mode for
left mouse button function*

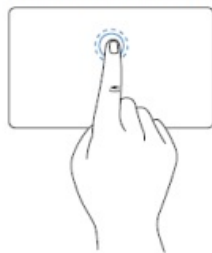


*Two finger tap mode for
right mouse button function*

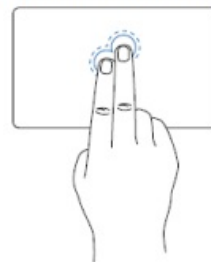


*Slide up and down with two fingers
for mouse wheel function*

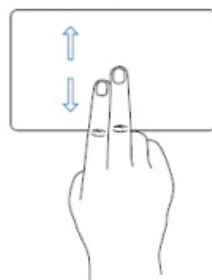


*Swipe left or right with two fingers
to switch desktops*

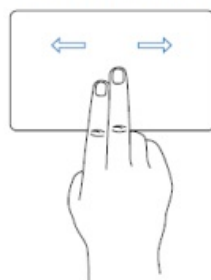


*Pinch to zoom
in and out (web page)*

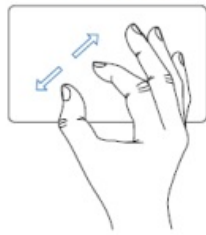


*Swipe up with three fingers
for multi-task window*

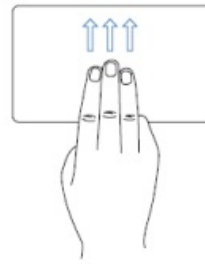

*Swipe left and right with three fingers
to switch windows*

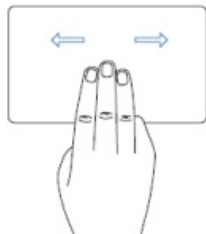

*Swipe down with three fingers
to return to the main interface*

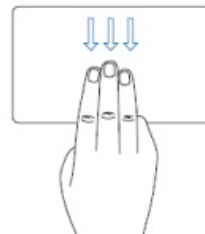

Product Specs

<i>Product name:</i>	<i>PIVOT Bluetooth Keyboard with Trackpad</i>
<i>Model:</i>	<i>PA-KA22A</i>
<i>Pairing Name:</i>	<i>PIVOT-KB001</i>
<i>Modulation method:</i>	<i>GFSK</i>
<i>Charging interface:</i>	<i>USB-C</i>
<i>Battery type:</i>	<i>Li-ion Polymer Battery</i>
<i>Battery capacity:</i>	<i>750mAh / 3.7V 2.775Wh</i>
<i>Working voltage:</i>	<i>3.3V ~ 4.2V</i>
<i>Keyboard operating current:</i>	<i>3mA ~ 5mA</i>
<i>Operating voltage:</i>	<i>5V</i>
<i>Charging time:</i>	<i>2 hours</i>
<i>Standby current:</i>	<i>< 1mA</i>
<i>Sleep current consumption:</i>	<i>< 0.08mA</i>
<i>Standby current consumption:</i>	<i>> 750 hours</i>
<i>Operating distance:</i>	<i><10 meters</i>
<i>Working temperature:</i>	<i>-10~60 °C (14~140 °F)</i>
<i>Dimensions:</i>	<i>256.93 mm x 204.61 mm x 36.33 mm</i>
<i>Weight:</i>	
<i>PA-KA22A:</i>	<i>1.75 lbs (.79 kg)</i>
<i>PA-KA22A + iPad + PC-A22A:</i>	<i>3.30 lbs (1.50 kg)</i>

Sleep Mode Function

If the PA-KA22A is not operated for more than 10 minutes, it will automatically enter sleep mode, and the keyboard will disconnect from Bluetooth to preserve battery life. To wake from sleep mode, press any key on the keyboard and wait 3 seconds, then the keyboard will wake and automatically reconnect.

Charging

Normal use should allow for several weeks between charges. However, when desired or

the power indicator light is observed flashing red, indicating low power, follow these procedures:

- Step 1: Connect the USB-C cable head to the keyboard and the USB-A/USB-C cable to the power adapter.
- Step 2: When charging, the power indicator light appears solid red. When fully charged, the red power indicator light will turn off.

Safety Precautions

1. Keep away from oily chemicals or other dangerous liquids. The PA-KA22A includes a removable, replaceable silicone keyboard cover intended to prevent the keys from contamination and to provide basic protection from liquid intrusion. To clean, gently wipe the silicone keyboard cover with isopropyl alcohol. Allow at least 24 hours to dry before powering on again.
2. Keep away from sharp objects to avoid puncturing the internal lithium-ion battery.
3. Avoid the risk of keypad obstruction. Do not place heavy objects on the keyboard.

Additional Information

To discover more about PIVOT cases, mounts, and accessories, please visit pivotcase.com. The website offers instructional videos, product support, and details on additional PIVOT solutions to improve your experience.

Thank you.

- Learn more at:
- [PIVOTCASE.COM](https://pivotcase.com)
- PIVOT SUPPORT

If you have questions, please contact PIVOT Support.

- www.pivotcase.com/support sales@pivotcase.com
- 1-888-4-FLYBOYS (1-[888-435-9269](tel:888-435-9269))
- www.youtube.com/@pivotcase
- TM and © 2025 FlyBoys. All rights reserved. Designed in the USA.

FAQs

Can I use the PA-KA22A with a case other than the PIVOT A22A?

No. This accessory is currently only compatible with the PIVOT A22A case.

I can't seem to connect the PA-KA22A to my iPad, what can I do?

If the PA-KA22A isn't working correctly, please try the following steps*

- A. Make sure the PA-KA22A is within 10 meters of the effective working distance.
- *Make sure Bluetooth pairing is successful. If not, attempt re-pairing.
- *If pairing is still unsuccessful, remove the existing Bluetooth name from your iPad list and re-pair it through the pairing process described in this guide.
- *Check the battery status, and if it is low then charge.

Why is the PA-KA22A not charged or not charging correctly?

Make sure the USB-C charging cable is correctly connected to both the accessory and charger power supply*

- *Make sure the charger power supply is correctly connected to a power outlet.

Why does Caps Lock have no function in iOS?


By default, Caps Lock functions as the language switch. If you want to change it to the normal capitalization function, follow these steps:

- *Apple iOS Settings > General > Keyboard > Enable Caps Lock (Off)

Why don't the multimedia function keys work in iOS?

They do, but only in the Music app. Open the Music app and then press the corresponding multimedia key in the player. (Previous song, play and pause, next song, stop are all multimedia keys.)

Documents / Resources

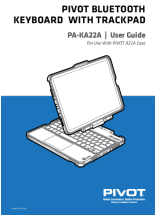	<p>Pivot PA-KA22A Bluetooth Keyboard with Trackpad [pdf] User Guide</p> <p>PA-KA22A, PA-KA22A Bluetooth Keyboard with Trackpad, Bluetooth Keyboard with Trackpad, Keyboard with Trackpad</p>
---	--

References

- [User Manual](#)

PIVOT

Bluetooth Keyboard with Trackpad, Keyboard with Trackpad, PA-KA22A, PA-KA22A Bluetooth Keyboard with Trackpad, PIVOT

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.