ProtoArc EK01 Dual Mode Ergonomic Keyboard





ProtoArc EK01 Dual Mode Ergonomic Keyboard User Manual

Home » ProtoArc » ProtoArc EK01 Dual Mode Ergonomic Keyboard User Manual



Contents

- 1 ProtoArc EK01 Dual Mode Ergonomic
- Keyboard
- **2 Product Information**
- **3 Product Usage Instructions**
- 4 FAQ
- **5 Product Features**
- 6 2.4G USB Connection
- **7 Bluetooth Connection**
- 8 How to Switch Device Channels
- 9 Charging Guide
- 10 Multimedia Function Button Open
- 11 Product Specification
- 12 Packing List
- 13 Documents / Resources
 - 13.1 References



ProtoArc EK01 Dual Mode Ergonomic Keyboard



Product Information

Specifications

• Battery Capacity: 2000mAh

• Battery Life: Up to 365 days

• Dimensions: 480.1 x 244.4 x 25.6 mm / 18.9 x 9.6 x 1.0 in

• Sleep Mode: Automatically enters sleep mode after 60 minutes of inactivity

Product Usage Instructions

2.4G USB Connection

- 1. Turn the power switch to ON.
- 2. Take out the USB receiver.
- 3. Plug it into a USB port on your computer.
- 4. Press a key to switch to the 2.4G channel; the white indicator will flash slowly, indicating entry into the 2.4G channel.

Bluetooth Connection

- 1. Turn the power switch to ON.
- 2. Open Bluetooth settings on your device and search/select "ProtoArc EK01 Plus" for pairing.
- 3. Follow the pairing instructions until the connection is completed.

Switching Device Channels

After devices are connected, press the corresponding channel key to switch between devices:

- BT 1 Device Channel
- 2.4G USB Device Channel

Charging Guide

Use the Type-C charging port to charge the keyboard when needed.

Backlight Adjustment

To adjust backlight brightness, press the Keyboard Backlight Switch Button as follows:


First press: Very dim brightness
 Second press: Medium brightness
 Third press: Highest brightness

4. Fourth press: Turn off the backlight

FAQ

- Q: How do I know when the keyboard is low on power or charging?
 - A: The Power Indicator will show low power or charging status.
- Q: How can I tell if Caps Lock is activated?
 - A: The Caps Lock Indicator will indicate whether Caps Lock is on or off.

Product Features

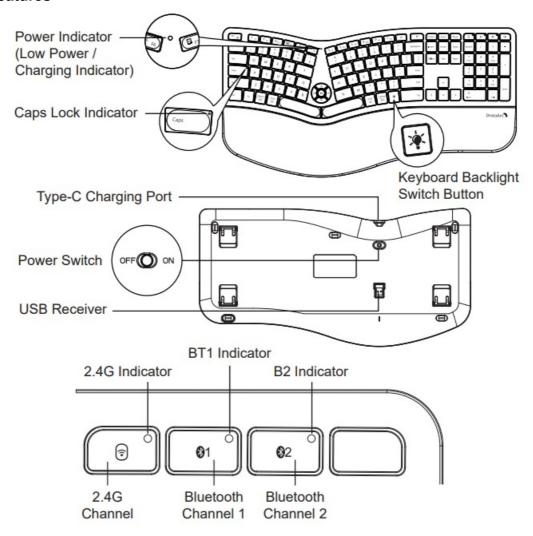


Switch backlight brightness (Dimly, Medium brightness, Brightest)


The first press will turn on the backlight with a very dim brightness. The second press will increase the brightness to a medium level. The third press will set the backlight to the highest brightness. The fourth press will turn off the backlight. After 1 minute of inactivity, the backlight automatically turns off, and press any key to wake up. After 60 minutes of inactivity, the backlight will automatically turn off, and the keyboard enters deep sleep mode. Press any key to wake up the keyboard, and the backlight needs to be turned on again.

2.4G USB Connection


1. Turn the power switch to ON.

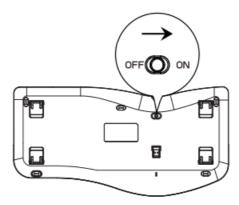


2. Take out the USB receiver

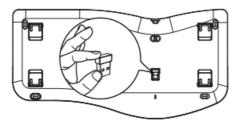

3. Plug it into a USB port on your computer.

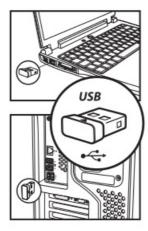


4. Press (a) key to switch to 2.4G channel, the white indicator will flash slowly, enter into 2.4G channel.

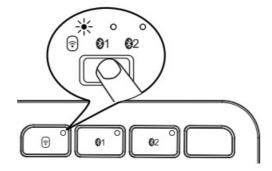


Bluetooth Connection


1. Turn the power switch to ON

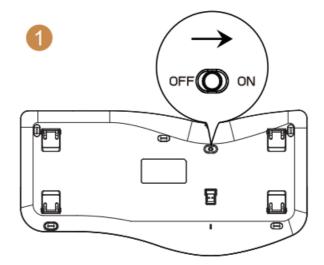


2. Single press \$1/\$2 channel button, and the indicator light flashes once to enter the Bluetooth channel. Long press this Bluetooth channel button for 3–5 seconds again, the indicator light flashes quickly, then the keyboard enters into the Bluetooth pairing mode.

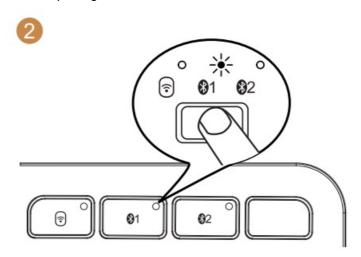

3. Turn on the Bluetooth settings on your device, search or select "ProtoArc EK01 Plus" and start Bluetooth pairing until the connection is completed.

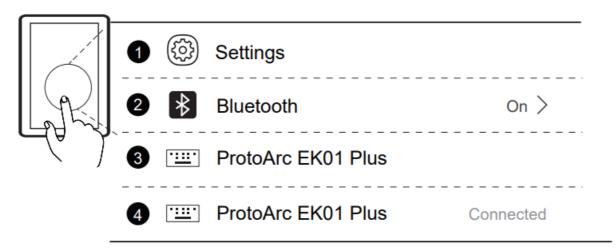




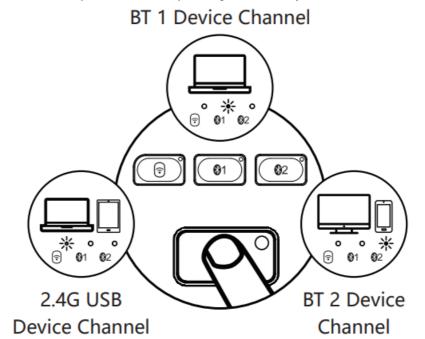

Charging Guide

- 1. When low power, the backlight will automatically turn off first, and then the power indicator light will turn red and flash quickly.
- 2. Insert the Type-C port into the keyboard and the USB-A port into the computer to charge, the red light stays on while charging.
- 3. It takes 2-3 hours for one cycles full charged, and the indicator turns green when fully charged

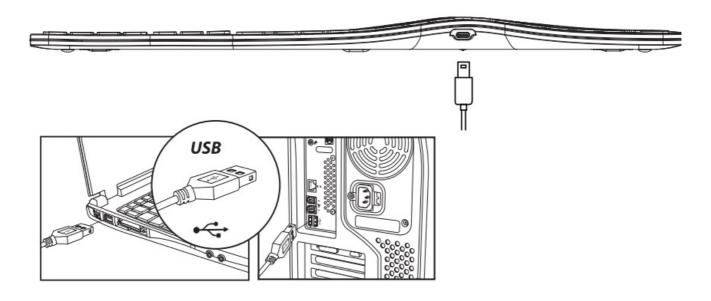

Multimedia Function Button Open

Windows	Android	iOS	MAC OS
Decrease brightness	Decrease brightness	Decrease brightness	Decrease brightness
Increase brightness	Increase brightness	Increase brightness	Increase brightness
Window switching	Window switching	/	Multi-window preview
Multi-window preview	/	App switching	App switching
Show desktop	/	/	Show desktop
Search	Search	Search	Search
Select all	Select all	Select all	Select all
Сору	Сору	Сору	Сору
Cut	Cut	Cut	Cut
Paste	Paste	Paste	Paste
Mute	Mute	Mute	Mute
Home	Home	Home	/
Screenshot	Screenshot	Screenshot	Screenshot
Open Setting	/	/	/
Lock	/	Lock	Lock
Volume up	Volume up	Volume up	Volume up
Volume down	Volume down	Volume down	Volume down
Previous	Previous	Previous	Previous
Play&Stop	Play&Stop	Play&Stop	Play&Stop
Next	Next	Next	Next
Press FN+ESC to turn ON / OFF the FN function			
	Decrease brightness Increase brightness Window switching Multi-window preview Show desktop Search Select all Copy Cut Paste Mute Home Screenshot Open Setting Lock Volume up Volume down Previous Play&Stop Next	Decrease brightness Increase brightness Window switching Multi-window preview Show desktop Search Select all Copy Cut Paste Mute Home Home Screenshot Open Setting Lock Volume up Volume down Previous Play&Stop Next Next Increase brightness Increas	Decrease brightness Decrease brightness Increase brightness Increase brightness Window switching Window switching Multi-window preview / App switching Show desktop / / Search Search Search Select all Select all Copy Copy Copy Cut Cut Cut Paste Paste Paste Mute Mute Mute Home Home Home Screenshot Screenshot Open Setting / / Lock Volume up Volume up Volume down Previous Previous Play&Stop Play&Stop Next Next Next

Note: The FN function is for alternate commands (F1-F12 & multimedia functions are dual-use keys).

Product Specification

Project Name	Specifications
Applicable System	2.4G: Windows System Bluetooth: Windows 8, Windows 10 or above, Mac OS X 10.12 or above, Android 4.3 or above.
Battery Capacity	2000mAh
Battery Life	1000 charge and discharge cycles
Button Life	3 million keystrokes test
StandbyTime	≥ 365 Days
Awake Mode	Click any key to wake up
Effective Distance	8 m / 26 ft
Working Current	≤3mA
Size	480.1 x 244.4 x 25.6 mm / 18.9 x 9.6 x 1.0 in

Sleep Mode

- 1. When the keyboard is idle for more than 60 minutes, it will automatically enter sleep mode and the indicator light will turn off.
- 2. To wake up the keyboard, simply press any key on the keyboard, and it will be ready within 3 seconds. The indicator light will light up again

Tips

- 1. If the Bluetooth connection is not working properly, turn off and turn on the keyboard again to restart the device's Bluetooth and attempt to reconnect. Or delete the extra Bluetooth option name in the Bluetooth connection list of the device and reconnect.
- 2. To switch to a successfully connected channel, press the channel button and wait for 3 seconds before continuing to use.
- 3. The keyboard has a memory function. When it is connected on a specific channel, turn off the keyboard and turn on again, they will automatically connect to the default channel and this channel indicator is on.

Packing List

- 1* Wireless Bluetooth Keyboard
- 1* USB Receiver
- 1* Type-C Charging Cable
- 1* User Manual

Documents / Resources



ProtoArc EK01 Dual Mode Ergonomic Keyboard [pdf] User Manual

EK01 Dual Mode Ergonomic Keyboard, EK01, Dual Mode Ergonomic Keyboard, Mode Ergonomic Keyboard, Ergonomic Keyboard, Keyboard

supportigionals are an wave protocol com

References

- ProtoArc® Better Workspace: Portable & Comfortable & Efficient
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.