



ProtoArc EKM01 Dual Mode Ergonomic Keyboard and Mouse Combo User Manual

[Home](#) » [ProtoArc](#) » ProtoArc EKM01 Dual Mode Ergonomic Keyboard and Mouse Combo User Manual 




**EKM01 Plus
User Manual
Dual Mode Ergonomic
Keyboard and Mouse Combo**

support@protoarc.com
www.protoarc.com

Contents

- [1 Product Features](#)
- [2 2.4G USB Connection](#)
- [3 Mouse Bluetooth Connection](#)
- [4 Keyboard Bluetooth Connection](#)
- [5 How to Switch Mouse Device Channels](#)
- [6 Charging Guide](#)
- [7 Multimedia Function Button](#)
- [8 Product Specification](#)
- [9 Sleep Mode](#)
- [10 Packing List](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)




Product Features

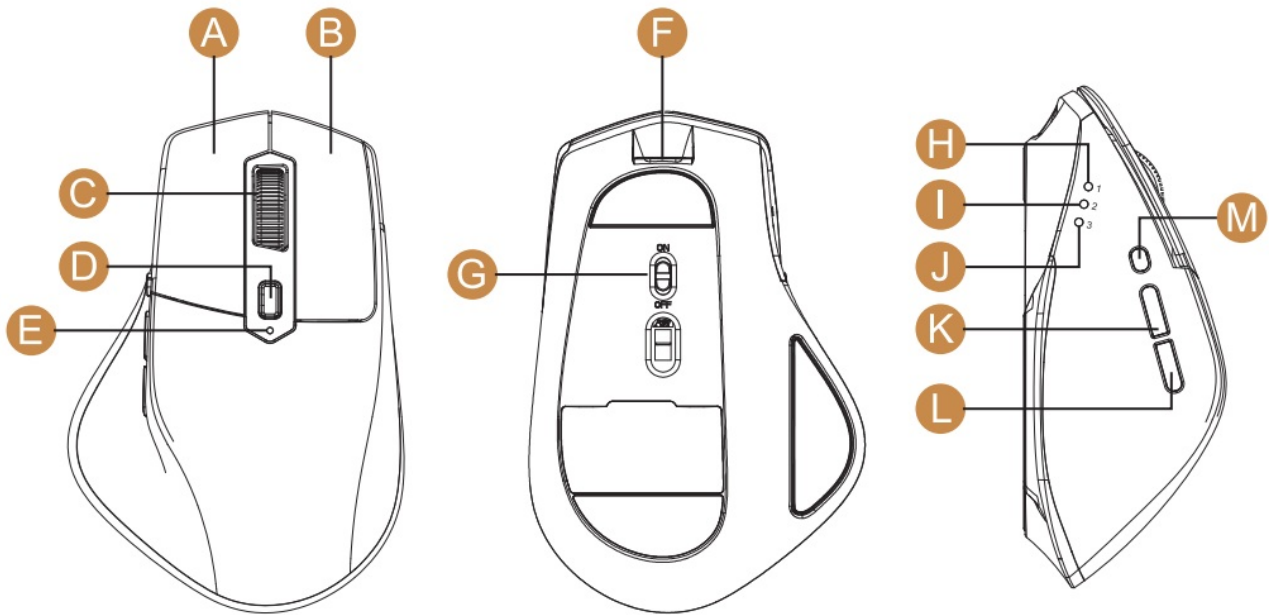



- A. Left Button
- B. Right Button
- C. Scroll Wheel Button
- D. DPI Button
- E. Low Power / Charging Indicator
- F. Type-C Charging Port
- G. Power Switch
- H. 2.4G Indicator
- I. BT1 Indicator
- J. BT2 Indicator
- K. Forward Button
- L. Backward Button
- M. Channel Switch Button

DPI Button

Press the DPI button to adjust the cursor sensitivity. A single flash of indicator light corresponds to DPI level 800, two to 1300, and three to 2000.

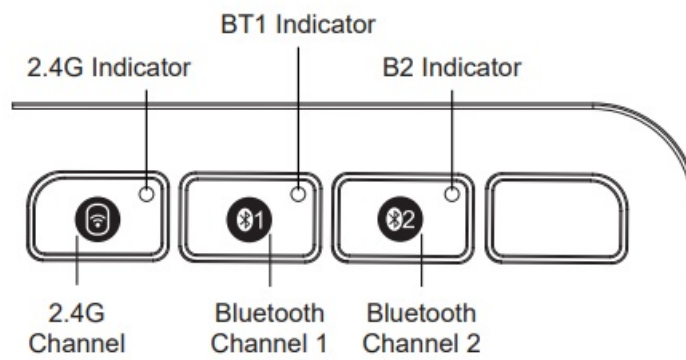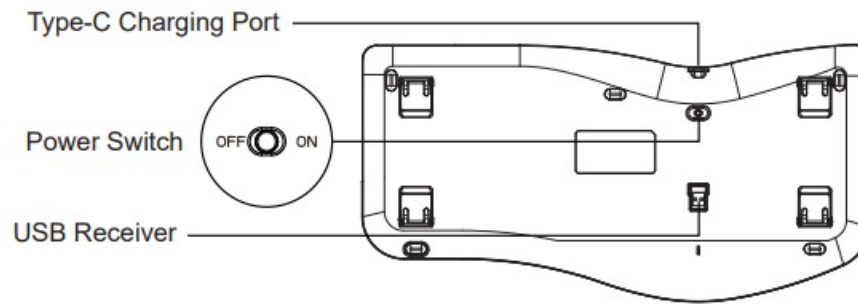
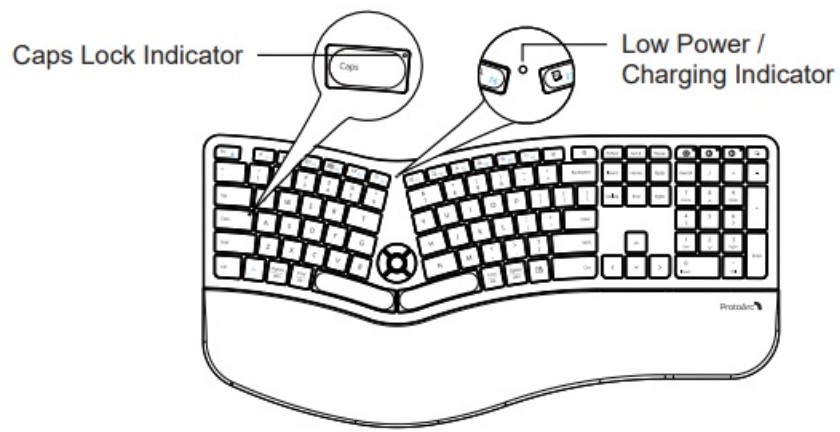


2.4G USB Connection

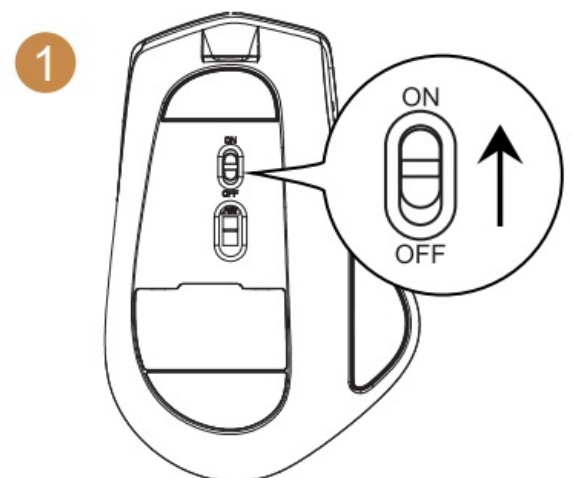
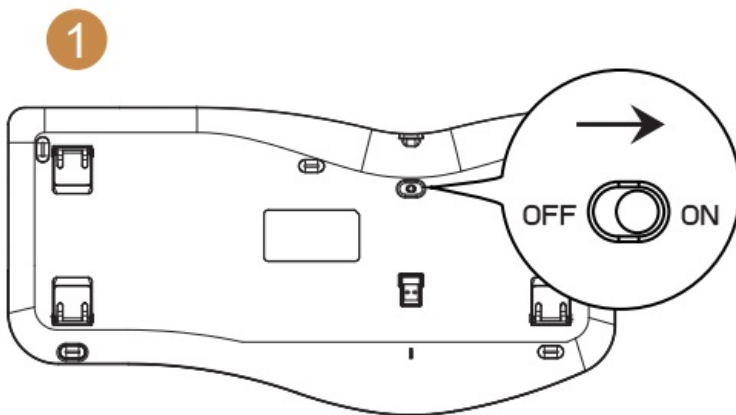



1. Switch the keyboard ON.

1. Switch the Mouse ON.

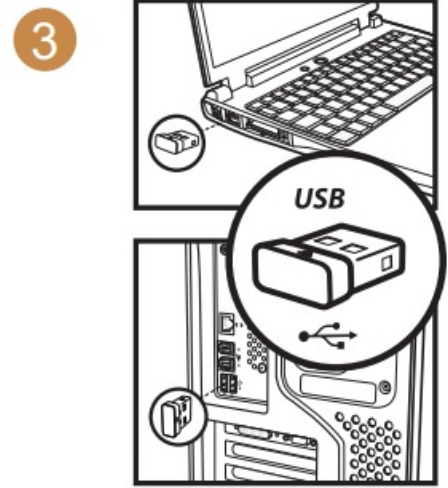
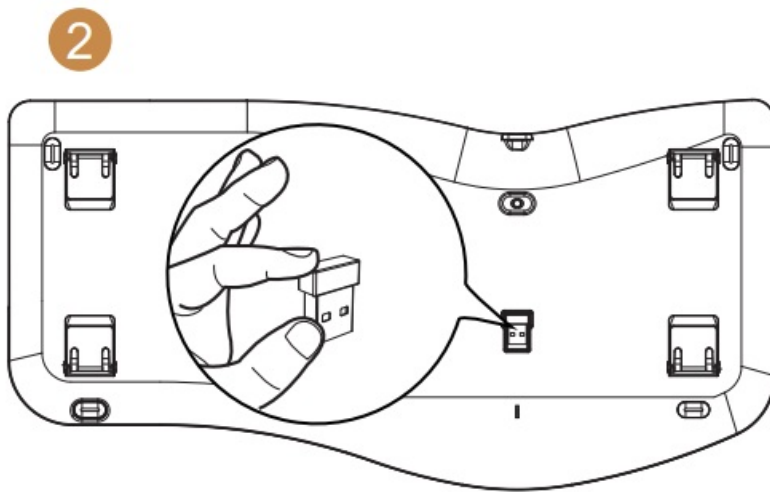


2. Take out the USB receiver.
3. Plug it into a USB port on your computer.

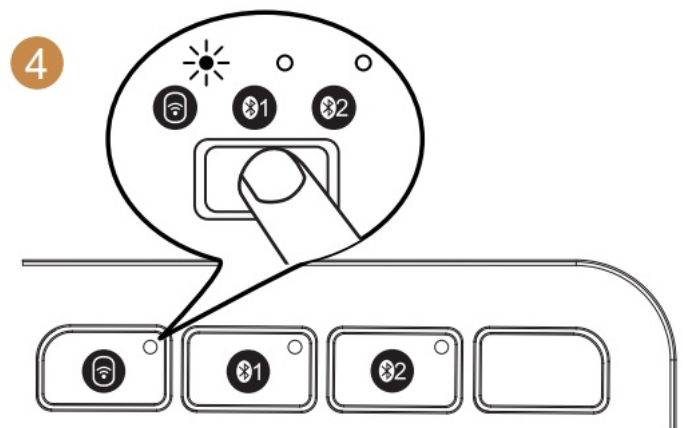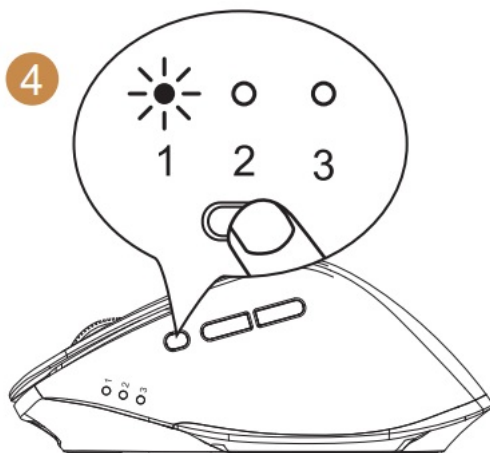


4. Press the mode switch button on the left of the mouse to channel 1, the 2.4G indicator will be on, now the mouse is in 2.4G mode.
5. Press  key to switch to 2.4G channel, the white indicator will flash slowly, the keyboard now is in 2.4G mode.

Mouse Bluetooth Connection

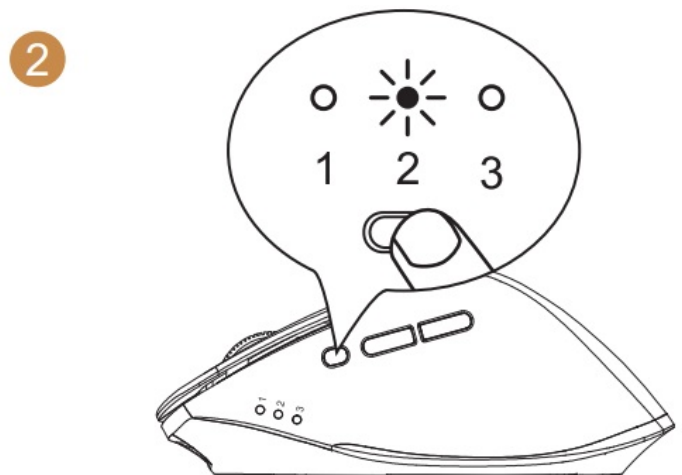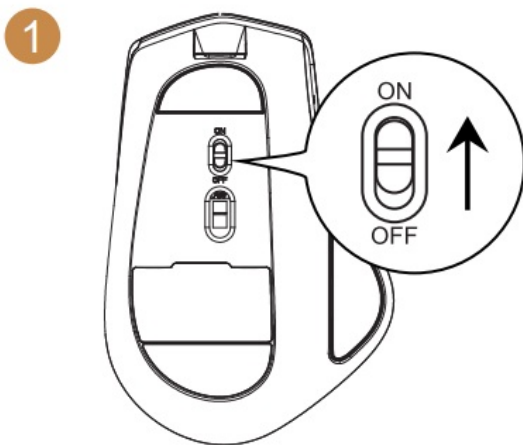


1. Turn the power switch to ON.
2. Press the channel switch button to channel 2 or 3 until the corresponding channel indicator is on.

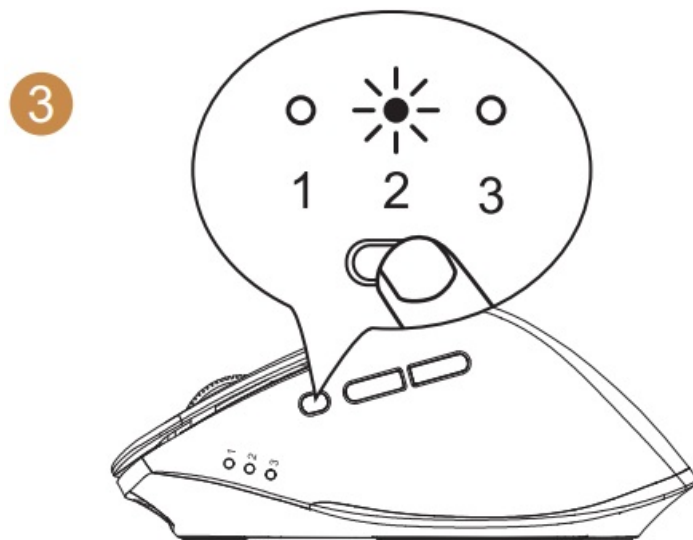



3. Long press the channel switch button for 3~5 seconds until the corresponding channel indicator flashes quickly, the mouse enters Bluetooth pairing mode.

4

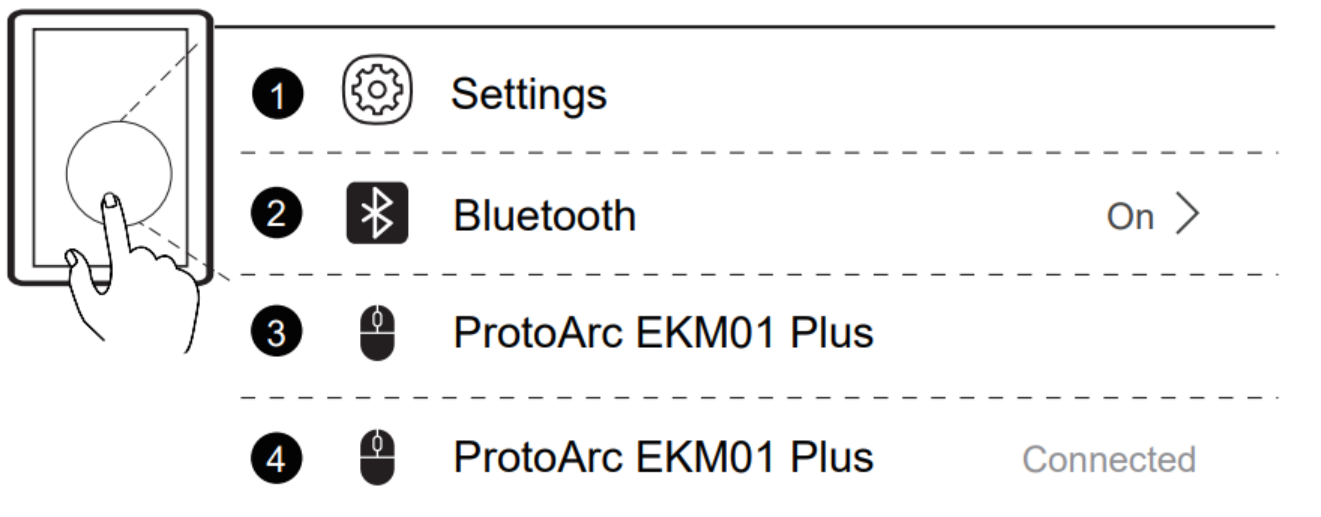


4. Turn on the Bluetooth settings on your device, search or select “ProtoArc EKM01 Plus” and start Bluetooth pairing until the connection is completed.

Keyboard Bluetooth Connection

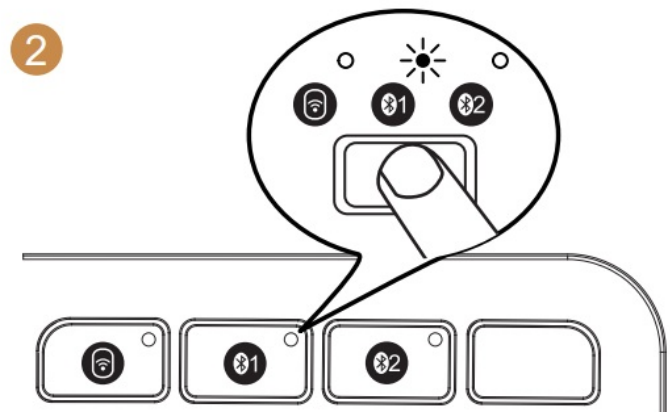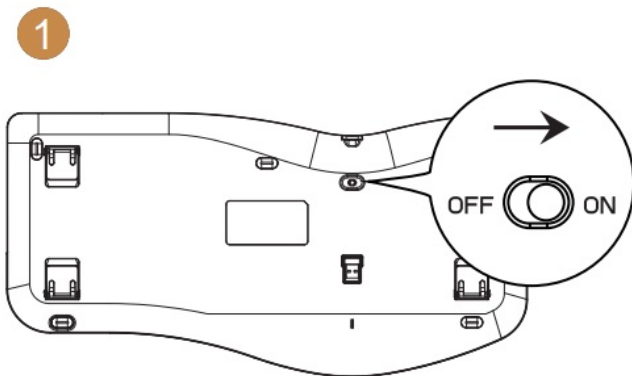


1. Turn the power switch to ON.

2. Press the channel switch button  /  until the corresponding channel indicator is on.

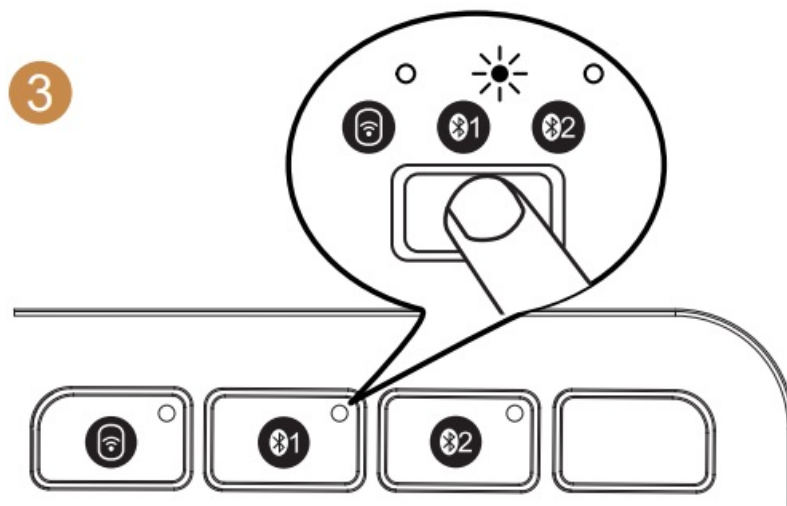

3. Long press the channel switch button for 3~5 seconds until the corresponding channel indicator flashes quickly, the keyboard enters Bluetooth pairing mode.

4

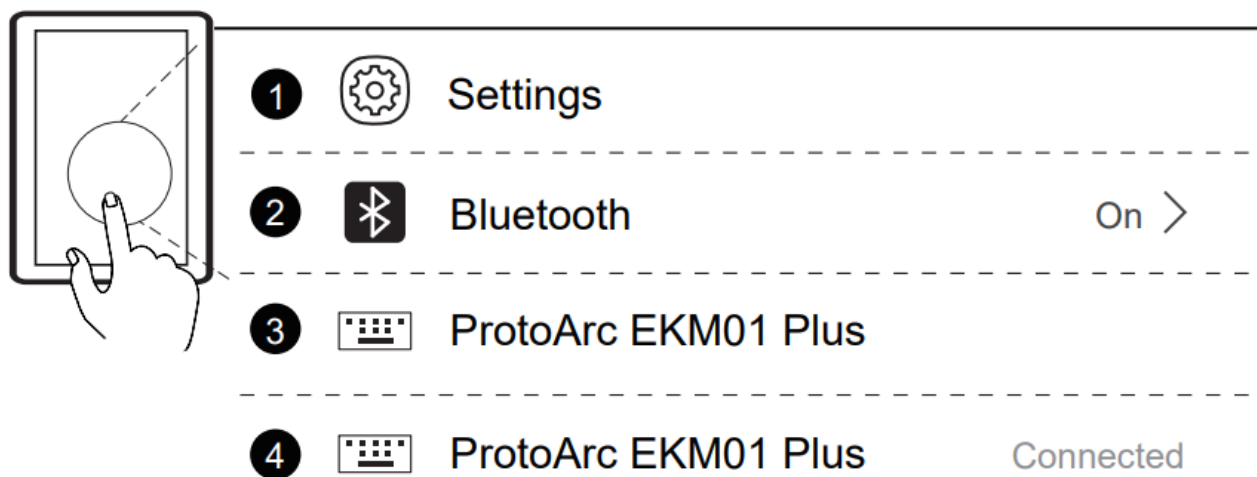


4. Turn on the Bluetooth settings on your device, search or select “ProtoArc EKM01 Plus” and start Bluetooth pairing until the connection is completed.

How to Switch Mouse Device Channels

After BT1, BT2 and 2.4G USB mode is connected, press the mode switch button on the left side of the mouse to switch between multiple devices.


BT 1 Device Channel

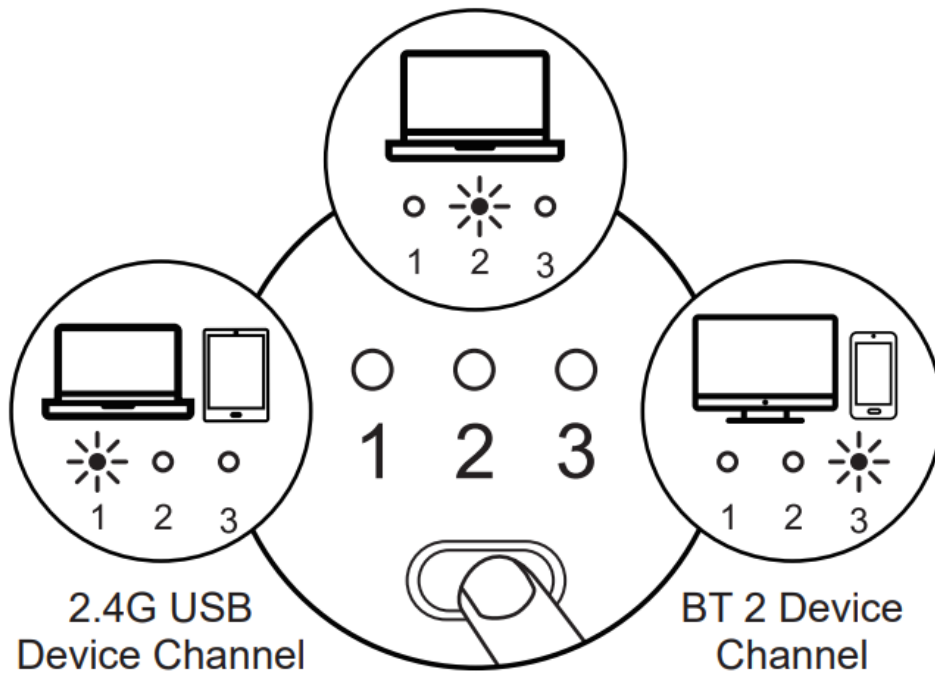


How to Switch Keyboard Device Channels

After | | are connected, press the corresponding channel key to switch between devices.

BT 1 Device Channel

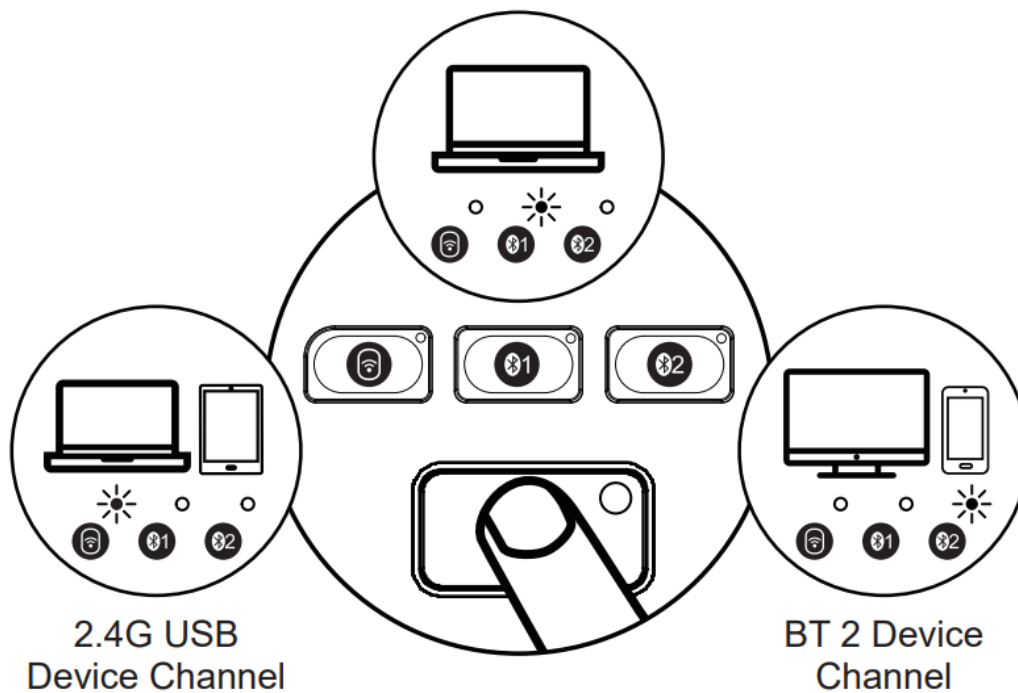



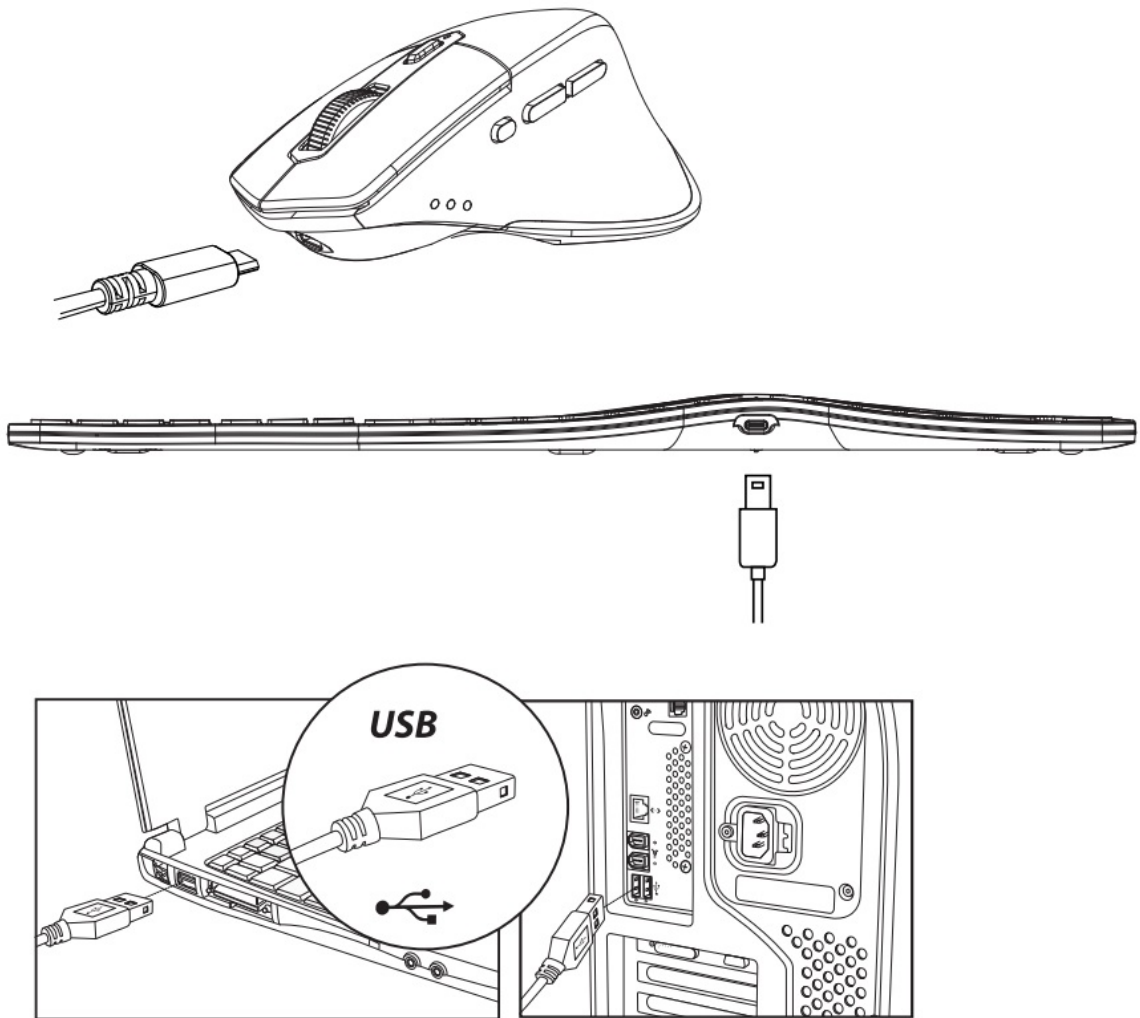













Charging Guide



1. When the battery is low, the indicator light will turn red and start flashing until the keyboard/mouse is turned off.
2. Insert the Type-C port into the Keyboard/Mouse and the USB-A port into the computer to charge, the red light stays on while charging.
3. It takes 2–3 hours for one cycles full charged, and the indicator turns green when fully charged.

Multimedia Function Button

Buttons	Windows	Android	iOS	MAC OS
	Decrease brightness	Decrease brightness	Decrease brightness	Decrease brightness
	Increase brightness	Increase brightness	Increase brightness	Increase brightness
	Window switching	Window switching	/	Multi-window preview
	Multi-window preview	/	App switching	App switching
	Show desktop	/	/	Show desktop
	Search	Search	Search	Search
	Select all	Select all	Select all	Select all
	Copy	Copy	Copy	Copy
	Cut	Cut	Cut	Cut
	Paste	Paste	Paste	Paste
 	Mute	Mute	Mute	Mute
	Home	Home	Home	/
	Screenshot	Screenshot	Screenshot	Screenshot
	Open Setting	/	/	/
	Lock	/	Lock	Lock
	Volume up	Volume up	Volume up	Volume up
	Volume down	Volume down	Volume down	Volume down
	Previous	Previous	Previous	Previous
	Play&Stop	Play&Stop	Play&Stop	Play&Stop
	Next	Next	Next	Next
	Press FN+ESC to turn ON / OFF the FN function			

NOTE: The FN function is for alternate commands (F1-F12 & multimedia functions are dual-use keys).

Product Specification

Keyboard

Compatible Operating Systems	2.4G: Windows System Bluetooth: Windows 8, Windows 10 or above, Mac OS X 10.12 or above, Android 4.3 or above.
Battery Capacity	500mAh
Sleep Time	Enter into the sleep mode after no operation of 60 minutes
Battery Life	1000 times charge and discharge
Key Life	3 Millions Strokes
Standby Time	365 Days
Wake Up Way	Press any key
Operating Distance	8 m / 26 ft
Working Current	s3mA
Keyboard Dimension	480.1 x 244.4 x 25.6 mm / 18.9 x 9.6 x 1.0 in

MOUSE

Compatible Operating Systems	2.4G: Windows System Bluetooth: Windows 8, Windows 10 or above, Mac OS X 10.12 or above, Android 4.3 or above.
Working Voltage	3.7V
Working Current	3.5mA
DPI	800-1300-2000
Sleep Time	60 mins
Working Time	140 hours
Charging Time	2-3 hours
Battery Capacity	500mAh
Wake Up Way	Press any button
Operating Distance	8 m / 26 ft
Standby Time	100 Days
Mouse Dimension	124.6 x 83.6 x 50.4 mm / 4.9 x 3.3 x 2.0 in

Sleep Mode

1. When the keyboard is idle for more than 60 minutes, it will automatically enter sleep mode and the indicator light will turn off.
2. To wake up the keyboard, simply press any key on the keyboard, and it will be ready within 3 seconds. The indicator light will light up again.

Tips

1. If the Bluetooth connection is not working properly, turn off and turn on the keyboard or to restart the device's Bluetooth and attempt to reconnect. Or delete the extra Bluetooth option name in the Bluetooth connection list of the device and reconnect.
2. To switch to a successfully connected channel, press the channel button and wait for 3 seconds before continuing to use.
3. The keyboard has a memory function. When it connected on a specific channel, turn off the keyboard and turn on again, they will automatically connect to the default channel and this channel indicator is on.

Packing List

- 1 x Wireless Bluetooth Keyboard
- 1 x Wireless Bluetooth Mouse
- 1 x USB Receiver
- 1 x Type-C Charging Cable
- 1 x User Manual

Documents / Resources

<div><div>ProtoArc</div><div>EKM01 Plus</div><div>User Manual</div><div>Dual Mode Ergonomic Keyboard and Mouse Combo</div><div>support@protoarc.com</div><div>www.protoarc.com</div></div>	<div>ProtoArc EKM01 Dual Mode Ergonomic Keyboard and Mouse Combo [pdf] User Manual</div> <div>EKM01 Dual Mode Ergonomic Keyboard and Mouse Combo, EKM01, Dual Mode Ergonomic Keyboard and Mouse Combo, Ergonomic Keyboard and Mouse Combo, Keyboard and Mouse Combo, and Mouse Combo, Mouse Combo, Combo</div>
--	--

References

- [ProtoArc® Better Workspace: Portable & Comfortable & Efficient](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.