



# ProtoArc EKM02 Ergonomic Keyboard Mouse Combo User Manual

[Home](#) » [ProtoArc](#) » ProtoArc EKM02 Ergonomic Keyboard Mouse Combo User Manual 

## Contents

- [1 ProtoArc EKM02 Ergonomic Keyboard Mouse Combo](#)
- [2 What's in Package](#)
- [3 Wireless Connection](#)
- [4 CHARGING](#)
- [5 Specifications](#)
- [6 Multimedia Function Key](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)




## ProtoArc EKM02 Ergonomic Keyboard Mouse Combo




## What's in Package

- Wireless Keyboard
- USB Receiver
- Type-C Charging Cable
- Wireless Mouse

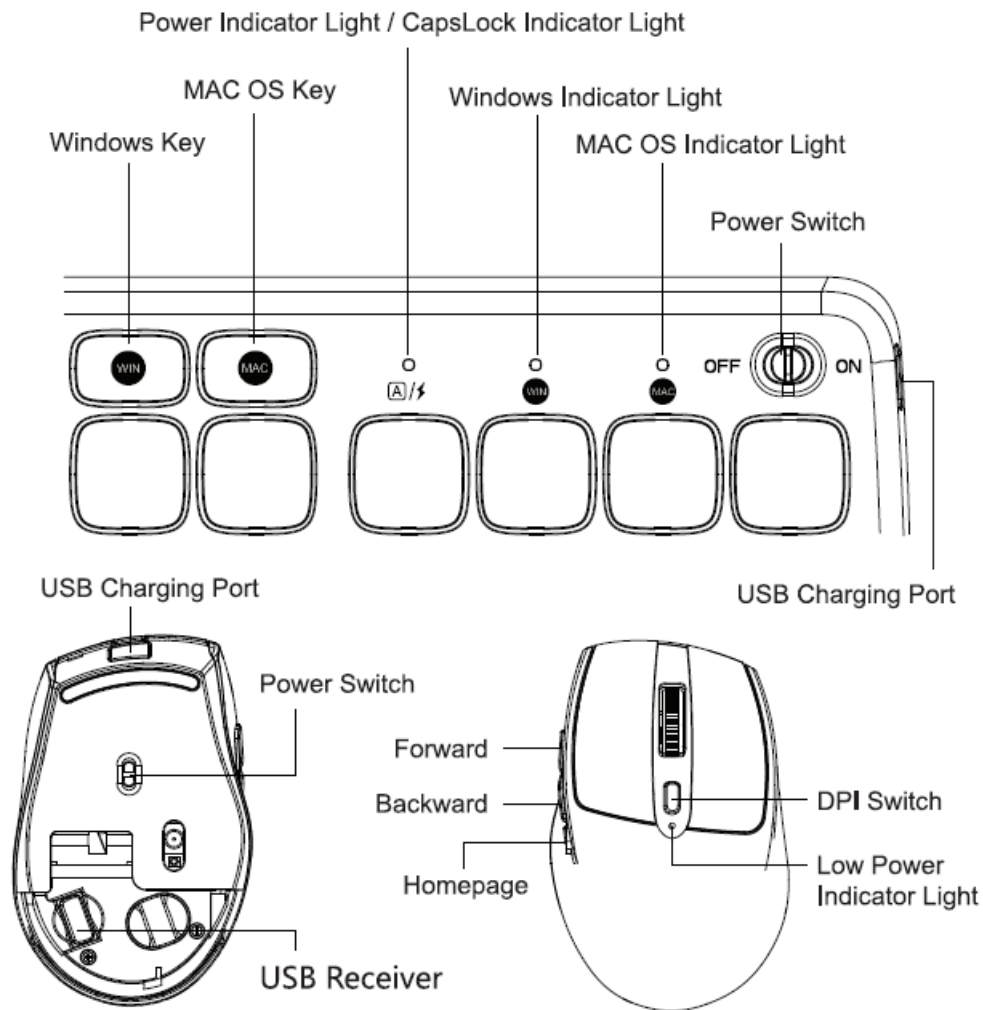


## Wireless Connection


1. Switch both the keyboard and mouse to power ON.

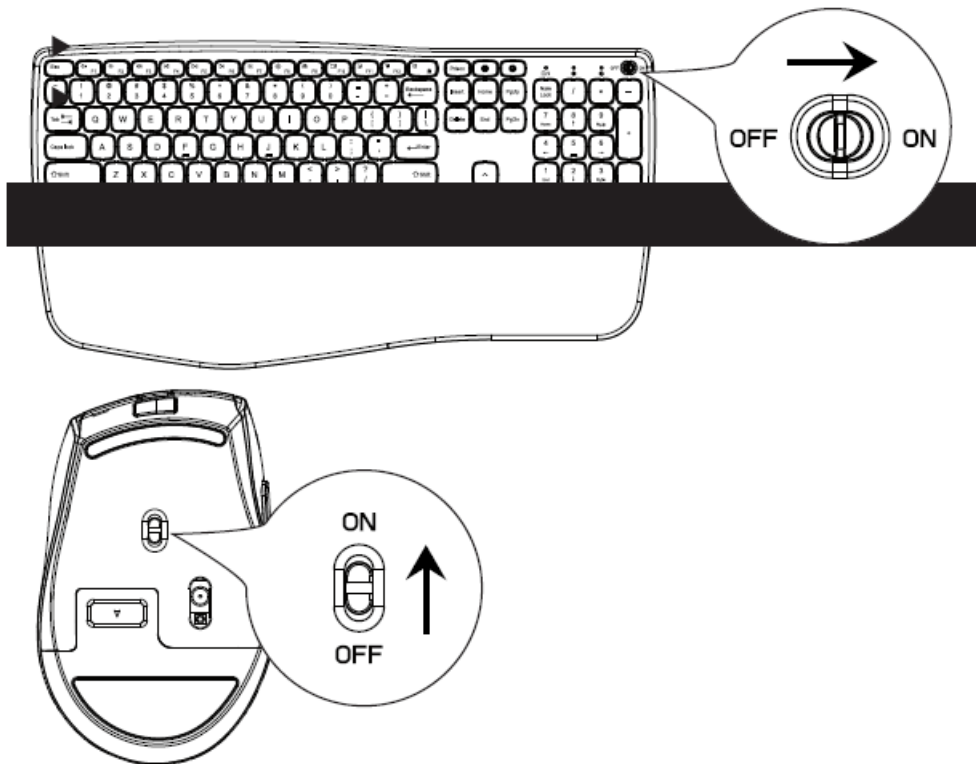

2. Remove the cover at the bottom of the mouse to find the USB receiver.

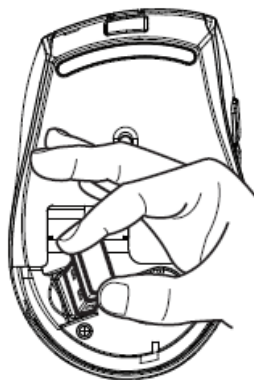

3. Plug the receiver into the USB port.

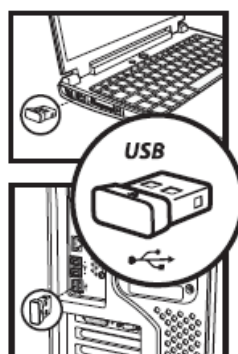


## CHARGING

**Charging Tips:** The indicator light is red when the keyboard is charging, and blue when fully charged. The indicator light is red when the mouse is charging, and blue when fully charged. (Charge with 5V-1A computer interface).

**Low power prompt:** When the power of the keyboard and mouse is lower than 3.4V, the red light of the low

power prompt light will lash once a second, please charge it in time or it will affect normal use.

**Sleep time:** The keyboard's sleep time is 10 minutes, press any key to wake up, The mouse's sleep time is 30 minutes, press any button to wake up.

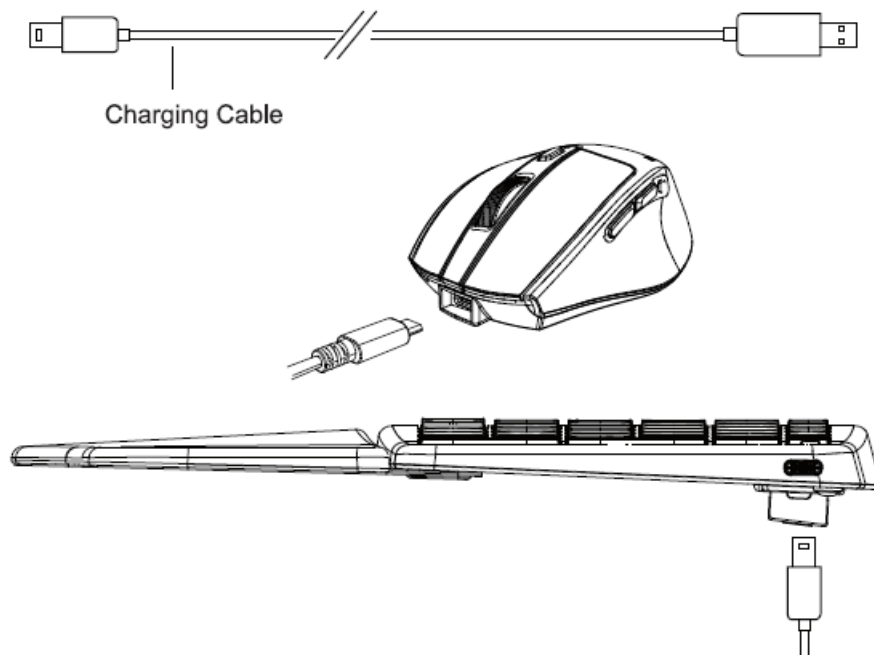

## Specifications

### Wireless Keyboard
















System Compatibility	Windows system, MAC system	
Operating Distance	2:8M / 26 .2 fl	
Operating Vollage	S2mA	
Operating Current	6.0mA	
Stand-by Current	S0	.4mA
Dormant Current	18uA	
Wake From Sleep Mode	Press any key to wake up	
Battery Life Per Ch8rge	250 Hours	
Stand-by Time	2:250 days	
Keyboard Size	419 • 220 x 19 mm/ 16.S- • 8.7" x 0.8"	

## Wireless Mouse

System Compatibility	Windows. the system, MAC system
----------------------	---------------------------------

MouseDPI	800-1200-1600 DPI
Operating Distance	28M 1 26.2 ft
Operating Voltage	1. SV
Operating Current	S22mA
Stand-by Current	S0.4mA
Dormant Current	S0.3mA
Stand-by Time	2:100 days
Battery Life Per Charge	>36 Hours
monetize	107 x 69 x 41 mm1 4.2" x 2.7' x 1.6


## Multimedia Function Key

	Mute
	Volume Down
	Volume Up
	The last song
	Play / Pause
	The next song
	Brightness Down
	Brightness Up
	Program Listing
	Desktop Display
	Copy
	Paste
	Save
 	Lock/Unlock to use multimedia function

**Note:** The FN function is for alternate commands (F1-F12 & multimedia functions are dual-use keys).

[support@protoarc.com](mailto:support@protoarc.com)  
[www.protoarc.com](http://www.protoarc.com)

## Documents / Resources

	<a href="#">ProtoArc EKM02 Ergonomic Keyboard Mouse Combo</a> [pdf] User Manual EKM02, Ergonomic Keyboard Mouse Combo, Keyboard Mouse Combo, Ergonomic Mouse Combo, Mouse Combo, Keyboard Mouse, Mouse
---	---