

Pulsar X2 v3 Wireless Mouse User Manual

Contents

[1 Pulsar X2 v3 Wireless Mouse user manual](#)

[1.1 Basic function](#)

[1.2 Indicator light](#)

[1.3 Working mode switching](#)

[1.4 DPI Setting](#)

[2 Documents / Resources](#)


[2.1 References](#)

[3 Related Posts](#)

Pulsar X2 v3 Wireless Mouse user manual

2024-03-1 V1.0

Basic function

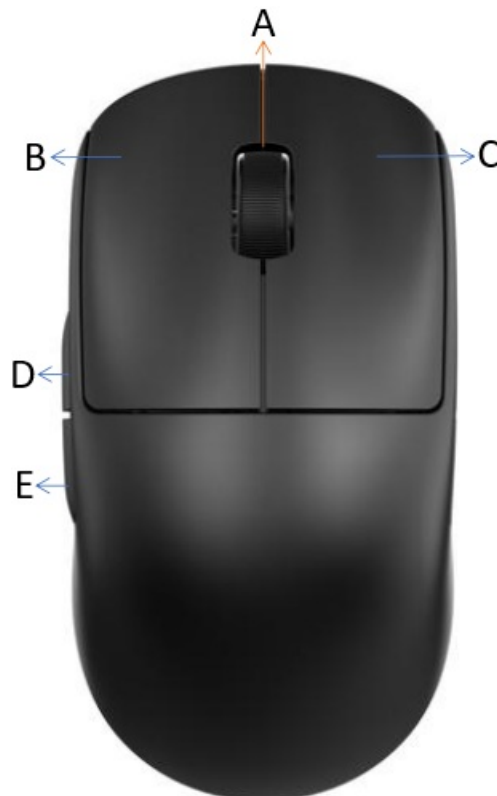

A:

1. Middle mouse button
2. Mouse Scroll

B: Left mouse button

C: Right mouse button

D: Forward button

E: Backward button

Indicator light



1. Mouse RF connection indicator

Working mode switching



A: Toggle switch,
 1. wired mode when moved to the left “X”;
 2. RF mode when moved to the right “O”;

DPI Setting



A: The level change of DPI is reflected on the RGB colors : 400 (Light Blue)-800(Blue)-1600(Green)-3200(Yellow)6400(Orange)-12800(Pink)



A: Press the “DPI” switch to change the DPI level; DPI sets the step level [400-800-1600](tel:400-800-1600)-3200-6400-12800

Documents / Resources

Pulsar X2 v3 Wireless Mouse user manual	Pulsar X2 v3 Wireless Mouse [pdf] User Manual PX2321, 2A2TU-PX2321, 2A2TUPX2321, X2 v3 Wireless Mouse, X2 v3, Wireless Mouse, Mouse
--	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.