



Home » Pulse » PULSE 4006-SSB ErgoSafetyBar with Optional Towel Bar Owner's Manual 🤼




Contents [hide]

- 1 PULSE 4006-SSB ErgoSafetyBar with Optional Towel Bar
- 2 Product Specifications
- 3 Product Usage Instructions
- 4 TOOLS REQUIRED FOR INSTALLATION
- **5 INSTALLATION QUESTIONS**
- 6 Installation Instructions
- 7 ABOUT COMPANY
- 8 FAQ
- 9 Documents / Resources
 - 9.1 References
- 10 Related Posts



PULSE 4006-SSB ErgoSafetyBar with Optional Towel Bar

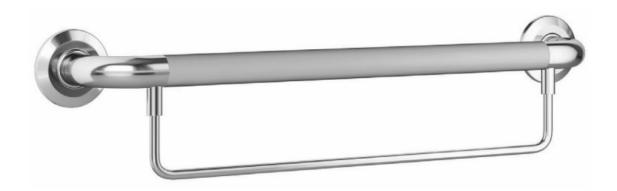

Product Specifications

Model Numbers: 4006-SSB, 4006-SSP, 4006-MB, 4006-ORB PW-94006-75BSS,

PW-94006-75PSS, PW-94006-75BM, PW-94006-75BRZSS

• Product Name: ErgoSafetyBar with Optional Towel Bar

• Manufacturer: PULSE ShowerSpas, Inc.

Product Usage Instructions

Installation

Tools Required: Drill, screws, masonry anchors (if necessary)


- 1. Position the mounting flanges on the wall and mark hole locations.
- 2. For wood or solid backing applications, drill 1/8" pilot holes through the shower wall into the wood or metal stud. If the wall is tiled, start with a 1/8" pilot hole through the tile, then switch to a 5/16" masonry tile drill bit.
- 3. Install screws through the mounting flange into the wood/metal stud or bracing. Use masonry anchors if needed.
- 4. Once the ErgoSafetyBar is securely fastened, align the cover plate locking tabs with slots in the flange. Push the cover against the mounting until it locks.

Installation for Optional Towel Bar

Tools Required: Set screw, screw

Note: The Towel Bar is sold separately at www.PulseShowerSpas.com

TOOLS REQUIRED FOR INSTALLATION

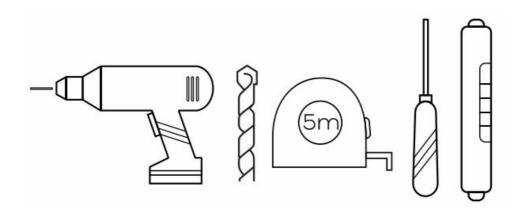

- Electric Drill
- 1/8" wood or metal drill bit
- 5/16" masonry drill bit
- Tape measure

- Screwdriver
- Level

IMPORTANT

- Check local code for proper placement of ErgoSafetyBar to meet requirements such as ADA or ANSI 117.1 Consumer Safety Requirements.
- ERGOSAFETYBAR CAN BE MOUNTED THROUGH SHOWER WALL AND SCREWED DIRECTLY TO WOOD OR METAL STUD WHEN APPLICABLE.


INSTALLATION QUESTIONS

Before returning your ErgoSafetyBar to the store or have any question about installation or missing parts please visit the CUSTOMER CARE area on our website www.PulseShowerSpas.com.

Installation Instructions

- Position mounting flanges and mark hole locations. For wood or solid backing application, drill 1/8" pilot holes tthroughh shower wall into the wood or metal stud.
 NOTE: If wall is tiled, drill a 1/8" pilot hole through tile then change to the a 5/16" diameter masonry tile drill bit.
- 2. Install screws through mounting flange and directly into wood/metal stud or bracing. Use masonry anchors if necessary.
- 3. Once the ErgoSafetyBar is securely fastened to wall, align cover plate locking tabs with slots in flange. Push cover against mounting until it locks.

DETAIL MOUNTING INSTALLATION

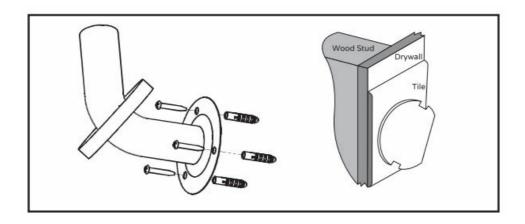

INSTALLATION FOR OPTIONAL TOWEL BAR



Towel Bar sold separately at www.PulseShowerSpas.com

ABOUT COMPANY

- PULSE ShowerSpas, Inc.
- 297 Anna Street
- Watsonville, CA 95076
- 831.724.7300
- www.PulseShowerSpas.com

FAQ

- Where can I find installation help or replacement parts?
 - For installation assistance or missing parts, please visit the CUSTOMER CARE area on our website www.PulseShowerSpas.com.
- Can the ErgoSafetyBar be mounted through a shower wall?
 Yes, the ErgoSafetyBar can be mounted through a shower wall and screwed directly to a wood or metal stud when applicable.
- Are the pictures shown in the manual accurate to the actual product?

No, all pictures shown are for illustration purposes only. The actual product may vary due to enhancements.

Documents / Resources



PULSE 4006-SSB ErgoSafetyBar with Optional Towel Bar [pdf] Owner's Manual

4006-SSB, 4006-SSP, 4006-MB, 4006-ORB, PW-94006-75BSS, PW-940 06-75PSS, PW-94006-75BM, PW-94006-75BRZSS, 4006-SSB ErgoSafet yBar with Optional Towel Bar, 4006-SSB, ErgoSafetyBar with Optional Towel Bar, Optional Towel Bar, Towel Bar

References

User Manual

Related Posts



EMTEK S7010 Towel Bar Installation Guide

EMTEK S7010 Towel Bar Installation Locate Center of Mounting Plates Make two marks on the wall to locate...



REVIVE Chrome Column Radiator Towel Bar Instruction Manual

REVIVE Chrome Column Radiator Towel Bar

DIMENSION Towel Bar Includes 1x radiator towel bar

Only tighten by hand...



HITSLAM B09J4TYQY6 Bath Towel Bar Instruction Manual

HITSLAM B09J4TYQY6 Bath Towel Bar Instruction
Manual SCREW-MOUNT INSTALLATION



(SCHRAUBMONTAGE) Notice ▲ Drillbit size: 7/32inch (5.5mm) (Hinweis Bohrergröße:7/32Zoll (5.5mm...



HITSLAM B09F8XMV8H Bath Towel Bar Instruction

Manual

HITSLAM B09F8XMV8H Bath Towel Bar RECOMMENDED TOOLS INSTALLATION

INSTRUCTIONS Tighten the towel bar Wipe the surface with a...

EMTEK S7010 Towel Bar Installation Guide

EMTEK S7010 Towel Bar Installation Locate Center of Mounting Plates Make two marks on the wall to locate...

REVIVE Chrome Column Radiator Towel Bar Instruction Manual



REVIVE Chrome Column Radiator Towel Bar

DIMENSION Towel Bar Includes 1x radiator towel bar

Only tighten by hand...

HITSLAM B09J4TYQY6 Bath Towel Bar Instruction Manual



HITSLAM B09J4TYQY6 Bath Towel Bar Instruction
Manual SCREW-MOUNT INSTALLATION

(SCHRAUBMONTAGE) Notice ▲ Drillbit size: 7/32inch (5.5mm) (Hinweis Bohrergröße:7/32Zoll (5.5mm...

HITSLAM B09F8XMV8H Bath Towel Bar Instruction

Manual



HITSLAM B09F8XMV8H Bath Towel Bar RECOMMENDED TOOLS INSTALLATION

INSTRUCTIONS Tighten the towel bar Wipe the surface with a...

- Pulse
- 4006-MB, 4006-ORB, 4006-SSB, 4006-SSB ErgoSafetyBar with Optional Towel Bar, 4006-SSP, ErgoSafetyBar with Optional Towel Bar, Optional Towel Bar, Pulse, PW-94006-75BM, PW-94006-75BRZSS, PW-94006-75BSS, PW-94006-75PSS, Towel Bar

Leave a comment

Your email address will not be published. Required fields are marked * Comment * Name Email Website Save my name, email, and website in this browser for the next time I comment. **Post Comment** Search:

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

e.g. whirlpool wrf535swhz

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.

Search