

PUREROYI C21 Smart Watch Bluetooth Call



PUREROYI C21 Smart Watch Bluetooth Call User Manual

[Home](#) » [PUREROYI](#) » PUREROYI C21 Smart Watch Bluetooth Call User Manual 

Contents

- [1 PUREROYI C21 Smart Watch Bluetooth Call](#)
- [2 Product Usage Instructions](#)
- [3 Instructions](#)
- [4 Bluetooth connection guide -Android](#)
- [5 Function Introduction](#)
- [6 Frequently asked question and answers](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

PUREROYI

PUREROYI C21 Smart Watch Bluetooth Call



Specifications

- Model: Smartwatch
- Charging: Magnetic charger with 5V1A USB
- Bluetooth: Version 5.0
- Compatibility: Android and iOS

Product Usage Instructions

Watch Charging and Activation

To activate the watch for first-time use, follow these steps:

1. Attach the magnetic charger to the metal contact on the back of the watch.
2. Connect the other end of the charging cable to a 5V1A USB charging head or a computer USB interface.

Connecting Watch to Phone

To receive calls on your watch linked to your phone:

1. Ensure Bluetooth is turned on on your watch.
2. Follow the Bluetooth connection guide specific to your phone's operating system (Android or iOS).

Function Introduction:

Dial Setting

- Press and hold the dial interface for 3 seconds to enter the dial switching interface.
- Slide left and right to switch between different dial styles.
- After successful Bluetooth connection, customize dials in the APP dial library.

FAQ

How do I pair my watch with my phone?

To pair your watch with your phone:

1. Open the FitCloudPro application on your phone.
2. Search for your device and follow the on-screen instructions for pairing.
3. Ensure Bluetooth is enabled on both devices.

How do I switch between different function menus on the watch?

To navigate between function menus on the watch:

- Slide in the specified direction to access Function Menu 1, Function Menu 2, and Function Menu 3.

How do I activate my watch for first-time use?

To activate your watch

1. Charge the watch using the provided magnetic charger before initial use.
2. Connect the charger to the metal contact on the back of the watch and plug the other end into a USB power source.

USER MANUAL SMARTWATCH

Instructions

Watch client download

Scan the QR code below to download and install it to the watch client.



Touch all: Slide down to enter the status setting bar, slide up to view the notification, slide left to enter the main function interface, and slide right to enter the split-screen menu;


BACK KEY

Short press: Short press on the dial interface to enter the main menu, double-click on the main menu Interface to switch the menu style, short press on other interfaces to return to the dial Long press Power on/off (4-5S)

SPORT KEY

- Short press: Screen on/off, short press on other interfaces to return to the dial
- Long press: Enter the sports list (6-7S)

Watch charging and activation

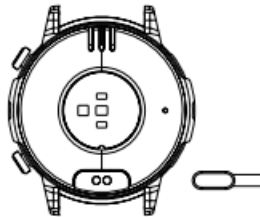

It can be activated by charging before using the watch for the first time;

The magnetic charger used is attached to the metal contact on the back of the watch, and the other end of the charging cable is connected to the 5V1A USB charging head or computer USB interface.

The steps for receiving calls from the watch linked to the phone are as follows.


Note: Before you connect your phone to the watch, please make sure the audio Bluetooth on top of the watch is turned on. (As shown in the picture)




We have uploaded a video on how to connect the watch to the phone to make calls in the QA video section, so you can watch it.

Bluetooth connection guide -Android

1. Open the FitCloud-Pro application.
2. Find it in the list of searched devices. At the bottom of the page, click Start Search for a device with the device name Raptor 2 and click the right link.

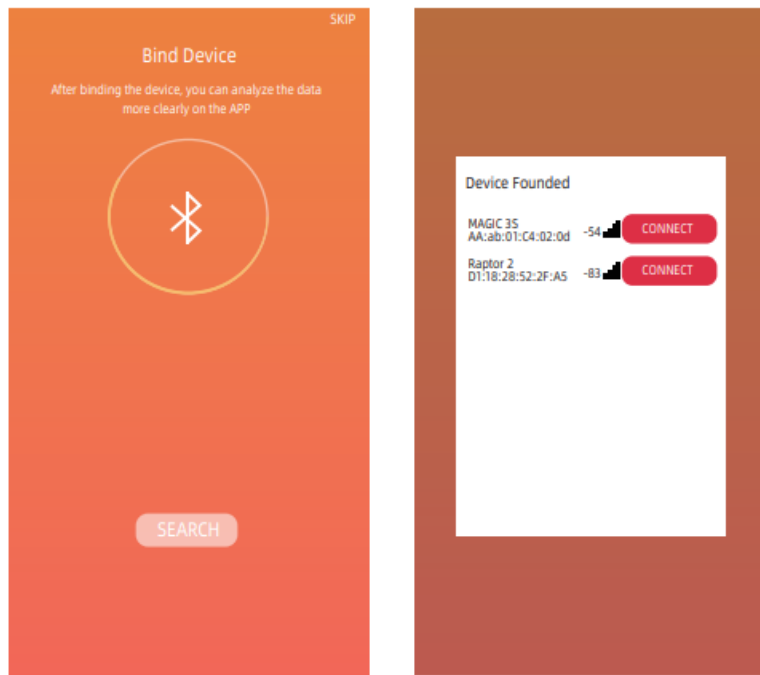


- During the connection process, the phone screen shows that you want to pair with Raptor Call. Check the box to allow access to contacts and call history and click on pairing.

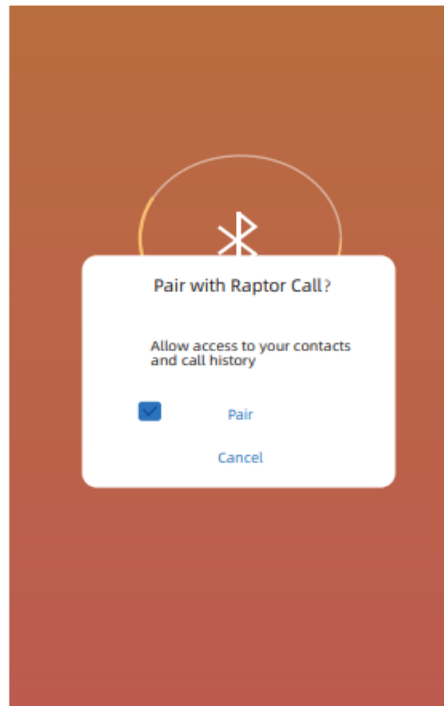


Bluetooth connection guide -IOS

- Open the FitCloud-Pro application
- Find It In the list of searched devices. At the bottom of the page, click Start Search for a device with the device name Raptor 2 and click the right link.

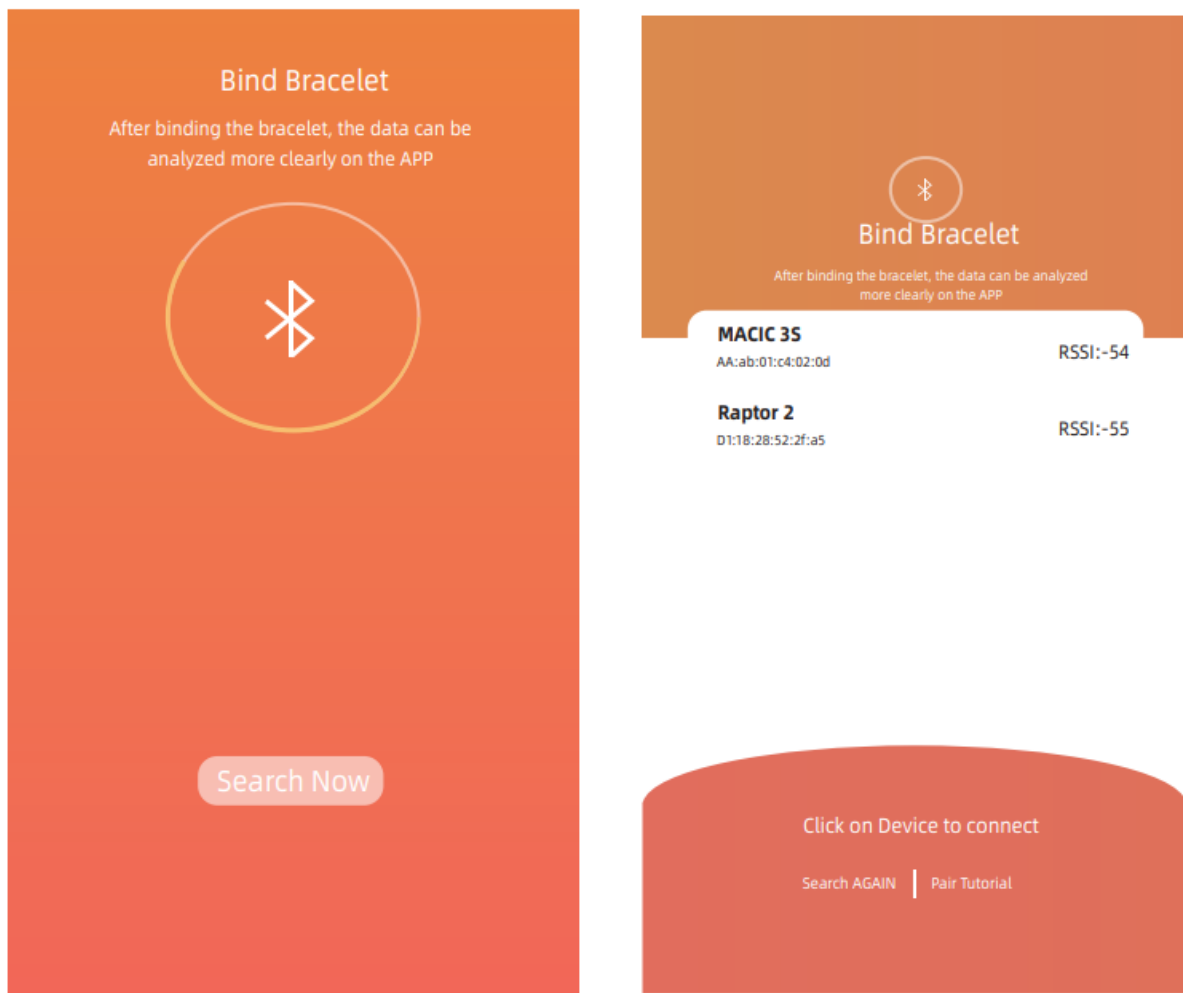


3. Click to pair with Raptor 2.
4. The watch's dial interface swipes down into the status settings bar and click the headset icon to enter Bluetooth 5.0 pairing mode.

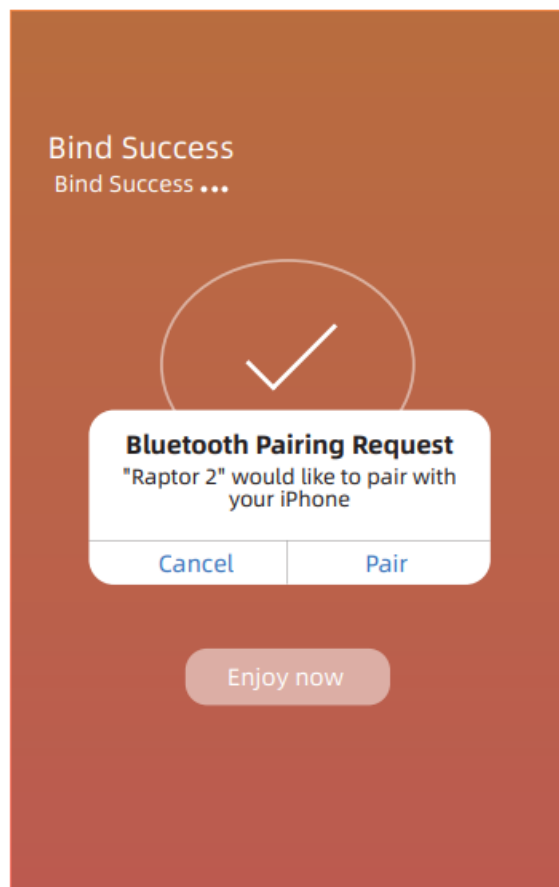

5. Go to iPhone

Settings-Bluetooth interface and select parallel connection of the device named Raptor Call.

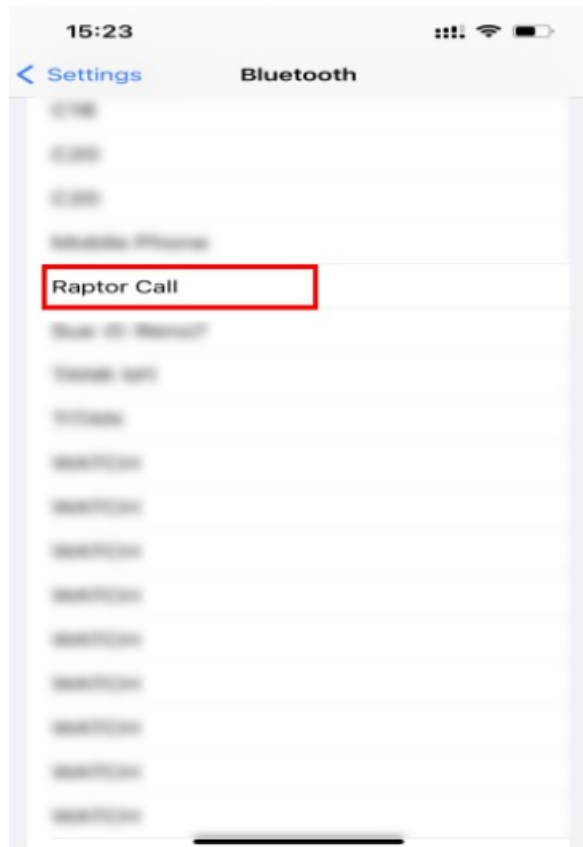

After the watch is successfully bound, everytime the client is opened In the future, the watch will automatically connect with the mobile phone, and the data can be synchronized by pulling down the client data page.

Function Introduction

Dial Setting

Press and hold the dial interface for 3 seconds to enter the dial switching interface, slide left and right to switch the dial to be selected, and click the selected dial to switch the dials of different styles in the watch;
After the Bluetooth connection is successful, enter the APP- dial library-dial center-custom dial;



Step Counting

Total number of steps in 24 hours and the number of steps taken in each period can be recorded. More detailed data can be viewed in the mobile APP



Sleep


You can record and display the total sleep duration and the duration of deep sleep and shallow sleep. More detailed information analysis data records can be viewed on the mobile APP;



Message Push

The watch can receive notification pushes and call alerts from the phone and can reject them, you need to turn on the settings for message pushes on the APP by: device – message alert – on.

The watch message page can store the last 15 message records.

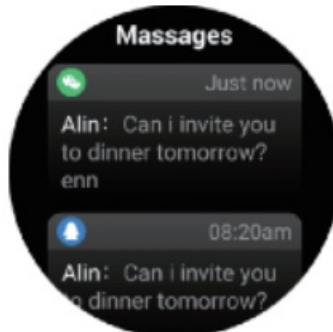

Heart Rate

Before monitoring the heart rate, first make sure that the watch is properly worn on the wrist (the best position is one finger wide above the wrist bone). The heart rate detection requires that the watch be worn tightly to avoid light leakage and cannot be effectively detected, and then enter the heart rate detection. During the detection process, the wrist is required to remain stationary. When entering the heart rate measurement interface, the bottom green light lights up to start measuring. When the measurement is completed in about 45 seconds, there will be a vibration reminder. If you are prompted to "not wear your watch", you need to wear your watch again. Enter the heart rate icon interface to measure the current heart rate value;

Display the current value of the heart rate interface and the heart rate status of each period;



More detailed information analysis and data records can be viewed on the APP side



Audio Mode

After the audio mode is turned on , you can enter

1. Call record: which can record the calls that have been made
2. Common contacts: you can communicate with common contacts by phone.
3. Dial-up: you can dial any phone you need to contact;

Sedentary Reminder

Can be opened in APP [Device>-Sedentary Reminder], after opening, you can set the start time, end time, do not disturb period.



Sports Mode

Click on the exercise interface to enter the exercise interface, which supports walking, running, mountaineering, cycling, basketball, swimming, badminton, football, elliptical machine, yoga, table tennis, rope skipping, tennis, baseball, rugby, hula hoop, golf, long jump, sit-ups, and volleyball 20 sports modes to choose from. Start the exercise, it will display data such as time, steps, heart rate, calories, mileage, etc.


More detailed information analysis and data records can be viewed on the mobile APP;



Alarm Clock

In the APP, you can set the smart alarm clock of the watch.

You can set a single alarm clock, a ring clock, and up to five alarms. After the set time arrives, the watch will display the alarm clock icon and vibrate;

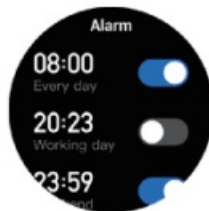


Blood Pressure

Before blood pressure monitoring, first make sure that the watch is properly worn on the wrist (the best position is one finger wide above the wrist bone). Blood pressure testing requires tight wearing to avoid light leakage and cannot be effectively detected, and then enter the blood pressure testing. During the testing process, the wrist is required to remain stationary. When entering the blood pressure measurement interface, when the bottom lights up and starts measuring for 30-60 seconds, there will be a vibration reminder when the measurement is completed. This measurement is based on PPG technology.

Enter the blood pressure Icon Interface to measure the current blood pressure value;

More detailed information analysis and data records can be viewed on the APP side;

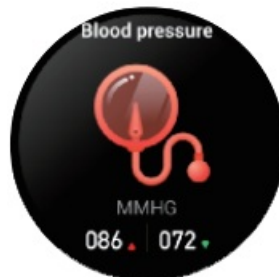

Blood oxygen

Before blood oxygen monitoring, first make sure that the watch is properly worn on the wrist (the best position is one finger wide above the wrist bone). Blood oxygen testing requires that the watch be worn tightly to avoid light leakage and cannot be effectively detected, and then enter the blood oxygen testing. During the testing process, the wrist is required to remain stationary. When entering the blood oxygen measurement interface, when the bottom lights up and starts measuring for 30-60 seconds, there will be a vibration reminder when the measurement

is completed. This measurement is based on PPG technology.

Enter the blood oxygen icon interface to measure the current blood oxygen value;

Display the current value of the blood oxygen interface and the blood oxygen status of each period; Mors detailed information analysis and data records can be viewed on the APP side;



Weather

After the watch is connected to the APP, this weather interface will display the real-time weather temperature and weather type; Show the weather of the day and the weather of the next three days;

The weather information needs to be connected to the APP to get data. If the connection is opened for a long time, the weather information will be updated;



Music Control


After the watch is connected with the APP, it can control the pause and start of the mobile music player, volume adjustment and song switching;

When the mobile phone plays music, you can use the watch to control the mobile phone to play/pause, the previous song and the next song.



Timer

In the timer function, the system presets the common time duration, users can click the corresponding time duration to quickly time, or click the custom button to set the time. Clicking the Start button stops the timer. Clicking the Pause button stops the timer, and clicking the Reset button starts the timer at zero.

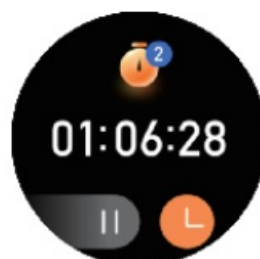


Other Functions

Other functions of the watch include: stopwatch, mobile phone search, female , settings,etc.




Set Up

Settings include menu styles (screen displayer, battery, vibration intensity, language, QR code, password, system).

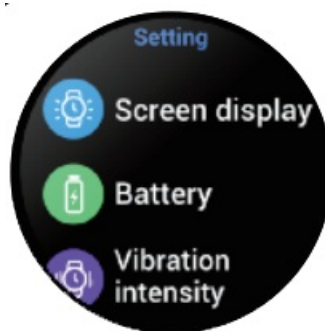

The box contains

- Watch dial *1
- Watch strap *2
- Charging cable *1
- Manual *1
- Screen protector *1

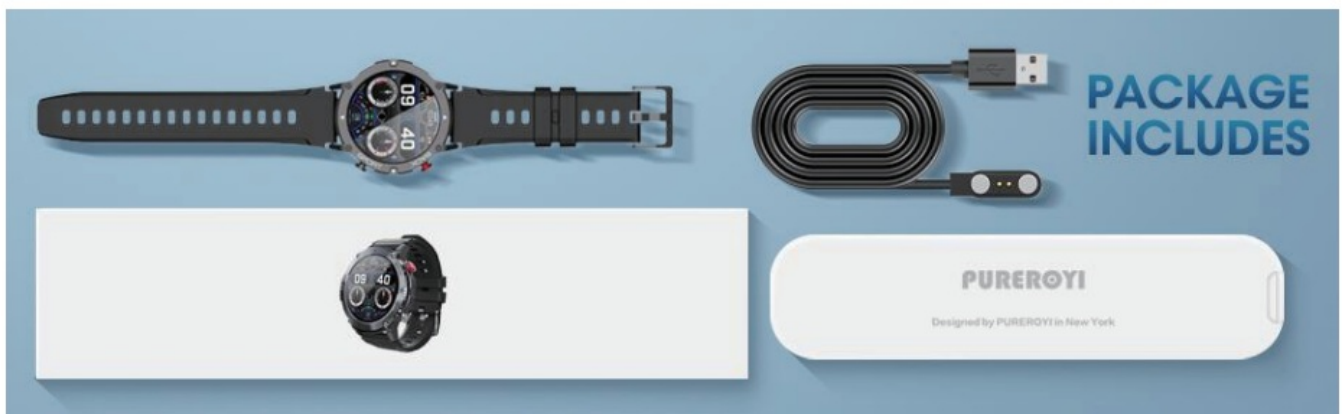

Frequently asked question and answers

- Why can't take a hot bath with my watch?

The bath temperature is relatively high, which will produce a lot of water vapor;

- **Does the watch need to be charged when first receive it and how long does it usually take to charge?**

Generally the first time you receive the watch power is full and does not need to be charged, it usually takes 2-3 hours to be fully charged.

Why can't the watch receive the message push?


Android phone settings:

1. Confirm that the message push switch is turned on at the mobile APP end;
2. The confirmation message can be displayed normaly on the mobile phone notification bar, and the watch message is pushed by obtaining the mobile phone notification bar message; If there is no message in the mobile phone notification bar, the watch will not be able to receive the push; (You need to find the notification settings in the mobile phone settings and turn on the notification switches of WeChat, QQ, phone, SMS and mobile phone clients)
3. Turn on the accessibility settings of the watch (Find the auxiliary function in the phone settings, and open the customer auxiliary function settings on the watch side)

Apple mobile phone set:

1. Confirm that the message push switch is turned on at the mobile phone client;
2. Confirm that the mobile phone message can be displayed normaly in the notification bar;(You need to find the notification setings in the mobile phone settings and turn on the notification switches of WeChat, QQ, phone, SMS and mobile phone clients)

Documents / Resources

	PUREROYI C21 Smart Watch Bluetooth Call [pdf] User Manual C21 Smart Watch Bluetooth Call, C21, Smart Watch Bluetooth Call, Watch Bluetooth Call, Bluetooth Call
---	--

References

- [User Manual](#)

[Manuals+](#). [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.