

puzhen PZ-PA055 Gemini Diffuser Instruction Manual

Home » puzhen » puzhen PZ-PA055 Gemini Diffuser Instruction Manual

Contents

- 1 puzhen PZ-PA055 Gemini
- Diffuser
- 2 Product Usage Instructions
- 3 Diagram
- **4 Operating Instructions**
- **5 Functionality**
- **6 Safety and Care Instructions**
- 7 Cleaning and Maintenance
- 8 Troubleshooting
- 9 Specifications
- 10 FAQ
- 11 Documents / Resources
 - 11.1 References





Specifications

• Brand: Puzhen Life LLC

• Model: Gemini Diffuser Orion Diff PZ-PA055

Made in: ChinaCopyright: 2017

Product Usage Instructions

- 1. Lift vertically and remove the outer cover.
- 2. Press the atomizing chamber to make it automatically pop out, and then take it out.
- 3. Use the matching bottle opener to remove the inner stopper from the essential oil bottle.
- 4. Place the essential oil bottle into the atomization chamber.
- 5. Tighten the essential oil bottle counterclockwise onto the atomization chamber.
- 6. Align the markings on the atomization chamber with the markings on the diffuser. Press them vertically into the slot in the direction of the arrow.
- 7. Assemble the outer cover according to the markings. Connect the power supply.
- 8. Press the Power on/off key and the Mist key to start the diffuser working.

Functionality

Button	Functions	
Power on/off key	Short press to turn on the diffuser. Press again to turn it off. Long press for 3 seconds to restore factory settings.	

- 1. Scan the QR code below or search for Puzhen in the App Store to download and install the Puzhen Life App.
- 2. Access the App and add the device according to the prompts.


Scan the QR code to learn more product instructions



Operation Manual

Please read this user manual carefully before using this product


Diagram

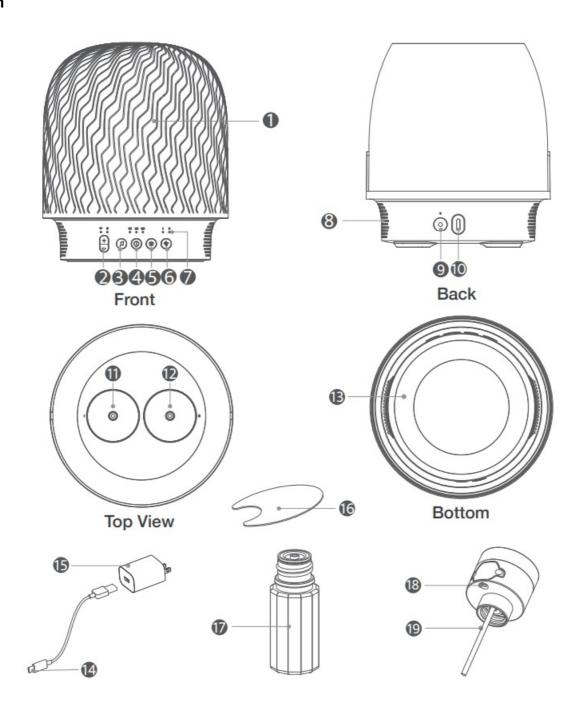

- 1. Outer cover
- 2. Music volume key
- 3. Music key
- 4. Timer key
- 5. Light key
- 6. Mist key
- 7. Misting indicator
- 8. Speaker
- 9. Power on/off
- 10. DC power inlet
- 11. Pump I
- 12. Pump II
- 13. Non-slip mat
- 14. Type C plug
- 15. Power adapter
- 16. Bottle opener
- 17. Essential oil bottle
- 18. Nozzle air intake
- 19. Oil pipe

Operating Instructions


- 1. Lift vertically and remove the outer cover
- 2. Press the atomizing chamber to make it automatically pop out, and then take it out.
- 3. Use the matching bottle opener to remove the inner stopper from the essential oil bottle.
- 4. Place the essential oil bottle into the atomization chamber.

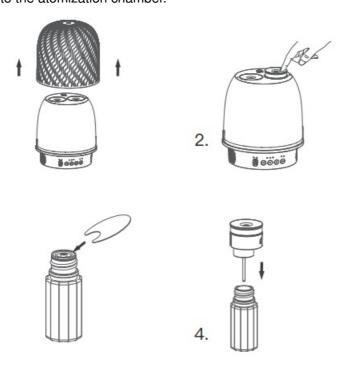

- 3.
- 5. Tighten the essential oil bottle counterclockwise onto the atomization chamber
- 6. Align the markings on the atomization chamber with the markings on the diffuser. Press them vertically into the

slot in the direction of the arrow.

- 7. Assemble the outer cover according to the markings. Connect the power supply.
- 8. Press the Power on/ off key and the Mist key to start diffuser working.

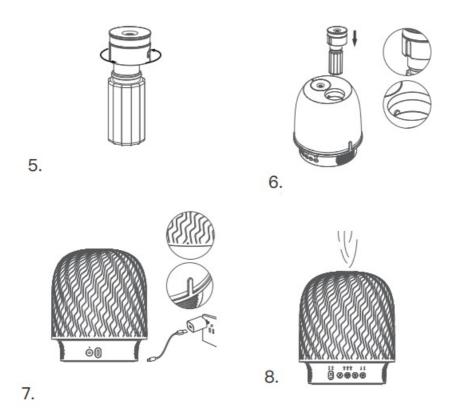

Functionality

Button	Functions
(b)	Short press to turn on the diffuser (The default setting is: 1 hour timing, level of atomizing chamber I, candle light, playing built-in music).
	Press again to turn off the diffuser.
	Note: When the diffuser is running, press and hold this button for 3 seconds, the diffuser will r estore factory setting. The network configuration mode will be automatically turned on. The B luetooth and WiFi need to be reconnected.
+	When playing music, short press to increase the volume by one level. Long press to increase the volume continuously.
	When playing music, short press to decrease the volume by one level. Long press to decreas e the volume continuously.
L	When the diffuser is running, short press to set the running time: 1 hour, 4 hours, and 8 hours .
	Short press to turn on the Bluetooth music mode. Press again to turn off the music. Press again to turn on the built-in music mode.
	When the diffuser is running, short press to change the light colors one by one: candle light, light blue, yellow, light purple, dark purple, warm white, gradient color.
	When the device is running: Press this button to select which atomization chamber to emit fo
	g; The order is:
	"I" atomization chamber produces fog, "II" atomization chamber closes; "I" atomization chamber is closed, "II" atomization chamber emits fog; "I" atomization chamber emits fog, "II" atomization chamber is closed, "II" atomization chamber is closed, "II" atomization chamber is closed;
	Plug the Type C cable into the DC power inlet. The orange indicator means charging.
	The white indicator means the battery is full charged.
	If this indicator does not light up, it means improper connection.

Connect to App

1. Scan the QR code below. Download and install the Puzhen Life App.

- 2. Or search for "Puzhen" in the App store. Download and install the Puzhen Life App.
- 3. Access the App and add the device according to the prompts of the App.

Note APP download address https://app.puzhen.link/#/download



To add a device

- 1. Access the App, complete the registration and login.
- 2. Click "Add Device".
 - 1. Step 1: Connect the device with power.
 - 2. Step 2: Turn on the device. Long press the power on/off button to enter the network configuration mode.
 - 3. Step 3: After the network is successfully configured, you can use the App to operate various functions.

Safety and Care Instructions

Please read and follow these safety guidelines closely to ensure safe operation of the diffuser.


- 1. Unplug the diffuser immediately and discontinue use in the event of smoke or burning smell.
- 2. Never wrap the adapter/diffuser with cloth, paper, etc. Such actions may result in damage to the diffuser or fire.
- 3. Never touch the adapter/USB cable with wet hands as electric shock or injury may occur.
- 4. Do not disassemble or attempt to repair the diffuser, this will void the warranty.
- 5. Never immerse the diffuser in water.
- 6. Unplug the adapter when refilling, cleaning, or moving the diffuser.
- 7. Keep the diffuser out of reach of children.
- 8. Do not disassemble the nozzle during operation
- 9. Do not put your fingers on the spray nozzle during operation to avoid injury.
- 10. Do not place acidic or alkaline chemicals in the spray nozzle.
- 11. Use only a 5V 2A power adapter that meets safety standards.
- 12. Do not shake the diffuser.
- 13. Do not use metal objects to clean the nozzle. Use only a coton swab or cloth dipped in rubbing alcohol or a neutral detergent.
- 14. Never use the product for purposes other than those listed in this manual.
- 15. If the unit will not be used for an extended period or needs to be relocated, unplug the power adapter, take out the essential oil bottle, and wipe the nozzle clean before storage.
- 16. Clean the nozzle before switching to different essential oils.
- 17. The product is designed for using 100% pure, natural essential oil. Chemical fragrance, spice or impure essential oil used may cause product damage.

- 18. Do not move the product during its operation. Pull the power adapter instead of the wire to unplug.
- 19. Do not place the product in direct sunlight or close to a refrigerator, a fan or other hot environment.
- 20. Place the device on a flat and solid surface instead of uneven and/or unstable ones like carpets or rugs etc.

Cleaning and Maintenance

In order to avoid cross-flavors of different essential oils, it is highly recommended to use separate nozzles for only a single essential oil. Spare nozzles are available for purchase.


It is recommended to clean the nozzle with alcohol weekly, according to the instructions below:

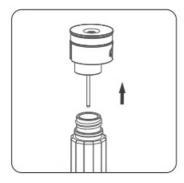





- 1. Remove the atomization chamber from the diffuser and unscrew the essential oil bottle clockwise.
- 2. Replace the essential oil bottle with a bottle filled with 75% alcohol. Put it back into the atomization chamber and load it into the diffuser.
- 3. Set 1 hour timing to clean.
- 4. Then unscrew the nozzles off again. Rinse the nozzles from bottom. Pull out and rinse the filter Use dry cloth to wipe them clean.
- P.S. The two included empty bottles are meant to be cleaned with alcohol.

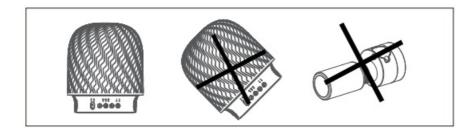

Please do not tip or tilt the diffuser or the atomizing chamber containing the essential oil bottles, as this will cause the essential oil to leak into the diffuser and damage the diffuser.

Troubleshooting

Issue	Possible Cause	Solution
The diffuser does not turn o n.	The battery is low.	Connect the charger to charge, confirm w hether the charging indicator light is on, a nd then try again later.
The working indicator is nor mal, and the nozzle has air flow, but there is no spray or the spray is abnormal	 The pump is not properly and securely inserted. The oil bottle is empty or lower th an the end of the oil pipe. The oil pipe is not securely attach ed to the pump. 	1.Remove the pump from the diffuser. Realign the markings and press down to s ecure the pump. 2.Add more essential oil or change out the bottle. 3.Remove and reinsert the oil pipe into the pump.
The working indicator is nor mal, and no air flow from th e nozzle.	The machine is in a stopped state for intermittent working mode.	Wait for the stop state to end, or reset the working time to determine whether it is in the stop state for intermittent working.
Oil is leaking from the pump	1.The atomization chamber and the essential oil bottle are placed at an in clined position. 2.The essential oil bottle is not tightened. 3.The sealing ring of the essential oil bottle is lost.	 Essential oil bottles should not be place d on an inclined or flat lying down. Tighten the essential oil bottle Check whether the seal ring of the essential oil bottle is normal.
The misting is small.	There is grease in the atomization ch amber and atomization nozzle.	Clean the atomizer chamber and atomizer nozzle according to "Cleaning and Mainte nance".
Weak Bluetooth signal	Is there some obstacles between the phone and the diffuser? Is it too far a way?	Stay away from obstacles Get close to your phone
Bluetooth doesn't connect	Did it already connect to another pho ne?	 Disconnect the Bluetooth with the mobil e phone. Press and hold the power on/off button for 3 seconds to disconnect the Bluetooth connection.
WiFi doesn't connect	 The device has been bound to another account. The network is abnormal. 	Reset the device. Check the network.

Specifications

Product Name: Gemini Diffuser

• Diffuser Item No: PZ-PA055

• Dimensions: Φ x H=143.5mm x 170mm

• Material: Metal ABS PP

• Weight: 1.4kg

• Power source: DC 5V 2A

• Power: 10W

• Essential: 15ml premium essential oil

• Coverage area: 600 sq feet

• Diffusion run time: 1-12Hchoose

• Environment: Indoor

FCC ID: 2BF67-PZPA055

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental
 capabilities, or lack of experience and knowledge unless they have been given supervision or instruction
 concerning use of the appliance by a person responsible for their safety. Children should be supervised to
 ensure that they do not play with the appliance.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modification: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

- 1. This device may not cause interference.
- 2. This device must accept any interference, including interference that may cause undesired operation of the device.

FCC& IC Radiation Exposure Statement:

This equipment complies with FCC and Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Manufacturer:

- Puzhen Life Co., Itd.
- www.puzhenlife.com
- 420 E Main St, 2nd FI, Middletown, NY10940

Orion Diffuser PZ-PA055 DC 5V 2A

FAQ

Q: How do I clean the diffuser?

A: To clean the diffuser, unplug it and empty any remaining water and essential oil. Use a soft cloth dampened with water to wipe down the inside of the diffuser. Do not use harsh chemicals or abrasive materials.

Q: Can I use any essential oil brand with this diffuser?

A: It is recommended to use high-quality essential oils from reputable brands to ensure compatibility and optimal performance of the diffuser.

Documents / Resources



puzhen PZ-PA055 Gemini Diffuser [pdf] Instruction Manual
 PZPA055, 2BF67-PZPA055, 2BF67PZPA055, PZ-PA055 Gemini Diffuser, PZ-PA055, PZ-PA055
 Diffuser, Gemini Diffuser

References

- Opuzhenlife.com
- <u>app.puzhen.link/#/download</u>
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.