

R-Go Split Break Ergonomic keyboard User Manual

Home » R-Go » R-Go Split Break Ergonomic keyboard User Manual

Contents

- 1 R-Go Split Break Ergonomic keyboard
- 2 What's in the box?
- 3 Product overview
- 4 Set up
- **5 Troubleshooting**
- **6 Function keys**
- 7 Documents / Resources
- 8 Related Posts



R-Go Split Break Ergonomic keyboard




Welcome

Our ergonomic R-Go Split Break keyboard offers all the ergonomic features you need to type in a healthy way. The two keyboard parts can be placed in any desired position. This unique design prevents reaching with the arm and ensures a natural and relaxed position of the shoulders, elbows, and wrists. Thanks to the light keystroke, minimal muscle tension is needed while typing. Its thin design ensures a relaxed, flat position of hands and wrists while typing. The R-Go Split Break keyboard also has an integrated break indicator, which indicates with colour signals when it is time to take a break. Green means you are good to go, orange means it is time to take a break and red means you have skipped a break. #stayfit

System requirements/Compatibility: Windows XP/Vista/10

What's in the box?

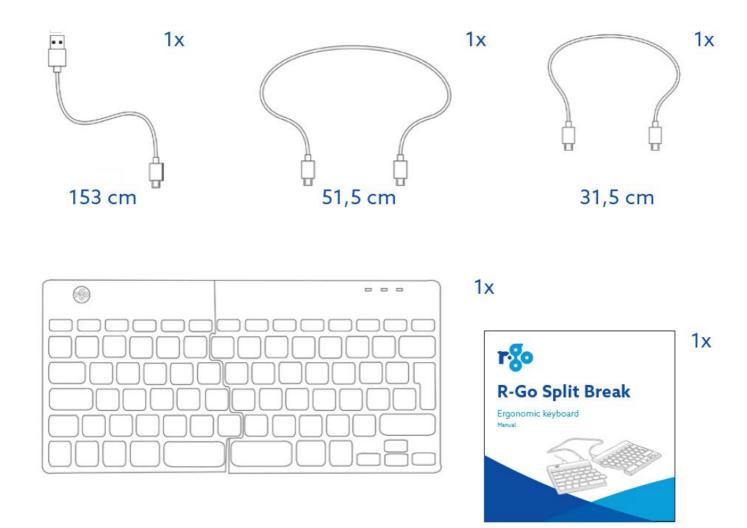


R-Go Break

Download the R-Go Break software at www.r-go-break.com

The R-Go Break software gives you insight into your work behaviour. The R-Go Break devices are equipped with a LED light. This light changes colour during use to indicate when it is time to take a break.

Product overview

- 1. Cable to connect keyboard to PC
- 2. Cable (31,5 cm) to connect the two parts
- 3. Cable (51,5 cm) to connect the two parts
- 4. R-Go Break indicator
- 5. Num Lock indicator
- 6. Caps Lock indicator
- 7. Scroll Lock indicator

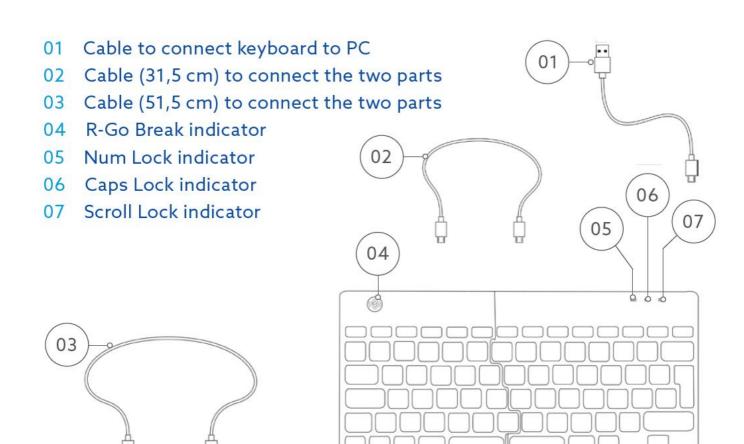

Set up


Overview USB-ports

- 1. Hub other devices (no connect to computer)
- 2. Connect to computer
- 3 & 4. Connect between two keyboard parts
- A. Connect the two parts by plugging cable 02 or 03 into port 03 and 04.


Overview USB-ports


- Hub other devices (no connect to computer)
 Connect to computer
 & 4. Connect between two keyboard parts
- 01 02 03 04 01 ®

A. Connect the two parts by plugging cable 02 or 03 into port 03 and 04.

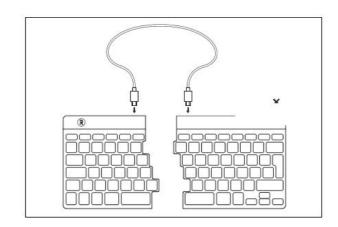

- **B.** Connect the keyboard to your computer by plugging the USB-C end of cable 01 into port 02 and the other end into the USB-port of your computer.
- C. (Optional) Connect Numpad or another device to the keyboard by plugging them into port 01.
 - B. Connect the keyboard to your computer by plugging the USB-C end of cable 01 into port 02 and the other end into the USB-port of your computer.
- C. (Optional) Connect Numpad or another device to the keyboard by plugging them into port **01**.

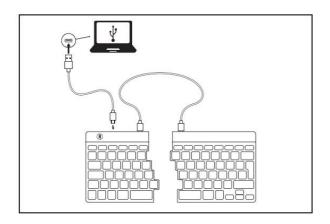

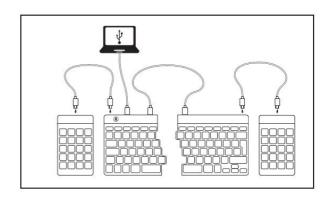

Troubleshooting

Is your keyboard not working properly, or do you experience problems while using it? Please follow the steps mentioned below.

Check if the keyboard is connected using the correct connectors and cables (page 7)

- Connect the keyboard to another USB port of your computer
- Connect the keyboard directly to your computer if you are using an USB hub
- Restart your computer
- Test the keyboard on another computer, if it is still not working contact support (www.r-go-tools.com)

Function keys

The function keys available depend on the version of your keyboard. To identify your keyboard, check the label on the bottom.

The function keys are marked on the keyboard in light blue.

To activate a function on the left side of your keyboard, hold down the Fn-key at the same time as the selected function key. Only activates function keys on the left side of the keyboard.

To use the Numpad integrated in the right side of the keyboard (printed on the keyboard in light blue) activate Num Lock. To use normal keys again, deactivate Num Lock. Only activates the integrated Numpad on the right side of the keyboard.

Note: Fn + A = Break indicator light On/Off

Documents / Resources



R-Go Split Break Ergonomic keyboard [pdf] User Manual Split Break Ergonomic keyboard

Manuals+,