

# ROCKETPEN EXAM Smart Reading Pen User Guide



## Contents

- 1 Quick Start Guide
  - 1.1 Content of box
  - 1.2 RocketPen Parts
  - 1.3 Getting Started
  - 1.4 ExamRead Application
  - 1.5 Reading Aloud
  - 1.6 ExamRead Settings
- 2 Documents / Resources
  - 2.1 References
- 3 Related Posts

## Quick Start Guide



## Content of box

- RocketPen Exam

- USB Type-C cable
- Earphones
- Quick Start Guide

# SmartPens<sup>4U</sup>

**Thank you for buying RocketPen Exam from SmartPens4U.**


RocketPen Exam is designed to be a reading assistant, and our goal is to make you an independent reader. Whether you need to read exam questions, do your homework, or simply want to read your favorite novel, we hope reading becomes less challenging and more enjoyable for you.

RocketPen Exam is a standalone and self-contained product and works without being connected to any other device or network.

For technical specification and further information regarding additional features, supported languages, upgradability, battery, etc., please see: [www.smartpens4u.com](http://www.smartpens4u.com)

Copyright© SmartPens4U Ltd.

## RocketPen Parts

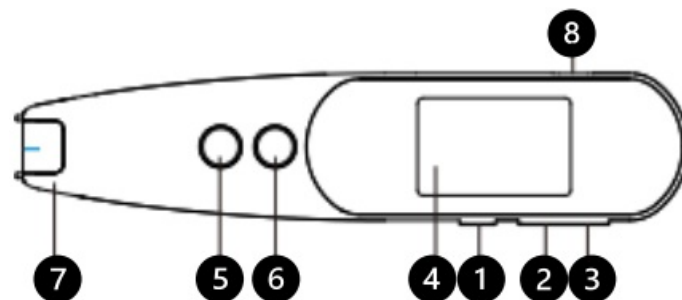

### 1 - Power On/Off

Press 3 seconds to power on or off. Press briefly to return from power-saving mode.

### 2 - Volume down button

### 3 - Volume up button

### 4 - Screen

The device's display touch screen

### 5 - Read aloud button

### 6 - Back button

### 7 - Scan Trigger

Automatically activated when the pen is in contact with a surface. Scan light is turned on

### 8 - Type-C USB connector

Used for charging, upgrading and earphones




### 9 - Speaker

Used when text is read aloud. Muted when earphones are connected. 3

## Getting Started

Press and hold the Power button for about 3 seconds. When the RocketPen Exam logo appears, release the button. After that, a logo animation should run, followed by Interface Language selection window:

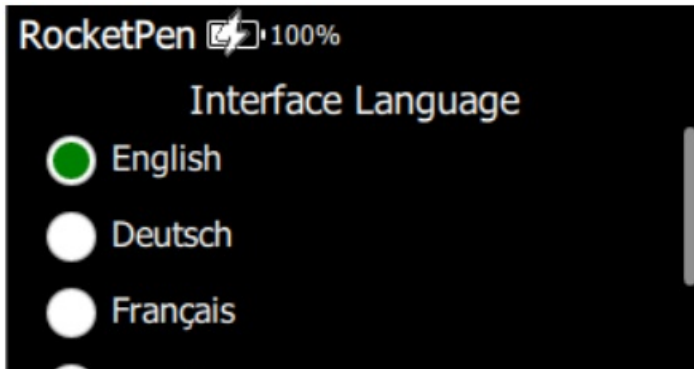


(Note: If the display does not light up, charge the device for about 30 minutes).

After selecting the required Interface Language, the main menu appears:




## ExamRead Application


1. Press the ExamRead application. A **Scanning Language** selection window appears:

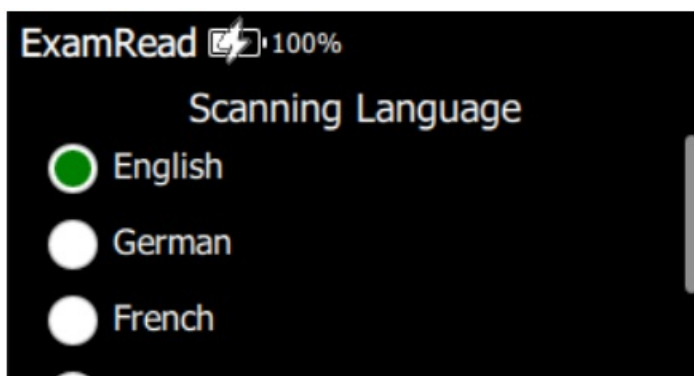


2. Once a scanning language was selected, a **Select Voice** list appears:

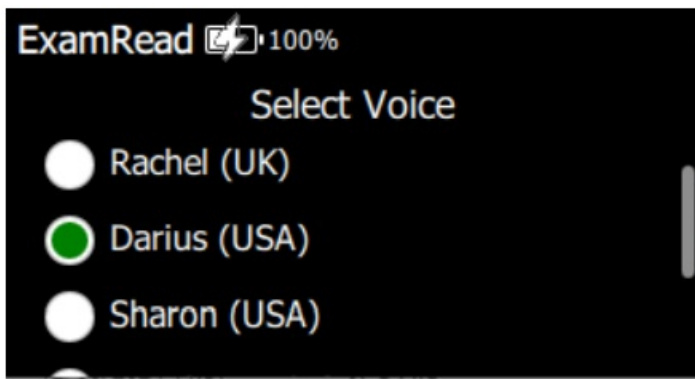

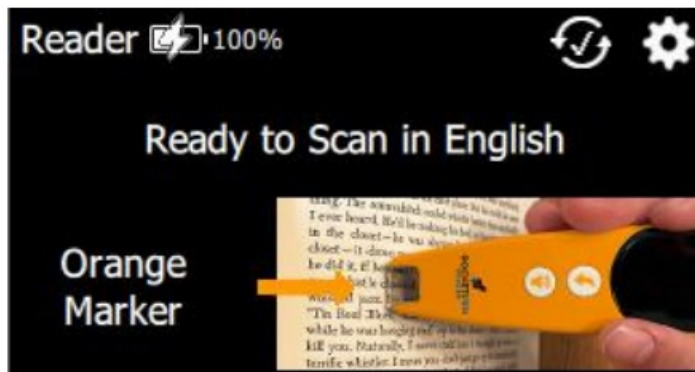

3. After selecting the required voice, press Back button  and “Ready to Scan in...” screen appears:





4. There are 2 scanning modes:
- a. Continuous scanning
  - b. Single line scanning.

The default is Continuous scanning. Scan the lines one after another. By pressing the Read aloud button , the entire scanned text will be read aloud. Each word will be highlighted as it is spoken.

To activate single line scanning mode, press the icon .

To reactivate continuous scanning mode, press the icon .

### Reading Aloud

To read aloud the entire scanned text, press the Read aloud button  and the scanned text will be read aloud. If you wish to read only part of the scanned text, click on the word you wish to start from, and then press the Read aloud button. At any moment, pressing the Back button  stops reading aloud.



### Scanning Language

View a list of available scanning languages. Use this option to change the current selection.

### Voice Settings

Use this option to modify the volume and reading speed default, and to select a different voice.

### General Settings

The General Settings includes the following general Pen settings:

### Brightness

Use this option to adjust the brightness of the display.

### Screen Standby Time

Use this option to change the default standby time.

### Auto Shut-off Time

Use this option to change the default shut-off time.

### Left-Handed User

Use this option to switch to left-handed user.

### Scan Right-to-Left

Use this option to switch to right-to-left scanning.

### Interface Language

View the list of available interface languages and change the default language.

### Software Upgrade

Use this option to upgrade the RocketPen software.




### Factory Reset

Use this option to reset all preferences.



RocketPen Exam is the trademark or registered trademark of SmartPens4U Ltd.

Quick start guide version:

A1.14E

 <p>Quick Start Guide</p>  <p>Content of box</p> <ul style="list-style-type: none"> <li>• RocketPen Exam</li> <li>• USB Type-C cable</li> <li>• Earphones</li> <li>• Quick Start Guide</li> </ul> 	<p><b><a href="#">ROCKETPEN EXAM Smart Reading Pen</a></b> [pdf] User Guide  A114E, EXAM Smart Reading Pen, EXAM, Smart Reading Pen, Reading Pen, Pen</p>
---	---

## References

-  [Home - SmartPens](#)
-  [Home - SmartPens](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.