



sauermann Si-TT3 Dual Input Thermometer User Manual

[Home](#) » [sauermann](#) » sauermann Si-TT3 Dual Input Thermometer User Manual 



USER MANUAL



Si-TT3

DUAL INPUT THERMOMETER

www.sauermanngroup.com



Contents

- 1 Instrument description
- 2 Safety and environment
- 3 Standard
- 4 Technical specifications
- 5 General features
- 6 Dimensions
- 7 Accessories
- 8 Probes connection
- 9 Operating instructions
- 10 Maintenance
- 11 Warranty
- 12 Mobile App
- 13 Documents / Resources
 - 13.1 References
- 14 Related Posts

Instrument description

The Sauermann Si-TT3 is a dual input thermometer measuring instrument. In addition to the measurement of T1 & T2 thermocouple temperature, the delta temperature is also calculated.

- A. T1 K thermocouple connection
- B. T2 K thermocouple connection
- C. LCD screen
- D. On/Off & backlight button
- E. Hold/Min/Max/Live value button



Safety and environment



About this document

Please read this document and familiarize yourself with the product before putting it to use. Keep this document on hand so that you can refer to it when necessary.

Pass this documentation on to any subsequent users of the product.

Avoid personal injury/damage to equipment

- This device has been developed for thermocouple temperature measurement and for indoor use. Please always use the device in accordance with its intended use and within parameters described in the technical features in order not to compromise the protection ensured by the device.
- Only the accessories provided with the device or available as an option must be used.
- Never store the product together with solvents, acids, or other aggressive substances.
- Only carry out maintenance and repair work that is described in the documentation.

Follow the prescribed steps when doing so. Use only original spare parts from Sauermann.

- If the device falls or in case of similar inconveniences, or if an irregular malfunction appears, please do not use the device and bring it back to your distributor to ensure your own safety.
- The device must not be used in ATEX zones according to applicable standards.
- Do not use the device next to explosive gases, vapor, or dust.
- The device does not contain any internal parts repairable by the user. Do not open the instrument.
- This device can pose a risk for wearers of pacemakers. Respect a distance of at least 10 cm (4") between the device and the wearer.
- Observe safety distances to products that can be damaged by the magnetic field (e.g. monitors, computers, credit cards).



In order to avoid any risk of a voltage on the surface of the element on which we want to perform a temperature measurement, the thermocouple(s) **MUST NOT** be under a voltage higher than 30 V alternating or 60 V direct voltage relating to the earth.



In order to avoid any damage to the device, the voltage between the two thermocouples **MUST NOT** be higher than 0.5 V.

Important information about the included probes

- Do not apply a temperature higher than 300°C, otherwise, it may damage the probe.
- Do not apply on abrasive liquid and gelatin type measurement.
- Do not over bending the probe during measurement to avoid damage.
- The included probe is not suitable for liquid measurements.

Exclusions and restrictions of liability

The application operation is under the exclusive customer or user entity responsibility, who acknowledges using this system at his/her own risk. The customer or user entity explicitly exclude Sauermann, and every other company through which it could have been sold of any kind of responsibility or warranty regarding any direct, indirect, accidental, consecutive, or non-consecutive damage that could have been subjected, for some or all, by partial or total non-respect, voluntary or involuntary, of recommendations, conditions and prerequisites indicated hereafter.

Symbols used



For your safety and in order to avoid any damage to the device, please follow the procedure described in this user manual and read carefully the notes preceded by the following symbol:



The following symbol will also be used in this user manual, please read carefully the information notes indicated after this symbol:



Warning: possibility of electric shock

Protecting the environment



Send back the device at its end of working life in a waste collection center for electrical and electronic components (according to local regulations), or send it back to your distributor to ensure a required waste collection in the respect of the environment.

Standard

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Sauermann could voice the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

© 2020 Sauermann. All rights reserved. Sauermann & Si-HVACR Measurement MobileApp are the exclusive property of Sauermann. Non contractual document. The product's functionalities and visual appearances can be modified without prior notice. Smartphones or tablets are not supplied with Sauermann products.

Technical specifications

Parameter	Measuring units	Accuracy*	Measuring range**	Resolution
Temperature	°C, °F	$\pm 0.4^{\circ}\text{C}$ from 0 to 1300°C $\pm (0.3 \% \text{ value} + 0.4^{\circ}\text{C})$ from -200 to 0°C $\pm 0.8^{\circ}\text{F}$ value from 32 to 2372°F $\pm (-0.3\% \text{ value} + 0.8^{\circ}\text{F})$ from -328°F to 32°F	-200 to $+1300^{\circ}\text{C}$ -328 to 2372°F	0.1°C 0.1°F (1°F from 2000 to 2372°F)

*All the accuracies indicated in this technical datasheet were stated in laboratory conditions and can be guaranteed for measurements carried out in the same conditions, or carried out with calibration compensation.

**Measuring range of the included probes: from -40 to $+260^{\circ}\text{C}$ (-40 to 500°F)


General features

Measuring element	2 x K Thermocouple wire probes, class 2 Visible welding, isolated PEA, 1 m (39.37') cable length Output on miniature male compensated connector
Connector	2 inputs on miniature female compensated connector
Display	Integrated 2-line LCD 7 segment monochrome display with backlight
Housing	ABS-PC and TPE.1P54
Keypad	1 ON/OFF & Backlight button 1 Hold/Min/Max/Live & Differential temp/ T1 & T2 button
Standards & Directives	2011/65/EU RoHS II (EU)2015/863; 2012/19/EU WEEE; 2014/53/EU RED
Power supply	3 alkaline batteries LRO3 AAA 1.5 V
Supply voltage	4.5 V
Consumption	135 mW
Battery life	400 hours* (without a backlight and without wireless communication)
Wireless communication	Range frequency from 2402 MHz to 2480 MHz with a transmit power of 0 dBm. Range up to 15 m (98 ft), depending on smartphone radio strength. Minimum required versions: Android 5.0, iOS 12.4, BLE 4.0
Ambiance	Air and neutral gas
Operating conditions	From -10 to $+60^{\circ}\text{C}$ (14 to 140°F) In noncondensing conditions Altitude: from 0 to 2000 m (6561')
Storage temperature	From -20 to $+70^{\circ}\text{C}$ (-4 to 158°F)*
Auto shut-off	10 minutes (can be deactivated)
Weight (with batteries) Weight (with batteries and 2 probes)	210 g (7.4 oz) 224 g (8 oz)

*Battery life is given at 20°C (68°F) with alkaline batteries

**If the instrument is stored outside the operating temperature (for example in a van, a warehouse, etc.), please wait for 10 minutes in its operating temperature before starting and using it.

Dimensions

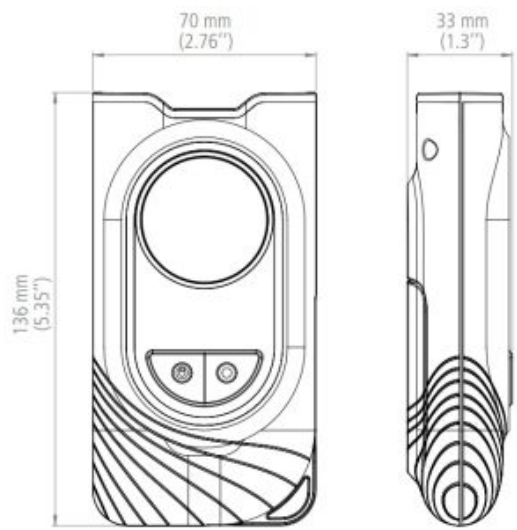

Accessories

Name	Reference
K Thermocouple wire probe class 2 Visible welding, isolated PFA, 1 m (39.37") cable length. Output on the miniature male compensated connector	SIA CCTV
Softcase	SIACCSC



Probes connection



Probes have a connection direction: when you face the instrument (as shown on the opposite picture), the largest pin is on the left and the finest one is on the right of the connector.



Operating instructions

Insert the batteries

- Unscrew the batteries compartment cover at the back of the device and remove the cover.
- Put the 3 alkaline AAA LR03 1.5V batteries supplied with the instrument.
- Carefully respect the polarity.
- To close the batteries compartment, push the batteries cover back on, starting with the upper part.
- Screw the batteries compartment cover.

Turn on the instrument

- Press & hold the ON/OFF key.
- Connect the two thermocouple temperature probes to the T1 & T2 inputs on top of the device (pay attention to the connection direction, see the previous chapter).
- Put the thermocouple probes to the required location to measure temperature.
- The device displays the temperature measurements.

Select the unit

- With the device turned on.
- Press & hold simultaneously ON/OFF & HOLD keys to switch to the required measurement unit: °C, °F.
Activate/deactivate the wireless communication
- With the device turned on.
- Press simultaneously ON/OFF & HOLD keys to activate or deactivate the wireless communication.
- When activated, the wireless communication icon flashes on the instrument screen.
- The icon becomes fixed when the instrument is paired to a tablet or smartphone.

Activate/deactivate the Backlight

- With the device turned on.
- Press the ON/OFF key to activate or deactivate the backlight.

Activate/deactivate the Auto shut-off

- The device has an automatic shut-off set to 10 minutes.
- When the device starts, all the segments are displayed. During this time, press & hold the ON/OFF key to enter in the “Power down menu”.
- Press HOLD to activate/deactivate the auto shut-off.
- Press & hold the ON/OFF key to exit the “Power down menu”.

Display Hold/Min/Max/Live values

- With the device turned on and measured values are displayed.
- Press HOLD key to successively:
 - Freeze the display of measurement values
 - Display the minimum measured values
 - Display the maximum measured values
 - Restore the live display

Switch between measurements

- With the device turned on and measured values are displayed.
- Press & hold the HOLD key to successively display the delta temperature and the T1 & T2 temperature measurement values.

Key operation

KEY	SHORT PRESS	LONG PRESS (3 seconds)
ON/OFF	Backlight ON/OFF	Device ON/OFF
HOLD	Hold / Min / Max /Live value	Delta Temperature / T1 & T2
ON/OFF and HOLD	Wireless communication ON/OFF	°C / °F

Maintenance

Change batteries

- With the device turned off.
- Unscrew the battery compartment at the back of the device and remove the cover.
- Remove used batteries and insert new batteries (3 alkaline batteries AAA LR03 1.5 V) respecting the polarity.
- To close the battery compartment, push the battery cover back on starting with the upper part.
- Screw the battery compartment cover.

Clean the instrument

- Clean the housing with a damp cloth (soap suds) if it gets dirty.

- Do not use aggressive cleaning agents or solvents.

Warranty

Instruments have a 2-year guarantee for any manufacturing defect.

Mobile App

The **Si-HVACR Measurement MobileApp** allows to view and record measurements in real-time.

Main features:

- Easily view different parameters
- Browse saved measurements history and data graphs (average, min & max values, etc.)
- Create reports (PDF, CSV or XML format) and add up to four (4) photos

Download the Si-HVACR Measurement MobileApp



http://qrcode.inair.cloud/sauermann/hvacr_MobileApp



https://sauermanngroup.com/en-INT/technical-documents?f%5B0%5D=global_product_type%3Ameasuring%20instruments

Download the MobileApp user manual



Sauermann Industrie

ZA Bernard Moulinet
24700 Montpon
France

T. +33 (0)5 53 80 85 00

services@sauermanngroup.com

Sauermann NA

140 Fell Court, Ste. 302
Hauppauge, New York 11788

T. (+1) 631-234-7600

F. (+1) 631-234-7605

info.usa@sauermanngroup.com

Sauermann GmbH

Leibnizstraße 6

D – 74211 Leingarten

T. +49 (0)7131/399990

F. +49 (0)7131/399992

info.germany@sauermanngroup.com

Sauermann UK

Units 7-9, Trident Business Park

Amy Johnson Way

Blackpool – FY4 2RP

T. +44 (0) 870 950 6378

F. +44 (0) 870 950 6379

info.uk@sauermanngroup.com

Sauermann Italia SA

Via Golini 61/10

40024 Castel S. Pietro Terme (BO)

T. (+39)-051-6951033

F. (+39)-051-942254

info.italy@sauermanngroup.com

Sauermann Ibérica

C/Albert Einstein 33.

Planta 3. P. I. Santa Margarida II08223

T. +34 931 016 975

Sauermann Australia

Unit 4/14 Rodborough Road,
Frenchs Forest, NSW 2086
T. (+612) 8880 4631



BE CAREFUL! Material damages can happen, so please apply the precautionary measures indicated.



Once returned, the required waste collection will be assured in the respect of the environment in accordance with guidelines relating to WEEE.

www.sauermanngroup.com

Documents / Resources

	<p>sauermann Si-TT3 Dual Input Thermometer [pdf] User Manual Si-TT3, Si-TT3 Dual Input Thermometer, Dual Input Thermometer, Input Thermometer, Thermo meter</p>
	<p>sauermann Si-TT3 Dual Input Thermometer [pdf] User Manual Si-TT3, Dual Input Thermometer, Si-TT3 Dual Input Thermometer, Thermometer</p>
	<p>sauermann Si-TT3 Dual Input Thermometer [pdf] User Manual Si-TT3, Dual Input Thermometer, Si-TT3 Dual Input Thermometer, Si-TT3 Thermometer</p>
	<p>Sauermann Si-TT3 Dual Input Thermometer [pdf] User Manual Si-TT3 Dual Input Thermometer, Si-TT3, Dual Input Thermometer, Input Thermometer, Thermo meter</p>

References

-  [Manufacturer of Condensate Pumps and Measuring Instruments | Sauermann group](#)