



SCANGRIP 03.6009 Scanning Work Lamp Area 10 SPS Instruction Manual

[Home](#) » [SCANGRIP](#) » SCANGRIP 03.6009 Scanning Work Lamp Area 10 SPS Instruction Manual 

SCANGRIP®
INNOVATION FROM DENMARK
AREA 10 SPS
30.6009/03.6009AU/03.6009UK



3 years warranty
PATENT PROTECTED



 **Bluetooth®**
Light control app



INCL. SPS BATTERY
ITEM NO. 03.6004

- go to scangrip.com to register



224 SMD LEDs




177 lm/W



300-30000
lux@0.5m



360°
10000lm@100%
7500lm@75%
5000lm@50%
2500lm@25%
1000lm@10%

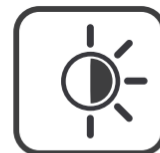

180°
5000lm@100%
3750lm@75%
2500lm@50%
1250lm@25%
500lm@10%



11.1V / 8000 mAh
Backup:
7.4V/1000mAh



1-10h @360°
2-20h @180°
Backup: 1h@10%/1000lm



2h@80%



Max 84W



-10° to +40° C



IK07



1m



IP65



380x198x198 mm



3.8 kg

Above specifications apply to the work light only



INCL. SPS CHARGER 85W
ITEM NO. 03.6008
INPUT: 100-240V AC 50/60HZ
OUTPUT: 12.6V DC 6.8A
CABLE: 5m 2x0.75mm² H05RN-F

Work light specifications

Contents

- 1 GB AREA 10 SPS
- 2 Power bank
- 3 Documents / Resources
- 4 Related Posts

GB AREA 10 SPS

WARNING / BATTERY TIPS

- Always respect applicable legislation for working with electrical equipment in order to reduce the risk of accidents
- Avoid looking directly into the beam of light, as this will result in dazzling

- Do not use the lamp near a naked flame
- Protect the mains cable from oil, heat, and sharp edges
- Only use SCANGRIP SPS battery packs. The internal backup battery must be replaced with an original SCANGRIP battery
- Opening the lamp is not advisable, as doing so could contribute to the lamp no longer being water-tight
- The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced
- Luminaire is only suitable for direct mounting on non-combustible surfaces
- The luminaire is designed to work with all SCANGRIP SPS battery packs. Likewise, the battery chargers can be used to power the luminaire
- If the lamp is disconnected from mains and the battery is discharged, push the power button to enable an internal backup battery. 10% LED will blink to indicate backup mode
- The red charging indicator lights up during charging
- The green charging indicator lights up when charging is completed.

The process to delete the pin code is:

- Turn on the Bluetooth function
- Press the Bluetooth button for 10 seconds
- The pin code is reset

Integrated BLUETOOTH light control

- Turn the lamp on/off or adjust lamp output
- Connect up to 4 lamps together
- Assign Pincode to prevent other users from controlling the lamp




<http://QRly.me/packaging-manuals/qr/nova-10k-bluetooth-app>

Compliant with iPhone 5 or higher / Android 5.0 or higher. Go to iTunes App Store / Download the app from our website

USE:

- To turn the lamp on or off, press the A button.
- To increase the brightness, press the B button.
- To decrease the brightness, press the C button.
- When the brightness level is changed, the new value is saved, and the lamp will start at that level the next time it is turned on.
- To change from 360° mode to 180° mode and vice versa, press and hold the D button for 2 seconds.
- To enable/disable Bluetooth, press the A button.

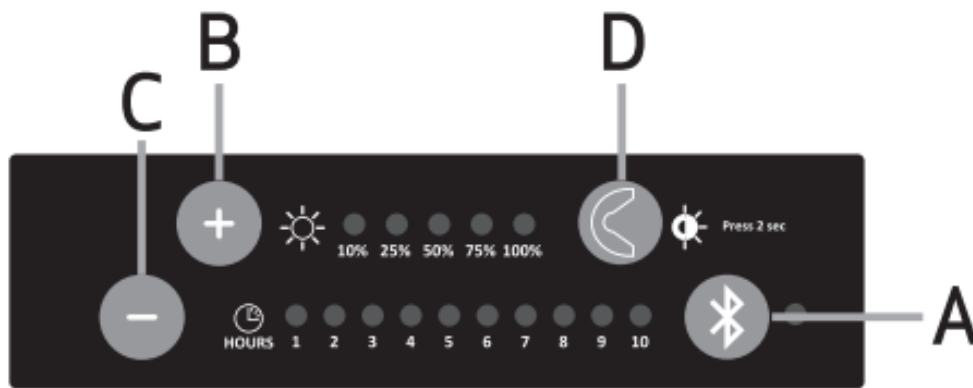

Power bank

- Built-in power bank with a USB outlet to charge mobile devices
- Output. 5V, 1A

The power bank will automatically shut down when the battery pack is discharged or removed. When using the power bank while the power supply is connected, the luminous output will be reduced to 75%.



Discarded electrical products must not be disposed of together with household waste. Please use recycling facilities. Ask your local authority or retailer for advice on recycling. – The battery must be removed from the device before it is broken up – The device must be disconnected from the mains when the battery is removed – Please dispose of the battery safely

MANUFACTURER'S WARRANTY – Information for customers in Australia and New Zealand only This SCANGRIP product is guaranteed for a period of 2 (two) years from the date of purchase. This guarantee shall become Invalid if the product has been misused, tampered with, or accidentally damaged. If the product is defective, we undertake to repair or replace the product or any part of it that is defective; or wholly or partly recompense you if they are defective. This guarantee is in addition to other rights and remedies available to consumers, all of which are given by us to you if you are a consumer. Our goods come with guarantees that cannot be excluded under the Australian or New Zealand Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If you wish to make claim, please return this product to the original place of purchase together with your purchase receipt or go to our website www.scangrip.com and fill out the claim form.



<http://QRly.me/packaging-manuals/qr/star-work-light->




INNOVATION FROM DENMARK

LEI UML 'ON 1N31Nd NDISge fl]
NHVIAINK Ni dl?:IDNVDS A9 09ND1510



Documents / Resources

	<p>SCANGRIP 03.6009 Scanning Work Lamp Area 10 SPS [pdf] Instruction Manual 03.6009, 03.6009AU, 03.6009UK, Scanning Work Lamp Area 10 SPS</p>
---	---