



Contents [[hide](#)]

- [1 SCANGRIP I-VIEW LED Head Lamp](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Charging Instructions and Battery Tips:](#)
 - [4.1 FEATURE](#)
 - [4.2 CHARGING INSTRUCTIONS AND BATTERY TIPS](#)
 - [4.3 USE](#)
 - [4.4 SPARE PARTS](#)
 - [4.5 MANUFACTURER'S WARRANTY](#)
 - [4.6 FAQs](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)




SCANGRIP I-VIEW LED Head Lamp



Specifications

- Brand: I-VIEW
- Model: 03.6212

- Warranty: 5 years
- LED design with 12 LEDs
- Luminosity: 40-400 lumen
- 3 levels of brightness
- OPTILight feature
- Battery: 3.7 V / 1400 mAh Li-ion
- Power: 2.6 W
- IP65 rated for water resistance
- Rough service durability (IK07)
- Dimensions: 99 x 50 x 40 mm / 3.9 x 1.97 x 1.57 in
- Weight: 130 g / 0.29 lbs

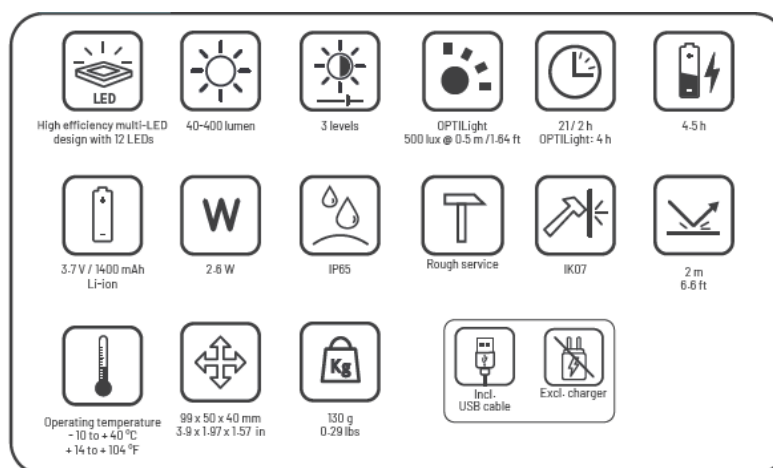

Product Usage Instructions

Charging Instructions and Battery Tips:

1. Always follow the provided charging instructions for optimal battery performance.
2. Make sure to remove the battery from the device before any maintenance or disposal.

Usage:

- To turn on the light, press the power button for a few seconds.
- Use the different brightness levels by toggling through the settings.

Spare Parts:

- Spare parts are available to extend the lifespan of the product and maintain functionality.
- Visit scangrip.com to find and purchase spare parts as needed.

FEATURE



WARNING

- Avoid looking directly into the beam of light, as this will result in dazzling.
- Do not use the lamp near a naked flame.
- The light source of this lamp is not replaceable. When the light source reaches its end of life the whole lamp must be replaced.

CHARGING INSTRUCTIONS AND BATTERY TIPS

- Only charge the lamp indoors at 5 °C to 40 °C / 41 to 104 °F.
- Before using the lamp for the first time, the battery must be fully charged.
- The red charging indicators light up with the highest flashing during charging.
- The highest charging indicator will not be flashing if the temperature does not allow charging. The red charging indicators will all be constantly on when fully charged.
- Always replace the battery with an original battery.
- Do not leave the battery without charge for an extended period.
- Deep discharge risks damaging the battery.

USE

- To turn the lamp on or off, press the power button (A).
- Press and hold the power button (A) to toggle sensor function.
- Press the brightness button (B) to turn on the lamp in OPTILight mode.
- The OPTILight indicator will turn on.
- To increase or decrease the brightness, press the brightness button (B).

- When the brightness level is changed, the new value is saved, and the lamp will start at that level the next time it is turned on.
- When the battery is below 10 %, the lamp will flash 3 times every 2 minutes.
- If the lamp temperature is too high or too low, the lamp will turn off and flash all battery indicators 10 times. To turn the light on or off with the sensor, wave your hand twice in front of the lamp.
- If the sensor is enabled, the lamp will remain in standby for 30 minutes, after which the lamp shuts down.

SPARE PARTS

With convenient access to spare parts, users can extend the lifespan of our products and ensure long-lasting functionality.

Find available spare parts on scangrip.com

Discarded electrical products must not be disposed of together with household waste. Please use the e-cycling facilities. Ask your local authority or retailer for advice on recycling.

- The battery must be removed from the device before it is broken up.
- The device must be disconnected from the mains when the battery is removed.
- Please dispose of the battery safely.

MANUFACTURER'S WARRANTY

Information for customers in Australia and New Zealand only

- This SCANGRIP product is guaranteed for a period of 2 (two) years from the date of purchase. This guarantee shall become invalid if the product has been misused, tampered with, or accidentally damaged.
- If the product is defective, we undertake to repair or replace the product or any part of it that is defective, or wholly or partly recompense you if they are defective.
- This guarantee is in addition to other rights and remedies available to consumers, all of which are given by us to you if you are a consumer.
- Our goods come with guarantees that cannot be excluded under the Australian or New

Zealand Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

- If you wish to make a claim, please return this product to the original place of purchase together with your purchase receipt or go to our website www.scangrip.com and fill out the claim form.

SCANGRIP A/S Rytterhaven 9 DK-5700 DENMARK

SCANGRIP.COM



FAQS

- **Q: How do I activate the warranty for my I-VIEW product?**

A: Read the terms and register on scangrip.com to activate your warranty.

- **Q: What should I do if my lamp reaches the end of its life?**

A: When the lamp reaches the end of its life, the entire lamp must be replaced.

Documents / Resources

	<p>SCANGRIP I-VIEW LED Head Lamp [pdf] Instruction Manual</p> <p>03.6212, 11341590A-03.6212, I-VIEW LED Head Lamp, I-VIEW, LED Head Lamp, Head Lamp</p>
---	---

References

- [Europe's leading manufacturer of LED work lights](#)
- [User Manual](#)

03.6212, 11341590A-03.6212, Head Lamp, I-VIEW, I-VIEW LED Head Lamp, LED Head Lamp,

SCANGRIP SCANGRIP

—Previous Post

SCANGRIP I-VIEW Powerful Rechargeable LED Headlamp Instruction Manual

Next Post—

SCANGRIP 03.6209 Rechargeable LED Work Light Installation Guide

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos

are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.