Schneider Electric Modicon M580 Controller FPGA Upgrade





Schneider Electric Modicon M580 Controller FPGA Upgrade **User Guide**

Home » Schneider Electric » Schneider Electric Modicon M580 Controller FPGA Upgrade User Guide 🖺



Contents

- 1 Schneider Electric Modicon M580 Controller FPGA **Upgrade**
- **2 Product Specifications**
- **3 Product Usage Instructions**
- 4 FAQ
- **5 Legal Information**
- **6 Safety Information**
- 7 Operation and Adjustments
- 8 About the Book
- 9 Overview
- 10 Confirm FPGA Version
- 11 CONTACT
- 12 Documents / Resources
 - 12.1 References



Schneider Electric Modicon M580 Controller FPGA Upgrade



Product Specifications

• Product Name: Modicon M580 Controller FPGA Upgrade

Model Number: EIO0000005298.00
Manufacturer: Schneider Electric

• Compatibility: Modicon M580 Controller

• Release Date: March 2024

Product Usage Instructions

- Before using the Modicon M580 Controller FPGA Upgrade, read the safety information provided in the user manual carefully to ensure safe operation and prevent potential hazards.
- Pay close attention to all warning messages and safety labels.
- Before installation or operation, familiarize yourself with the device by reviewing the user manual.
- Ensure that you have all the necessary components for the upgrade process.
- Power off the Modicon M580 Controller before starting the upgrade process.
- Follow the step-by-step instructions provided in the user manual to perform the FPGA upgrade.
- · After completing the upgrade, power on the controller and perform a test to ensure proper functionality.
- Once the FPGA upgrade is successfully installed, operate the Modicon M580 Controller as per your application requirements.
- Make any necessary adjustments to the controller settings based on your system needs.
- The user guide contains essential information regarding the Modicon M580 Controller FPGA Upgrade, including safety instructions, operational guidelines, and troubleshooting tips. Refer to this guide for any queries or issues.
- Follow the detailed instructions provided in the user manual to update the FPGA configuration of the Modicon M580 Controller. Ensure that you have a clear understanding of the process before proceeding.

FAQ

- Q: Can I perform the FPGA upgrade without prior experience?
- A: While prior experience is beneficial, following the user manual's instructions carefully can help you complete the upgrade process.
- Q: How often should I update the FPGA configuration?
- A: It is recommended to update the FPGA configuration as per the guidelines provided by Schneider Electric to ensure optimal performance of the controller.

Legal Information

- The information provided in this document contains general descriptions, technical characteristics and/or recommendations related to products/solutions.
- This document is not intended as a substitute for a detailed study or operational and site-specific development or schematic plan. It is not to be used for determining the suitability or reliability of the products/solutions for specific user applications. Any such user must perform or have any professional expert of its choice (integrator, specifier or the like) perform the appropriate and comprehensive risk analysis, evaluation and testing of the products/solutions to the relevant specific application or use thereof.
- The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this document are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owner.
- This document and its content are protected under applicable copyright laws and provided for informative use only. No part of this document may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.
- Schneider Electric does not grant any right or license for commercial use of the document or its content, except for a non-exclusive and personal license to consult it on an "as is" basis.
- Schneider Electric reserves the right to make changes or updates to or in the content of this document or the format thereof, at any time without notice.
- To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this document, as well as any nonintended use or misuse of the content thereof.

Safety Information

Important Information

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.

• The addition of this symbol to a "Danger" or "Warning" safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.

- This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
- DANGER indicates a hazardous situation that, if not avoided, will result in death or serious injury.
- WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.
- CAUTION indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.
- NOTICE is used to address practices not related to physical injury.

Please Note

- Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.
- A qualified person has skills and knowledge related to the construction and operation of electrical equipment and its installation and has received safety training to recognize and avoid the hazards involved.

Before You Begin

- Do not use this product on machinery lacking effective point-of-operation guarding.
- Lack of effective point-of-operation guarding on a machine can result in serious injury to the operator of that machine.

UNGUARDED EQUIPMENT

- Do not use this software and related automation equipment on equipment that does not have point-of-operation protection.
- Do not reach into machinery during operation.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

This automation equipment and related software is used to control a variety of industrial processes. The type or model of automation equipment suitable for each application will vary depending on factors such as the control function required, degree of protection required, production methods, unusual conditions, government regulations, etc. In some applications, more than one processor may be required, as when backup redundancy is needed. Only you, the user, machine builder or system integrator can be aware of all the conditions and factors present during setup, operation, and maintenance of the machine and, therefore, can determine the automation equipment and the related safeties and interlocks that can be properly used. When selecting automation and control equipment and related software for a particular application, you should refer to the applicable local and national standards and regulations. The National Safety Council's Accident Prevention Manual (nationally recognized in the United States of America) also provides much useful information.

In some applications, such as packaging machinery, additional operator protection such as point-of-operation guarding must be provided. This is necessary if the operator's hands and other parts of the body are free to enter the pinch points or other hazardous areas and serious injury can occur. Software products alone cannot protect an operator from injury. For this reason, the software cannot be substituted for or take the place of point-of-operation protection.

Ensure that appropriate safeties and mechanical/electrical interlocks related to point-of-operation protection have been installed and are operational before placing the equipment into service. All interlocks and safeties related to point-of-operation protection must be coordinated with the related automation equipment and software programming.

NOTE: Coordination of safeties and mechanical/electrical interlocks for point-of-operation protection is outside the scope of the Function Block Library, System User Guide, or other implementation referenced in this documentation.

Start-up and Test

Before using electrical control and automation equipment for regular operation after installation, the system should be given a start-up test by qualified personnel to verify correct operation of the equipment. It is important that arrangements for such a check are made and that enough time is allowed to perform complete and satisfactory testing.

WARNING

EQUIPMENT OPERATION HAZARD

- Verify that all installation and set-up procedures have been completed.
- Before operational tests are performed, remove all blocks or other temporary holding means used for shipment from all component devices.
- Remove tools, meters, and debris from equipment.
- Failure to follow these instructions can result in death, serious injury, or equipment damage.

Follow all start-up tests recommended in the equipment documentation. Store all equipment documentation for future reference.

Software testing must be done in both simulated and real environments.

Verify that the completed system is free from all short circuits and temporary grounds that are not installed according to local regulations (according to the National Electrical Code in the U.S.A, for instance). If high-potential voltage testing is necessary, follow recommendations in equipment documentation to prevent accidental equipment damage.

Before energizing equipment:

- Remove tools, meters, and debris from equipment.
- Close the equipment enclosure door.
- Remove all temporary grounds from incoming power lines.
- Perform all start-up tests recommended by the manufacturer.

Operation and Adjustments

The following precautions are from the NEMA Standards Publication ICS 7.1- 1995: (In case of divergence or contradiction between any translation and the English original, the original text in the English language will prevail.)

- Regardless of the care exercised in the design and manufacture of equipment or in the selection and ratings of components, some hazards can be encountered if such equipment is improperly operated.
- It is sometimes possible to misadjust the equipment and thus produce unsatisfactory or unsafe operation.
 Always use the manufacturer's instructions as a guide for functional adjustments. Personnel who have access to these adjustments should be familiar with the equipment manufacturer's instructions and the machinery used with the electrical equipment.
- Only those operational adjustments required by the operator should be accessible to the operator. Access to
 other controls should be restricted to prevent unauthorized changes in operating characteristics.

About the Book

Document Scope

This manual describes how to update a Modicon M580 controller-specific component, the Field Programmable

Gate Array (FPGA). FPGA is used in the power management unit of Modicon M580 controllers.

NOTE: These instructions apply to Modicon M580 controllers with firmware greater than or equal to 4.10.

Validity Note

- This document has been updated for the release of the FPGA firmware version 1.60.
- For product compliance and environmental information (RoHS, REACH, PEP, EOLI, etc.), go to www.se.com/ww/en/work/support/green-premium/.

FPGA Update Procedure

Before proceeding with an update, read and follow our Cybersecurity Best Practices.

This document presents a two-part maintenance operation that consists of:

- Reconfiguration of FPGA component using an intermediate version.
- Downloading the operational firmware to the Modicon M580 controller.

The described procedure requires the controller to be in a STOP state.

NOTE: For Hot Standby controllers, applications can continue to operate during the FPGA update. For more information, refer to Modicon M580 Hot Standby, System Planning Guide for Frequently Used Architectures. **NOTE:** The firmware version 04.91.01 is an intermediate version intended to enable the download of the final

firmware version in the Step 2 procedure. Firmware version 04.91.01 is not operational.

Related Documents

Title of documentation	Reference number
Modicon M580, Hardware, Reference Manual	EIO000001578 (English), EIO0000001579 (French), EIO0000001580 (German), EIO0000001582 (Italian), EIO0000001581 (Spanish), EIO0000001583 (Chinese)
Modicon M580 Standalone, System Planning Guide for Frequently Used Architectures	HRB62666 (English), HRB65318 (French), HRB65319 (German), HRB65320 (Italian), HRB65321 (Spanish), HRB65322 (Chinese)
Modicon M580 Hot Standby, System Planning Guide for Frequently Used Architectures	NHA58880 (English), NHA58881 (French), NHA58882 (German), NHA58883 (Italian), NHA58884 (Spanish), NHA58885 (Chinese)
EcoStruxure Automation Device Maintenance, Firmwar e Upgrade Tool, Online Help	EIO000004033 (English), EIO0000004048 (French), EIO0000004046 (German), EIO0000004049 (Italian), EIO0000004047 (Spanish), EIO0000004050 (Chinese), EIO000000508 9 (Turkish), EIO0000005090 (Portuguese)

To find documents online, visit the Schneider Electric download centre (www.se.com/ww/en/download/).

Product-Related Information

WARNING LOSS OF CONTROL

- Perform a Failure Mode and Effects Analysis (FMEA), or equivalent risk analysis, of your application, and apply
 preventive and detective controls before implementation.
- Provide a fallback state for undesired control events or sequences.
- Provide separate or redundant control paths wherever required.
- Supply appropriate parameters, particularly for limits.
- Review the implications of transmission delays and take action to mitigate them.
- Review the implications of communication link interruptions and take action to mitigate them.
- Provide independent paths for control functions (for example, emergency stop, over-limit conditions, and error conditions) according to your risk assessment, and applicable codes and regulations.
- · Apply local accident prevention and safety regulations and guidelines.1
- Test each implementation of a system for proper operation before placing it into service.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

1 For additional information, refer to NEMA ICS 1.1 (latest edition), Safety Guidelines for the Application, Installation, and Maintenance of Solid State Control and to NEMA ICS 7.1 (latest edition), Safety Standards for Construction and Guide for Selection, Installation and Operation of Adjustable-Speed Drive Systems or their equivalent governing your particular location.

Interrupting the update procedure before it has been completed will cause an interruption of the connection and can cause irreparable damage to the Modicon M580 controller.

NOTICE INOPERABLE EQUIPMENT

- During the transfer of the firmware file:
 - do not remove power from the Modicon M580 controller.
 - do not remove power from the PC.
 - do not exit the EcoStruxure Automation Device Maintenance software.
 - do not disconnect the communication cable.
 - do not remove or insert the optional SD memory card.
- Failure to follow these instructions can result in equipment damage.

Information on Non-Inclusive or Insensitive Terminology

As a responsible, inclusive company, Schneider Electric is constantly updating its communications and products that contain non-inclusive or insensitive terminology. However, despite these efforts, our content may still contain terms that are deemed inappropriate by some customers.

Terminology Derived from Standards

The technical terms, terminology, symbols and the corresponding descriptions in the information contained herein, or that appear in or on the products themselves, are generally derived from the terms or definitions of international standards.

In the area of functional safety systems, drives and general automation, this may include but is not limited to, terms such as safety, safety function, safe state, fault, fault reset, malfunction, failure, error, error message, dangerous, etc. Among others, these standards include:

Standard	Description
IEC 61131-2:2007	Programmable controllers, part 2: Equipment requirements and tests.
ISO 13849-1:2023	Safety of machinery: Safety-related parts of control systems.
	General principles for design.
EN 61496-1:2020	Safety of machinery: Electro-sensitive protective equipment.
	Part 1: General requirements and tests.
ISO 12100:2010	Safety of machinery – General principles for design – Risk assessment and risk r eduction
EN 60204-1:2006	Safety of machinery – Electrical equipment of machines – Part 1: General require ments
ISO 14119:2013	Safety of machinery – Interlocking devices associated with guards – Principles for design and selection
ISO 13850:2015	Safety of machinery – Emergency stop – Principles for design
IEC 62061:2021	Safety of machinery – Functional safety of safety-related electrical, electronic, an d electronic programmable control systems
IEC 61508-1:2010	Functional safety of electrical/electronic/programmable electronic safety-related s ystems: General requirements.
IEC 61508-2:2010	Functional safety of electrical/electronic/programmable electronic safety-related s ystems: Requirements for electrical/electronic/programmable electronic safety-rel ated systems.
IEC 61508-3:2010	Functional safety of electrical/electronic/programmable electronic safety-related s ystems: Software requirements.
IEC 61784-3:2021	Industrial communication networks – Profiles – Part 3: Functional safety fieldbuse s – General rules and profile definitions.
2006/42/EC	Machinery Directive
2014/30/EU	Electromagnetic Compatibility Directive
2014/35/EU	Low Voltage Directive

In addition, terms used in the present document may tangentially be used as they are derived from other standards such as:

Standard	Description
IEC 60034 series	Rotating electrical machines
IEC 61800 series	Adjustable speed electrical power drive systems
IEC 61158 series	Digital data communications for measurement and control – Fieldbus for use in in dustrial control systems

Finally, the term zone of operation may be used in conjunction with the description of specific hazards and is defined as it is for a hazard zone or danger zone in the Machinery Directive (2006/42/EC) and ISO 12100:2010.

NOTE: The aforementioned standards may or may not apply to the specific products cited in the present documentation. For more information concerning the individual standards applicable to the products described herein, see the characteristics tables for those product references.

Updating the FPGA Configuration

The following section presents step-by-step instructions showing you how to:

- 1. Update the Modicon M580 controller FPGA using the firmware version 04.91.01 in the BMEx58x0x0 FPGA update package v01.sedp file.
- 2. Update the Modicon M580 controller firmware to version 4.20 or later.

Updating the FPGA to 1.6 enables new features that are not available with firmware version 4.20 and FPGA 1.5. Verify that your PC can communicate with the Modicon M580 controller using the HTTPS protocol.

NOTE

- Before proceeding with an update, read and follow our Cybersecurity Best Practices.
- Verify that your PC can communicate with the Modicon M580 controller using HTTPS protocols. (Cybersecurity policies applied to some networks may block this update procedure.)

Overview

All operations in this guide are performed using EcoStruxure Automation Device Maintenance (EADM) software. The process of upgrading the Modicon M580 controller FPGA is accomplished by installing the BMEx58x0x0 FPGA update package v01.sedp file using the EADM software to provide the controller with a new functionality. Thereafter use the EADM software to perform:

- Step 1: FPGA Firmware Update, page 12
- Step 2: M580 Firmware Download, page 16

After completion of this procedure, you need to cycle power – off then on – to the controller to enable the new FPGA functionalities.

To obtain the BMEx58x0x0 FPGA update package v01.sedp file, contact your local Schneider Electric service representative.

EcoStruxure Automation Device Maintenance and instructions for using it are available on the Schneider Electric website at the following URL: https://www.se.com/ca/en/download/document/EADM/.

NOTE: This procedure does not affect the application previously loaded on the controller.

Preliminary Tasks

Before beginning:

- Configure your firewall to allow PC to control communications.
- Confirm that you know the credentials of the controller application, including the application password.

When you apply this procedure to your Modicon M580 controller, you must be in front of the equipment to monitor the progress of the update or, at a minimum, have a contact or other means of observing and reporting the state of the application before attempting the update.

Identifying the FPGA Version

You can use %SW130 to read the FPGA version for M580 controllers with firmware version 4.20 or later. %SW130 description:

bit 0: 1 Enables M580 auto-reboot if the controller becomes non-operational,
 0 disables M580 auto-reboot.

NOTE

- Auto-reboot applies only to non-safety-related M580 controllers.
- Auto-reboot applies only for FPGA versions 1.6 and later.
- Bit 0 is automatically reset to 0 after a reset or cold start.
- bits 1...3: Unused
- bits 4...15: version of the FPGA

For example

- FPGA 1.5: %SW130 = hex 1050
- FPGA 1.6 + auto-reboot inactive: %SW130 = hex 1060
- FPGA 1.6 + auto-reboot active: %SW130 = hex 1061

During an auto-reboot, the outputs enter the fallback state. After auto-reboot, the controller enters the STOP state and:

- · Outputs in the local rack are de-energized.
- Outputs in remote racks enter fallback.

WARNING

UNINTENDED EQUIPMENT OPERATION

Design your system so de-energized local rack outputs do not create a hazard.

Failure to follow these instructions can result in death, serious injury, or equipment damage.


FPGA Firmware Update

EADM uses the Modicon M580 Controller FPGA Update firmware files provided by your local Schneider Electric service representative.

The name of the file, in SEDP format, that you use depends upon the reference of the controller. Generically, the name of the file is Modicon M580 Controller FPGA Update, with the reference of your controller replacing the generic controller reference.

Procedure

- 1. Perform this part of the update using either one of the following ports of the Modicon M580 controller:
 - · USB port
 - Ethernet service port (Port 1, connecting the PC directly to the service port).
- 2. Open EcoStruxure Automation Device Maintenance.
- 3. Add the installation package BMEx58x0x0 FPGA update package v01.sedp
- 4. Add your controller in the Device/Loading menu (use HTTPS protocol).

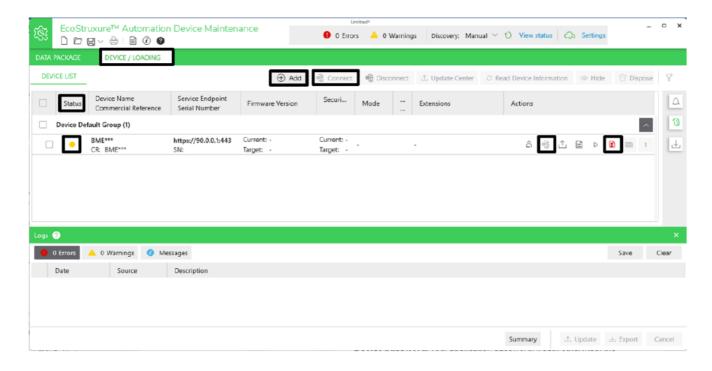


NOTE: If you are using a USB cable, enter 90.0.0.1 as the IP Address.

The device Status should be yellow, indicating the device is reachable on the network.


NOTE: If the device Status is grey, the device is unreachable.

- 5. Verify if the device certificate can be trusted:
 - Click the certificate icon ().
 - Verify the certificate information and, if you agree, click Trust.
- 6. Connect to the controller using your credentials:
 - · Device User Name: loader
 - Device password: your application password, if set.; otherwise, the default password: download
 - · Click Save and Connect.

Device status is GREEN, indicating that the EcoStruxure Automation Device Maintenance has successfully connected to the controller.

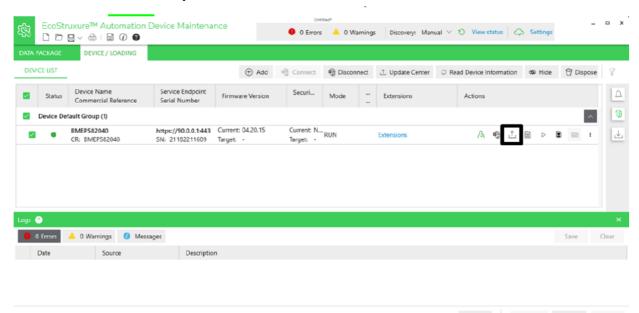

- 7. Click the update icon () to open the Update Center, where you will select the firmware to download to the controller.
- 8. Select firmware version 04.91.01 and click Save:

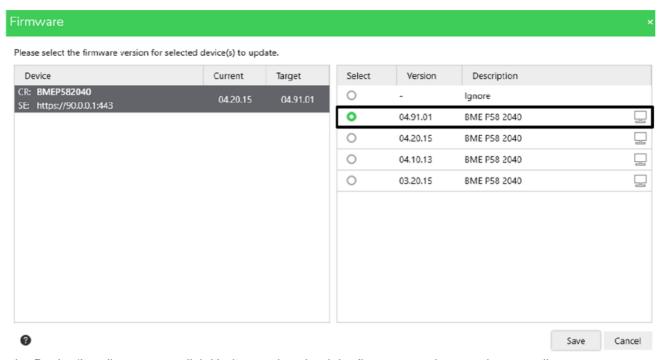

9. In the Device/Loading screen, click Update to download the firmware package to the controller.

If power to the controller is interrupted, the controller can become corrupted and unable to restart.


NOTICE

INOPERABLE EQUIPMENT

Maintain continuous power to the controller.


Failure to follow these instructions can result in equipment damage.

10. The DL LED flashes green, indicating the intermediate firmware is being downloaded to the controller:

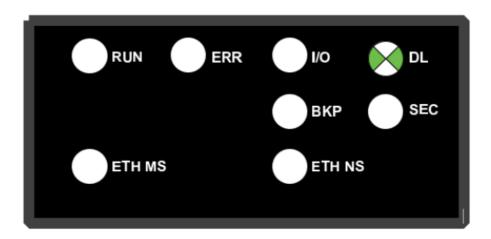


NOTE: The firmware download process can take several minutes.

The controller restarts and applies the intermediate firmware. The ETH MS LED turns orange:

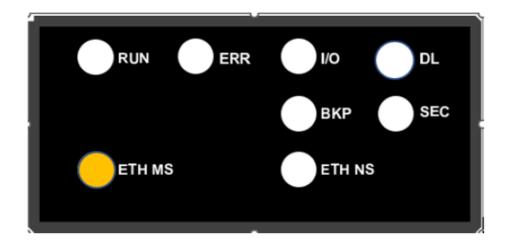

At the conclusion of the process.

- RUN LED turns GREEN
- ERR and IO LEDs flash RED

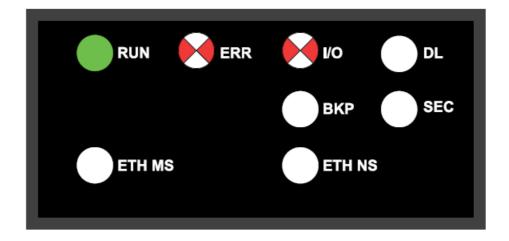

Result: The intermediate firmware has been downloaded and applied. Proceed to Step 2.

M580 Firmware Download

- EcoStruxure Automation Device Maintenance uses the Modicon M580 Controller firmware v4.20 or later provided by your local Schneider Electric service representative.
- The name of the file, in SEDP format, that you use depends upon the reference of the controller. Generically, the name of the file is "BMEx58x0x0_SV04.20", with the reference of your controller replacing the generic controller reference.


Procedure

- 1. Perform this part of the update using either one of the following ports of the Modicon M580 controller:
 - · USB port
 - Ethernet service port (Port 1, connecting the PC directly to the service port).
- 2. Open EcoStruxure Automation Device Maintenance.
- 3. Add an operational firmware package, in this example BMEx58x0x0_ SV04.20.sedp.
- 4. Add your controller in the Device/Loading menu (use HTTPS protocol).

NOTE: If you are using USB cable, enter 90.0.0.1 as the IP Address.

The device Status should be yellow, indicating the device is reachable on the network.

NOTE: If the device Status is gray, the device is unreachable.

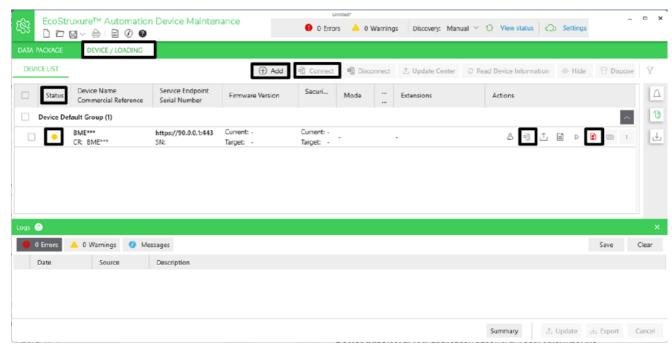

- 5. Verify if the device certificate can be trusted:
 - Click the certificate icon ().
 - Verify the certificate information and, if you agree, click Trust.
- 6. Connect to your controller, which should be using firmware version 4.91.01:
 - · Device User Name: loader
 - · Device password: download
 - · Click Save and Connect.

Device status is GREEN, indicating that the EcoStruxure Automation Device

Maintenance has successfully connected to the controller.

- 7. Click the update icon () to open the Update Center.
- 8. Select the firmware you want to download to the controller and click Save.
- 9. In the Device/Loading screen, click Update to download the firmware package to the controller.

 If power to the controller is interrupted, the controller can become corrupted and unable to restart.

NOTICE


INOPERABLE EQUIPMENT

Maintain continuous power to the controller.

Failure to follow these instructions can result in equipment damage.

At the conclusion of the process

- RUN LED turns GREEN
- ERR and IO LEDs flash RED

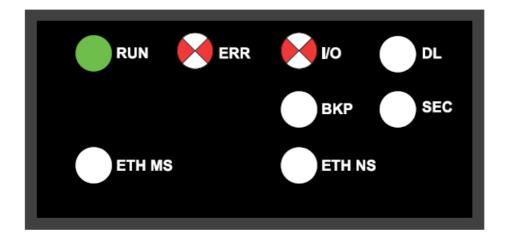

The firmware package download can take several minutes. A message is displayed, indicating the percentage of firmware upgrade progress.

After the download of the firmware has been completed, the controller is restarted and EcoStruxure Automation Device Maintenance is disconnected.

After a successful reboot, the controller resumes running with the selected firmware.

NOTE: When the controller reboots, EcoStruxure Automation Device Maintenance may incorrectly indicate that the firmware was not successfully installed. This is due to the disconnection of the EADM software during the reboot of the controller.

Result: The firmware package has been downloaded and applied. Your controller is now updated with operational firmware and is running the same application that was deployed before starting the FPGA update.

Final Tasks

The new FPGA reconfiguration is performed only during a power-cycle, by power cycling the Modicon M580 controller.

NOTE: Resetting the controller does not reconfigure the FPGA.

After cycling power to the controller and a successful reboot sequence, the Modicon M580 controller is updated.

Confirm FPGA Version

- Connect to the controller, then use the following system word to identify the FPGA version and verify that the FPGA update has been applied correctly. The expected version is v1.60.
- %SW130 value should be hex 1060
- If %SW130 is different, the update was not successful. In this case, contact your local Schneider Electric service representative.

CONTACT

Schneider Electric

- 35 rue Joseph Monier
- 92500 Rueil Malmaison
- France
- + 33 (0) 1 41 29 70 00
- www.se.com
- As standards, specifications, and design change from time to time, please ask for confirmation of the

information given in this publication.

© 2024 Schneider Electric. All rights reserved.

Documents / Resources



References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.