



sE Electronics V7 Dynamic Vocal Microphone User Manual

[Home](#) » [sE Electronics](#) » sE Electronics V7 Dynamic Vocal Microphone User Manual 



sE Electronics
V7 Dynamic Vocal Microphone
User Manual



Contents

- [1 V7 Dynamic Vocal Microphone](#)
- [2 Brief Description](#)
- [3 What's in the box](#)
- [4 Tips for practical use](#)
- [5 Technical Specifications](#)
- [6 Support](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

V7 Dynamic Vocal Microphone

Thank you

We would like to thank you cordially for choosing this sE microphone! This manual contains some important instructions for setting up and operating your new equipment. Please take a few minutes to read the instructions below carefully. We hope you will enjoy working with it as much as we enjoyed designing and building it for you.

Most Sincerely,
Your sE Team

Brief Description

The V7 and V3 are dynamic hand-held microphones ideal for vocal applications on the stage. Thanks to their well-

balanced, neutral sound, they also allow the capture of nearly any source from electric guitar cabinets to brass instruments, drums to the choir, and more – both in the studio and on the stage.

The robust all-metal construction, stainless spring steel mesh grille, and gold-plated XLR contacts ensure durability and reliability with no corrosion for many years. Proven Neodymium magnets, tight production tolerances, and high workmanship ensure excellent sensitivity, high-end sound quality, and superb consistency.

The red internal windscreen efficiently reduces unwanted wind noise and plosive pops. (And just in case you prefer a black windscreen, we have also included one as a standard accessory for you.)

V7 only:

Thanks to its innovative, specialized aluminum voice coil, the V7 delivers a crisp, open sound that perfectly captures your voice in the most natural way you've ever heard on stage – and makes your sound engineer's job easier than ever.

With its super-cardioid pattern, the sophisticated capsule design also helps isolate your voice or instrument from other sound sources on the stage – efficiently reducing stage bleed from other instruments and ensuring high gain before feedback. The capsule's unique, patented suspension also helps eliminate handling noise, footfall noise, and any rumble.

What's in the box

Your packaging should contain the following items. If anything is missing, please contact your SE Electronics dealer and let them know.

- V7 / V3 microphone
- microphone stand clip
- thread adapter
- black internal windscreen
- pouch

Tips for practical use

Point the microphone directly toward the sound source as much as possible to get a dry, direct sound and high gain before feedback.

The closer the distance from the microphone to the source, the more bass you'll get ("proximity effect"). Use this to your advantage when you want it, and be aware of it when you don't.

The fewer microphones you are using on the stage the better. Use just one microphone per source to minimize risk feedback.

Make sure the microphone is positioned behind the PA speakers to reduce the risk of feedback.

If several microphones are necessary (e.g. choir miking) apply the 3:1 rule: The distance between the microphones should be at least three times the distance of each microphone to its source.

Safety and maintenance



Risk of damage

Please make sure that the piece of equipment to which your microphone will be connected fulfills the safety regulations enforced in your country and is fitted with a ground lead.



Cleaning the microphone

After every use, clean the microphone with a dry, soft cloth tissue and store it in a solid case or a zipper pouch.

Technical Specifications

	V7	V3
Capsule	dynamic	dynamic
Voice coil	Aluminum	Copper
Magnet	Neodymium	Neodymium
Polar patterns	Super cardioid	Cardioid
Frequency range	40 — 19,000 Hz	50 — 16,000 Hz
Sensitivity	2.0 mV/Pa -54 dBV	2.5 mV/Pa -52 dBV
Electrical Impedance	300 ohms	600 ohms
Connectivity	3-pin male XLR connector	3-pin male XLR connector
Dimensions	Diameter: 54 mm (2.12 in.) Length 184 mm (7.24 in.)	Diameter: 52 mm (2.05 in.) Length 181 mm (7.13 in.)
Weight	305 g (10.8 oz)	295 g (10.4 oz.)

Frequency response / Polar Pattern

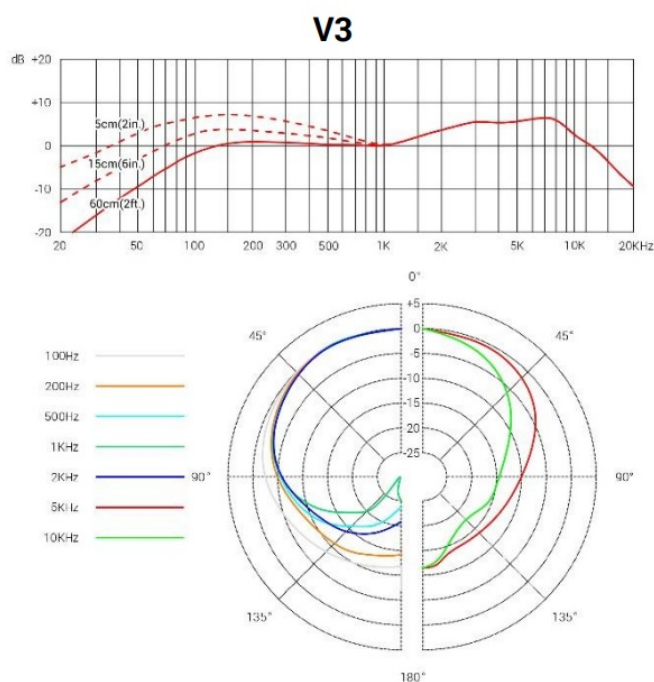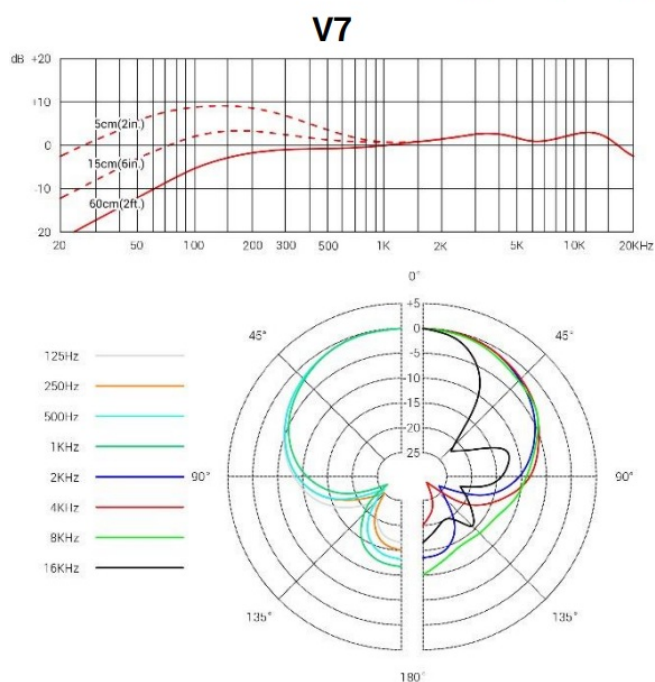

Support

In case you are experiencing any problems or have any questions regarding your sE product, please contact your dealer first for the fastest and more direct service. If an authorized service is required, it will be arranged by that dealer: <http://www.seelectronics.com/dealers>

If you still have difficulties with support or assistance, please do not hesitate to contact us directly: <http://www.seelectronics.com/contact-us>

Lastly, remember to register your new gear to extend your warranty to a full three years: <http://www.seelectronics.com/registration>

Contact

Feel free to contact us:

SE Electronics International, Inc.
PO Box 1049

6 Beach Road
Tiburon
CA 94920
USA

www.seelectronics.com

contact@seelectronics.com

Our international distributors and sales representatives: <http://www.seelectronics.com/contact-us>



This product conforms to the standards listed in the Declaration of Conformity. Please contact us if you want to order a free copy of the Declaration of Conformity

Technical data is subject to change without notice.



sE Electronics
IMPORTANT

WARRANTY REGISTRATION

Thank you for purchasing an sE product!


You are automatically entitled to a two-year warranty but can extend this to a full three years with registration.

To register your new equipment and to read the full warranty details, please go here:

<http://www.seelectronics.com/registration>

Most Sincerely,
Your sE Team

Documents / Resources

 <p>V7 V3 User Manual</p>	<p>sE Electronics V7 Dynamic Vocal Microphone [pdf] User Manual V7 Dynamic Vocal Microphone, V7, V3, Dynamic Vocal Microphone, Vocal Microphone, Microphone</p>
--	---

References

- [sE Home Page - sE Electronics](#)
- [sE Home Page - sE Electronics](#)
- [sE Contact - sE Electronics](#)
- [sE Retailer Archive - sE Electronics](#)
- [sE Register a product - sE Electronics](#)