



Sensified PM05 Seguro Remote Wireless Sensor User Guide

[Home](#) » [Sensified](#) » Sensified PM05 Seguro Remote Wireless Sensor User Guide 

Contents

1

Starting a Recording

2

Ending a Recording

3

Reviewing Your Recordings

4

Extras

5

Documents / Resources

6

Related Posts

Starting a Recording



Once you have connected to a Seguro device, you can start a recording by tapping the Start Recording button. The Start Recording screen is displayed, and you can adjust the high and low thresholds, start delay, and sampling interval before starting the recording. Cloud account users can also add a photo of the item being monitored, and Premium users can add shipment tracking information. When all of the options have been selected, tap the Start button to start the recording.


Ending a Recording



Stopping a recording that is already in progress is straightforward. After connecting to the device, the current recording will be displayed on the device screen. Tap the Stop Recording button, and the Stop Recording screen will appear. Users who have a cloud account will have the option to add a photo to the recording, and premium cloud account holders will have the option to add tracking information if it isn't already attached.

Tap the Stop button to stop the recording, and the device screen will reappear, with a summary of the recording. If you are not the person who started the recording, that person will get a notification on their mobile device that the recording is complete.

Reviewing Your Recordings

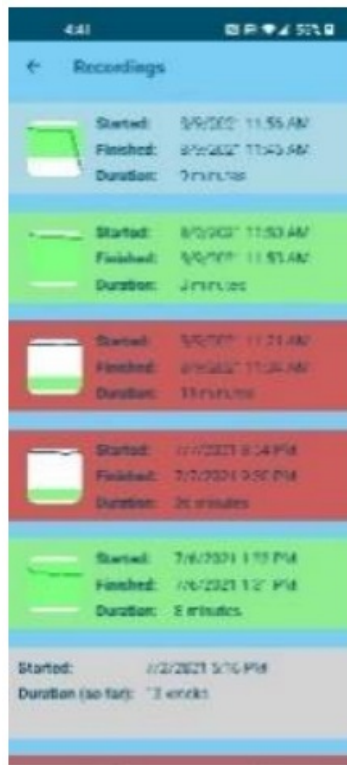

To review your past recordings, tap the Recent Recordings button on the home screen. A list of recordings will appear, the most recent first. Completed recordings are colored green, red, or blue (for in-range, too high, or too low, respectively) and incomplete recordings are gray.

Tapping on an individual recording displays the recording detail screen, which includes a chart of the trip as well as various statistics and data points. If the start or stop location is provided, you can see a detailed map of the location by tapping on the address. Also, if your account allows, you can display any photos included, as well as detailed tracking information.

Extras

Location

The mechanism for setting the location is also slightly different between Android and Apple. For Apple devices, the Seguro app will request location permission the first time a recording is started or stopped on a device. For Android devices, the app requires location permission just to connect to a Seguro device, but will also ask to attach location information to the recording the first time a recording is started or stopped.


Photos

You can add photos for both the start and end of a recording. The Seguro app requires Camera permission to add photos to a recording.

Shipping Information

For Premium account users, tracking information for popular carriers can be added when a recording is started or stopped. The app can scan the barcode on a waybill, or the user can type in the tracking number manually. The app requires Camera permission to scan barcodes.

Documents / Resources

	<p>Sensified PM05 Seguro Remote Wireless Sensor [pdf] User Guide PM05, 2A3LI-PM05, 2A3LIPM05, PM05 Seguro Remote Wireless Sensor, PM05, Seguro Remote Wireless Sensor</p>
---	---