

**SUPERLIFT WiFi F-linX App Connecting**



# SUPERLIFT WiFi F-linX App Connecting Instructions


[Home](#) » [SUPERLIFT](#) » SUPERLIFT WiFi F-linX App Connecting Instructions 

## Contents

- 1 [SUPERLIFT WiFi F-linX App Connecting](#)
- 2 [Product Information](#)
- 3 [Product Usage Instructions](#)
- 4 [Frequently Asked Questions](#)
- 5 [Register your account](#)
- 6 [Add device](#)
- 7 [Documents / Resources](#)
  - 7.1 [References](#)



## SUPERLIFT WiFi F-linX App Connecting

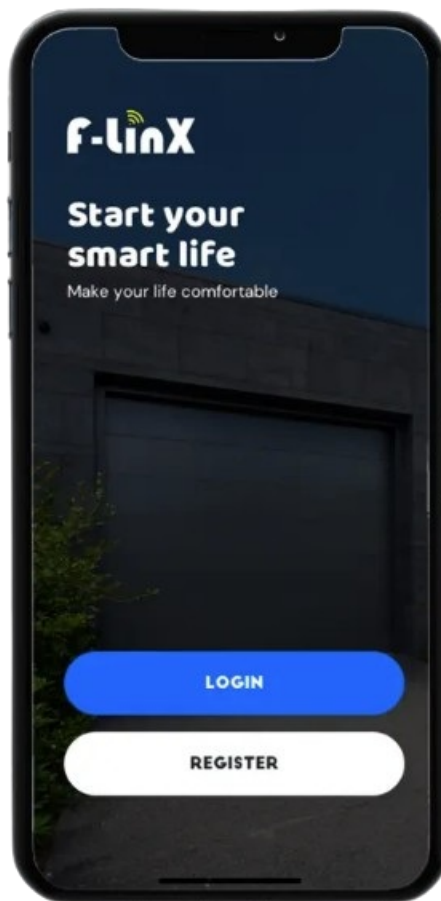

## Product Information

### Specifications:

- Product Name: Superlift WiFi
- Compatibility: Smartphone devices
- Features: WiFi connectivity

## Product Usage Instructions

### Registering Your Account:


1. Download the app on your smartphone device using the QR codes provided or available.
2. Open the app and follow the on-screen instructions to register your account.
3. Once registered, log in using the credentials you created during registration.

## Frequently Asked Questions

- **Q: Can I use the Superlift WiFi with any smartphone?**
  - A: The Superlift WiFi is compatible with most smartphone devices. Ensure your device meets the minimum requirements specified in the app store.
- **Q: Do I need an internet connection to register my account?**
  - A: Yes, you will need an active internet connection to download the app and register your account.

## Register your account

1. Download the app on your smartphone device using the QR codes below.
2. Register your account and login.

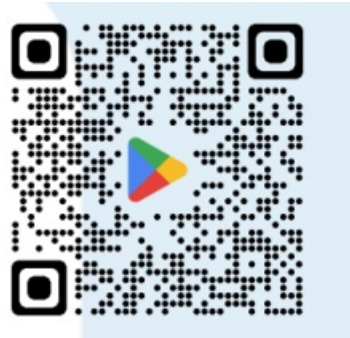

## Add device

1. Click the “+” button and select “Add Device” or “+ Device”.
2. Select either “For Residential” or “For Industrial”.
3. Insert the Smart Device into the motor’s WiFi port.
4. Observe the status light on the device which will indicate that the device can be connected to.  
Note: If status light is solid, hold the reset button for approximately 5-6 seconds.
5. Press “Search for Device” as indicated on your smartphone, and it will begin to scan for the device.
6. Once the device has been found, simply press the large “+” button.
7. Select your WiFi network and input your password to connect to the network.
8. Your smartphone will then connect to the device.
9. Input the device name and press “Try it”.
10. The door can now be operated and monitored using your smartphone.

---

## Documents / Resources

A thumbnail image of a document titled "SUPERLIFT WiFi F-linX App Connecting [pdf] Instructions". The document shows a list of steps for connecting the app to the device. The first step is "1. Register your account and login." followed by "2. Download the app on your smartphone device using the QR codes below." and "3. Register your account and login." The document also includes a QR code for downloading the app from the App Store.	<p><a href="#">SUPERLIFT WiFi F-linX App Connecting [pdf] Instructions</a> WiFi F-linX App Connecting, F-linX App Connecting, App Connecting, Connecting</p>
---	--

## References

- [User Manual](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.