



THINK RIDER SPTTHR008 Trainer Table User Manual

[Home](#) » [THINK RIDER](#) » THINK RIDER SPTTHR008 Trainer Table User Manual 


THINK RIDER SPTTHR008 Trainer Table User Manual



Contents

- [1 Product Overawe](#)
- [2 Warranty Conditions](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)

Product Overawe

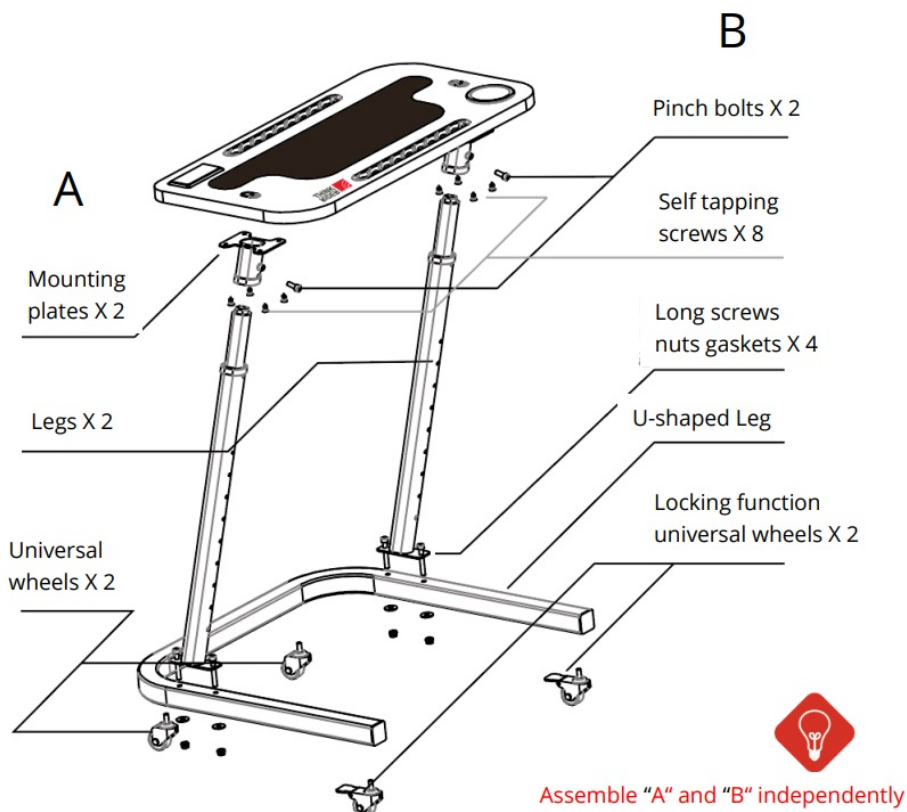

- Assembly of part "a": place the table on a flat surface with the table facing down and install the two mounting plates on the table with the 8 self tapping screws provided. Please refer to the legend for the inclination direction of the mounting plates.
- Screw the two pinch bolts into the mounting plates shallowly so that they do not exceed the inner wall of the mounting plates.
- Put the assembled "a" aside, and then assemble "B".
- Four universal wheels are installed under the U-shaped leg, two universal wheels are locking function are on the side of U-shaped opening, and the other two universal wheels without locking function are on the opposite side of U-shaped opening.
- Install the two legs on the U-shaped leg by using the matching four long screws, nuts and gaskets. Refer to the legend and pay attention to the position of screws , nuts and gaskets and the inclination direction of the legs. Pay attention to the four screws are not locket, slightly fixed.
- Install the assembled "A" to "B" according to the direction of the legend. The two legs pass through the mounting plates and the buttons on the legs protrude above the desktop.
- Lock the two pinch bolts on the mounting plates to fix the mounting plates and the leg and the locking force is 3nm.

- The four screws fixing the U-shaped leg and the leg are locked to fix the leg and the U-shaped leg.

Warranty Conditions

A new product purchased in the Alza.cz sales network is guaranteed for 2 years. If you need repair or other services during the warranty period, contact the product seller directly, you must provide the original proof of purchase with the date of purchase.

The following are considered to be a conflict with the warranty conditions, for which the claimed claim may not be recognized:

- Using the product for any purpose other than that for which the product is intended or failing to follow the instructions for maintenance, operation, and service of the product.
- Damage to the product by a natural disaster, the intervention of an unauthorized person or mechanically through the fault of the buyer (e.g., during transport, cleaning by inappropriate means, etc.).
- Natural wear and aging of consumables or components during use (such as batteries, etc.).
- Exposure to adverse external influences, such as sunlight and other radiation or electromagnetic fields, fluid intrusion, object intrusion, mains overvoltage, electrostatic discharge voltage (including lightning), faulty supply or input voltage and inappropriate polarity of this voltage, chemical processes such as used power supplies, etc.
- If anyone has made modifications, modifications, alterations to the design or adaptation to change or extend the functions of the product compared to the purchased design or use of non-original components.

Dear customer,


Thank you for purchasing our product. Please read the following instructions carefully before first use and keep this user manual for future reference. Pay particular attention to the safety instructions. If you have any questions or comments about the device, please contact the customer line.

✉ www.alza.co.uk/kontakt

☎ +44 (0)203 514 4411



Importer Alza.cz a.s., 170 00 Praha 7, www.alza.cz

Documents / Resources

 <p>Trainer table User Manual - (download manual) Warranty manual - (download manual) Accessories manual</p>	<p>THINK RIDER SPTTHR008 Trainer Table [pdf] User Manual SPTTHR008 Trainer Table, SPTTHR008, Trainer Table, Table</p>
---	--

References

- 🐛 Alza.sk – rýchly a pohodlný nákup odkiaľkoľvek | alza.sk
- 🐛 alza.at
- 🐛 alza.co.uk
- 🐛 alza.de

-  alza.hu
-  alza.sk

Manuals+.