



# Tiny Love Tiny Dreamer Musical Projector Instruction Manual

[Home](#) » [Tiny Love](#) » Tiny Love Tiny Dreamer Musical Projector Instruction Manual 



**Into the Forest™  
Tiny Dreamer™  
Musical Projector**

**Model Number:  
130500E001**








**E3050IS067 0B**

For more developmental information and playing tips please visit: [www.tinylove.com](http://www.tinylove.com)

### **Tiny Dreamer™ Musical Projector INSTRUCTION GUIDE**

READ THE INSTRUCTIONS BEFORE USE, FOLLOW THEM AND KEEP THEM FOR REFERENCE.

#### **WARNING**

- This product is not a toy.
- Possible impact injury, keep out of baby's reach.
- Remove all packaging materials before use.
- Cord may be a strangulation hazard. Keep out of reach of children. Do not use extension cords.
- Warning. Long cable. Strangulation hazard.
- Battery shall not be exposed to excessive heat as sunshine, fire or the like
- The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or similarly qualified person.
- This product must only be connected to a class II USB transformer marked with the symbol  Moreover, this transformer must be a short circuit safety isolating transformer according to IEC 61558-2-6 or a toys transformer according to IEC 61558-2-7, and marked with the symbol 
- The transformer must be a safety isolating transformer marked with the symbol 







#### **Contents**

- 1 IMPORTANT**
- 2 CLEANING AND STORAGE**
- 3 GENERAL**
- 4 Documents / Resources**
  - 4.1 References**
- 5 Related Posts**

#### **IMPORTANT**


- This product is intended for visual stimulation and is not intended to be grasped by a child.
- Avoid dropping the soother or treating it roughly.

- Do not modify or alter this product in any way.
- Adapter not included.
- The rechargeable battery cannot be replaced.
- The product has to be charged out of the reach of children.

	This product is a class III device.
	Product is for indoor use only.
	The product complies with the relevant and applicable EU legislation.
	Responsible for end of life for recycling and disposal of Electrical and Electronic Equipment (EEE).
	Use class II transformer
	A short circuit safety isolating transformer

## CLEANING AND STORAGE

1. Unplug the product before cleaning.
2. Use a damp cloth to wipe clean.
3. DO NOT submerge any part of the product in water.

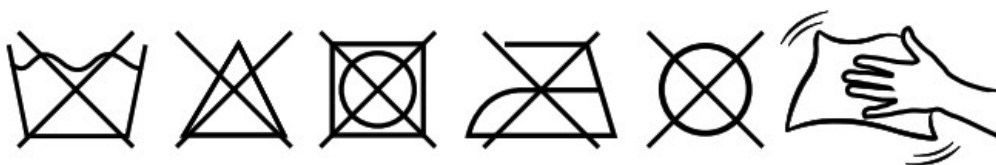

## GENERAL

### CHARGING INFORMATION

1. The Projector Soother must be charged before being used for the first time:
  - Connect one end of the USB cable to the Projector Soother and the other to the USB transformed.
  - Leave for at least 4 hours to charge.
  - When charging the LED light will be red, when fully charged it turns green.
  - When fully charged, disconnect the USB cable and remove it from the Projector Soother.
2. When a battery is almost empty, the red LED light will blink.

You are therefore advised to charge the Projector Soother.


3. If the Projector Soother is not used for several days, the battery may discharge. You are therefore advised to charge regularly using the USB cable provided.

## CRY SENSOR MODE

- To activate the cry sensor mode press the CRY SENSOR button (See illustrations below).
- A Blue LED light will turn on.
- The sensor will activate the program when it detects the baby's cry for approximately 4 seconds without interruption.
- The unit will be activated for 10 minutes.

## MP3 PLAYER MODE

- Connect one end of the USB cable to the Projector Soother and the other end to your computer.
- Make sure the Projector Soother is in the "on" position.
- The MP3 Player is then automatically recognized.
- In this mode, music and projection could not be turned on.

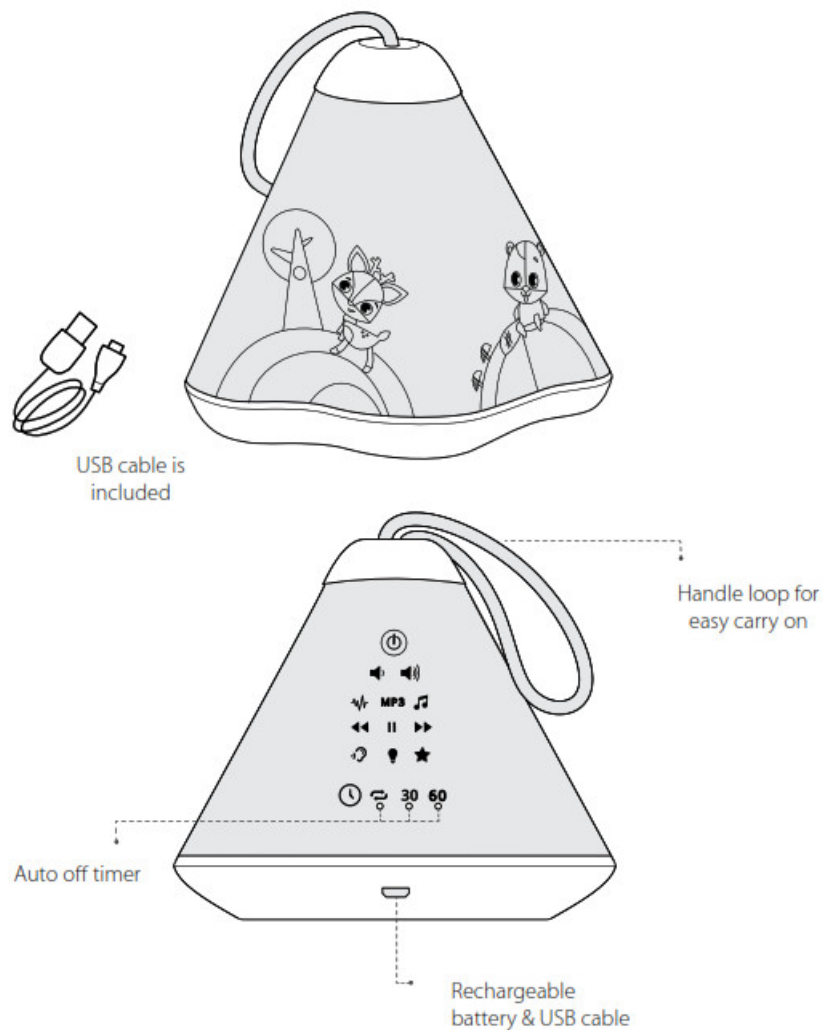



On/Off



Volume control



5 soothing white noise



Built-in MP3 music player



17 lullabies melodies



Music player control




Cry sensor



Nightlight



Projection

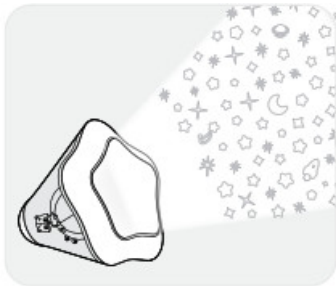

1. Projector Soother



2. Glowing Night Light



3. Portable Lantern

For customer service information please visit our website: [www.tinylove.com](http://www.tinylove.com)



Manufactured by:

Tiny Love Ltd. Korendijk 5,

NL-5704 RD, Helmond.

© All rights reserved, Tiny Love Ltd.

E3050IS067 0B

## Documents / Resources



[Tiny Love Tiny Dreamer Musical Projector](#) [pdf] Instruction Manual  
Tiny Love, 130500E001, iny Dreamer, Musical Projector

## References

-  [Tiny Love Gymini® & Activity Mats, Baby Gear, Baby Mobiles & Soothers](#)