
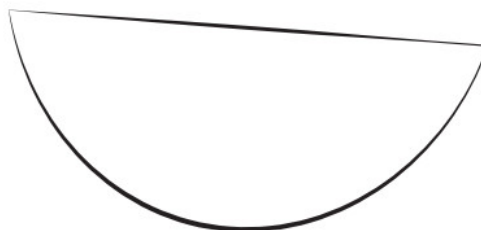


TUO Contact Sensor with Matter Instruction Manual

[Home](#) » [TUO](#) » TUO Contact Sensor with Matter Instruction Manual 

TUO

Contact Sensor

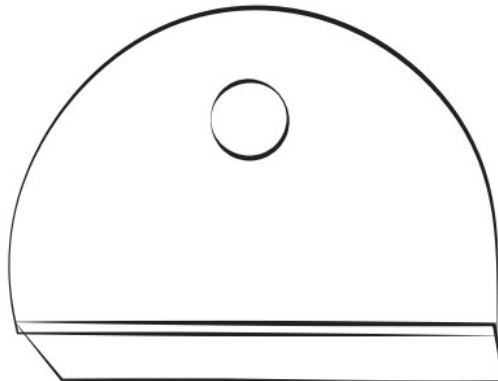

Getting Started


Contents

- [1 Contact Sensor with Matter](#)
- [2 Pairing & activation](#)
- [3 Battery replacement](#)
- [4 Resetting the device](#)
- [5 Legal information](#)
- [6 Documents / Resources](#)

Contact Sensor with Matter

Getting started

Press the button on the front of the contact sensor to activate.

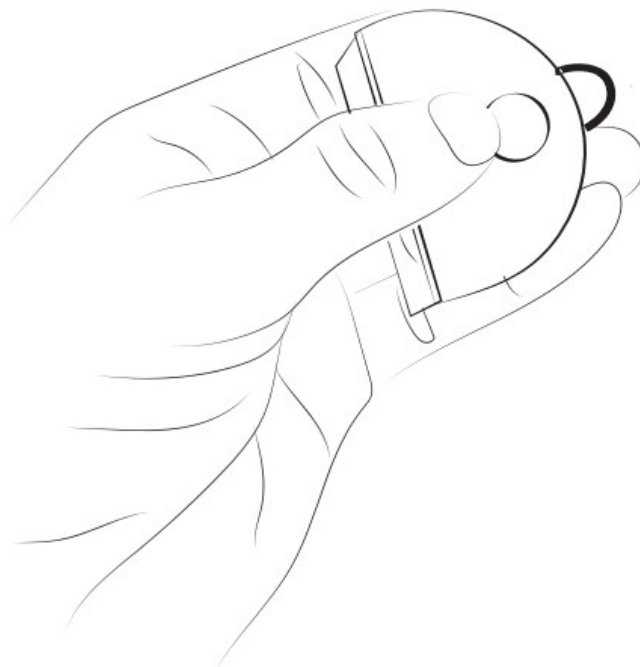


Pairing & activation

Pair the TUO Contact Sensor to the home hub of your choice. Ensure your network has a compatible Thread Border Router.

To learn more about Thread Border Routers, head to <http://findtuo.com/borderrouter>




Remove the backplate and flip it over to reveal the pairing code. Scan or type in the manual pairing code in the platform of your choice.

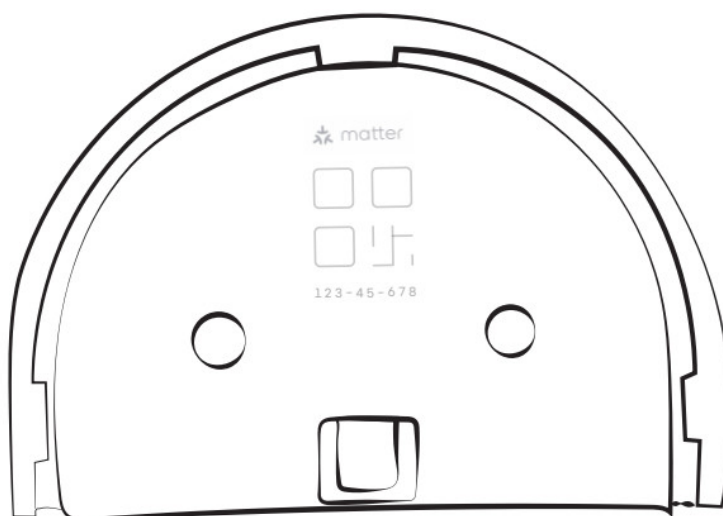

Battery replacement

When it is time to replace the battery, simply turn the TUO Contact Sensor around and remove the backplate.

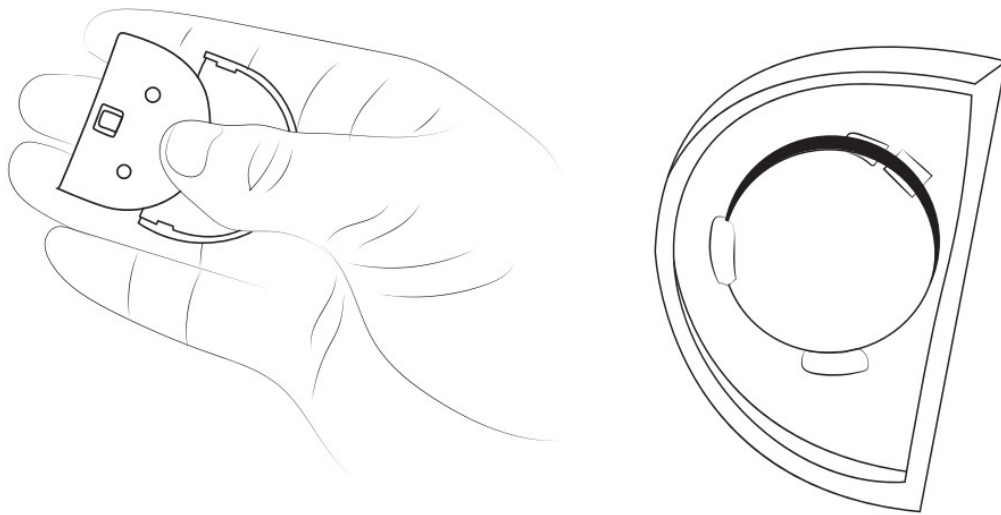

Resetting the device

To perform a soft reset, push the button on the front of the TUO Contact Sensor. The green light will begin to flash when a reboot is successful.

Push it in and hold for 5 seconds to completely reset the device. Please note that this will remove the device from the platform you are using and will require re-pairing.

Backplate mounting

The backplate can be removed from the TUO Contact Sensor and can be mounted by screws or tape to the door / window.



Warning

Magnet warning: This device contains a magnet and should be kept away from people with pacemakers or other medical devices that may be affected by magnetic fields. It is important to keep the device at a safe distance from these individuals to avoid any potential harm or interference with their medical devices.

Please note that failure to follow the safety instructions and warnings provided in the user manual may result in injury, damage to property, or other harmful consequences.

Legal information

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: **(1)** this device may not cause interference, and **(2)** this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates uses and can radiate radio frequency energy, and if not installed and used in accordance with instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this device does cause harm to television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures: re-orient or relocate the receiving antenna, increase separation between the equipment and receiver, or consult a dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by TUO Accessories LLC can void the user’s authority to operate this device.



Contact Sensor


Please keep your Matter Setup Code in a safe place.
You need it to securely add TUO Contact Sensor to your home.

findtuo.com

Model: TCS-07505

• FCC ID: 2BA2K-TCS-07505

Documents / Resources

 <p>TUO Contact Sensor</p> <p>Getting Started Empowerance</p>	<p>TUO Contact Sensor with Matter [pdf] Instruction Manual</p> <p>Contact Sensor with Matter, Contact, Sensor with Matter, with Matter, Matter</p>
--	--