




Contents [[hide](#)]

- [1 Tuob 2023 AI Translator Device](#)
- [2 Specifications](#)
- [3 Key Features](#)
- [4 Button instruction](#)
- [5 Quick operation guide](#)
- [6 Main function introduction](#)
- [7 FCC STATEMENT](#)
- [8 Safety](#)
- [9 FAQs](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)

Tuob

Tuob 2023 AI Translator Device

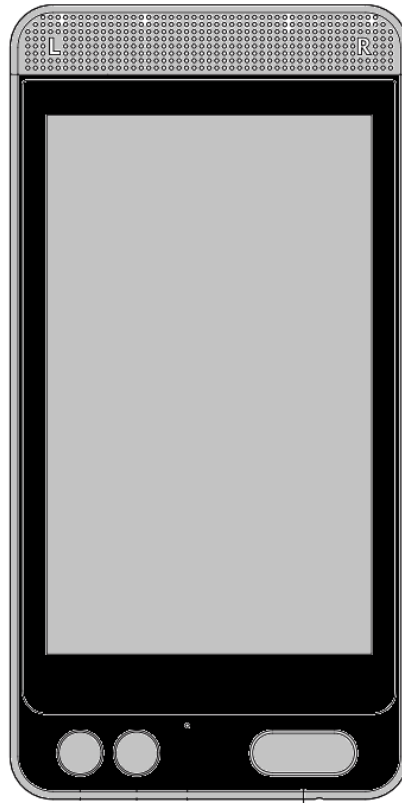

Specifications


- **Screen:** 3.0 to 4.0-inch HD touch screen
- **Language Support:**
 - **Online Translation:** Supports up to 138 languages
 - **Offline Translation:** Supports 14 to 17 commonly used languages
- **Photo Translation:** Utilizes a high-definition camera for translating text in images
- **Battery:** 1500mAh rechargeable lithium battery
 - **Usage Time:** 6–10 hours of continuous use
 - **Standby Time:** Up to 7 days
- **Connectivity:** Wi-Fi and hotspot capabilities
- **Audio:** High-fidelity speaker and microphone for clear communication
- **Dimensions:** Approximately 107mm x 63mm x 10.5mm
- **Weight:** Approximately 233g
- **Charging:** DC 5V/1A via USB-C port

Key Features

- **Real-Time Two-Way Voice Translation:** Instant translation with high accuracy and low latency
- **Offline Translation Capability:** Useful for travel without internet access

- **Photo Translation:** Translate text from images, such as menus and signs
- **Advanced AI Functions:** Includes unit and currency conversion, real-time weather updates, and more
- **Multifunctional Tool:** Ideal for travel, business trips, language learning, and communication with foreign friend

Button instruction

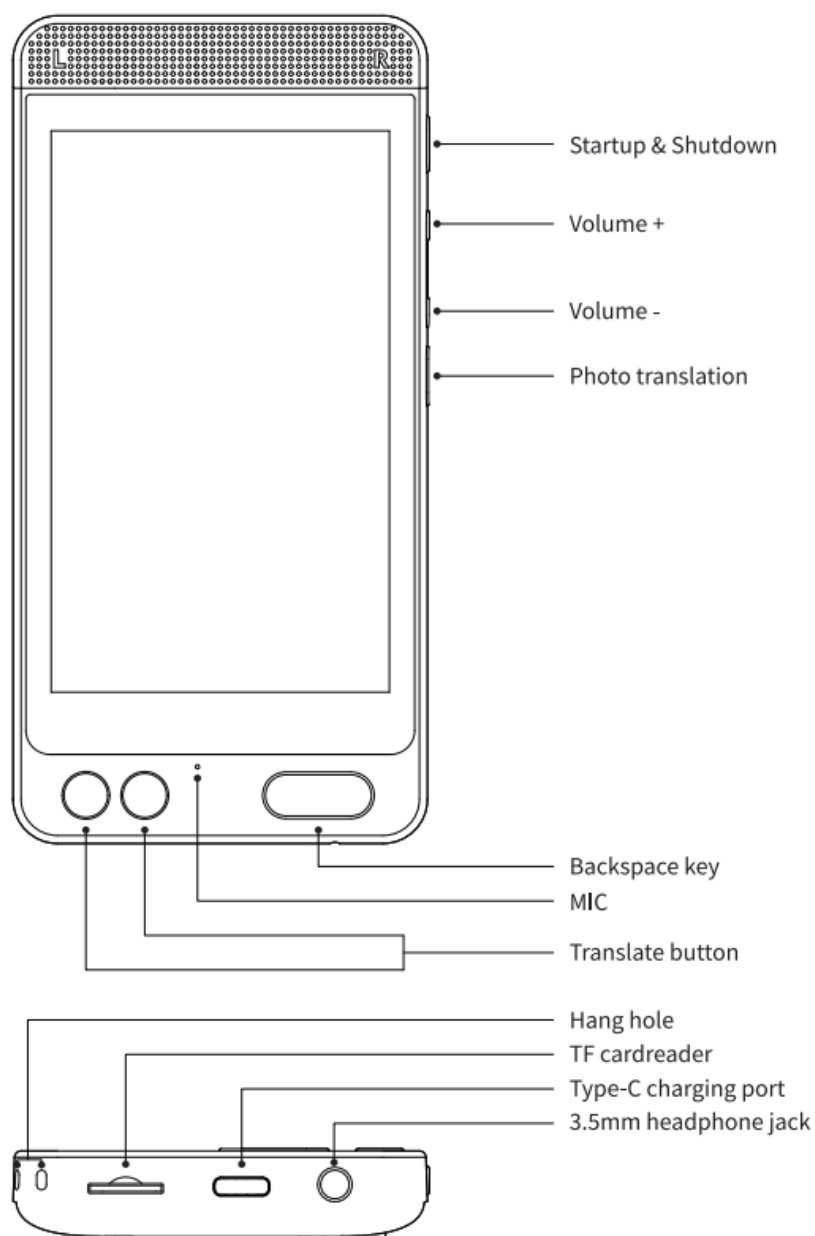

Quick operation guide

First of all thank you for using our products! This device supports WiFi, please select WiFi according to the actual use environment.

Wireless network environment

Some applications need to be connected to the network.

Setting method:

Click the “Settings” menu, open the “Wi-Fi” to view the available network, select the wireless network, enter the password to connect.

Start/shut down/restart

- **Power on:**

Long press the power button for more than 2 seconds, the screen will display the startup animation to the translation interface, and you can use it normally.

- **Shutdown:**

Hold down the power button for more than 2 seconds, and the restart/Shutdown icon will be displayed on the screen. Select the shutdown icon to shut down the device.

- **Restart:**

Hold down the power button for more than 2 seconds, the restart/shutdown icon is displayed on the screen, select the restart icon, and the device restarts.

Status bar

The top of the device screen displays some status information of the device, such as time, Bluetooth, WiFi network, power and other status information.

Main interface

The main interface of the device is the main function entrance of the device.

There are 16 main functions:

Online translation, offline translation, photo translation, input translation, multinational conference, simultaneous interpretation, mobile phone group chat, intelligent recording, spoken language learning, word library, favorites, exchange rate conversion, AI assistant, world clock, local music, setting. (File management, photo translation, world clock and other functions are optional, please refer to the actual model)

Turn the screen on or off

- **Turn the screen on or off manually:**

When the screen is off, press the power button to turn on the screen. When the screen lights up, press the power button to turn off the screen;

- **Set the automatic shutdown time:**

Click on the “Settings” menu and then click on the “Automatic shutdown” option to adjust the shutdown duration.

- **Set standby time:**

Click the “Settings” menu, and then click the “Standby time” option, you can adjust the standby time.

Main function introduction

Online translation

Click on the native language or foreign language option at the top of the online translation page to select the language you want to translate into. Long press the voice key, release the voice key after input, you can realize 142 languages mutual translation. (This feature needs to be used in an environment with an Internet connection)

1. Click the translated content on the screen to broadcast the translated content by voice;
2. The mother tongue voice key corresponds to the left translation language, and the foreign language voice key corresponds to the right language;
3. The clearer the voice input, the more accurate the recognition;
4. The native language and foreign language of some models correspond to the “voice key” of the key.

Offline translation

It can translate 18 languages offline, and this function can translate accurately without the Internet environment, using the same method as the online translation function. (The number of offline translation languages varies between different product models, please refer to the actual model.

Input translation

Input Translation can translate 142 languages online. Select the language you want to translate and enter the translated content in the text box to translate it. Click the horn icon to play the translated content repeatedly.

Photo translation

Online photo translation supports 74 languages, offline photo translation supports 39 languages.

How to use:

1. Click the language icon at the top of the photo translation page to enter the language selection list and select the required language;
2. Tap the screen to focus on the text you want to translate;
3. Click the Shoot button at the bottom of the screen;
4. Crop the picture to keep only the content area that needs to be translated;
5. After adjusting the area, click the Confirm button to display the translation result.

(This function is optional, please refer to the actual model)

Simultaneous interpretation

Click the icon in the upper right corner of the simultaneous interpretation page, and the two-dimensional code window will pop up. Use Chrome, PayPal, WeChat and other software to scan the two-dimensional code on the translator, and then receive the translation results on the translator simultaneously.

Multinational conference

Clicking on a multi-country meeting will give you the option to create or join a session. The input of the other party during the communication is automatically recognized, and then quickly translated and played.

1. **Join a session:** Request the session ID from the moderator who creates the session. Enter the ID and click Join. Enter the name, select voice, and click Join to start the session.
2. **Create a session:** Click Start to enter a name and select a language. After clicking enter, the system will provide a series of ids that will be permanently displayed at the top. Share the session ID with other participants.

(This function is optional, please refer to the actual model)

Mobile phone group chat

Scan the QR code (Chrome, PayPal, wechat, etc.) or enter the shared URL to join the group chat, automatically translate the message language and support tts, to achieve barrier-free communication.

Intelligent recording

The smart recording can translate 15 languages. Click the language option at the top of the smart recording page, select the language you want to record and translate, click the microphone button at the bottom of the screen to start recording and translate in real time, press again to end the recording translation, and then choose whether to save this recording.

AI assistant

Small degree AI intelligent assistant, conversational AI chatbot. (This feature is only available when the system language is Chinese)

Oral English learning

Learn 500 sentences of spoken English. Select the statement you need to learn, press and hold the voice key to record it, release the voice key to translate it accurately, click the icon to the right of the translated content to enter the follow-up page, hold down the voice key to start follow-up reading, and score the follow-up reading after releasing the voice key.

Favorite

You can view your favorites in the word library and speech translation section.

Word bank

It includes a number of words: primary school, junior high school, senior high school, Band 4, 6, postgraduate entrance examination, IELTS, TOEFL, SAT, GRE and other vocabulary.

Local music

Support mp3, flac, wav and other formats of local music playback.

Device upgrade

The device will be updated from time to time. If your device cannot be updated, the possible reasons are as follows:

1. The current version is the latest version, and there is no new upgrade package.
2. Check whether the network connection of the device is normal. You will receive the upgrade notification only when the network connection is normal.
3. There must be sufficient power before the version update. Do not perform any operation during the system installation. In this way, the system installation is interrupted and the upgrade fails.

Note on charging and battery use

1. Before charging, ensure that the charging interface is clean and free of dirt.
2. When connecting the charging cable to the charging interface, ensure that the charging cable is connected correctly. Do not forcibly connect the charging cable.
3. This product is not equipped with a power adapter, if the consumer uses a power adapter for power supply, it should purchase a power adapter that is certified and meets the standard requirements.
4. If the battery has abnormal phenomena such as excessive temperature, discoloration, deformation and leakage during use, charging or storage, please stop using it to avoid safety problems.
5. When charging, because the battery temperature will rise, do not put together with flammable materials, so as not to cause fire. Batteries must not be exposed to conditions such as sunlight, fire, or similar overheating.
6. Do not disassemble, squeeze, heat or burn the built-in battery of this product, or use sharp objects, screwdrivers, etc. to tie or pry the battery, the above operations will cause the battery fire.

In order to reduce the risk of electric shock for children, please charge this product under the guidance of parents or other guardians.

FCC STATEMENT

warning

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Safety

Precautions

- Do not place the device in an environment where the temperature is too low or too high (below -10° C or above 50° C) for a long time. Extreme temperatures may deform

the device and shorten the service life of the device.

- Do not use the device during thunderstorms; Do not place the device in water; Keep the device and all accessories away from children and pets to avoid choking or other serious consequences due to accidental ingestion.

Product commitment

This product complies with the requirements of the national Measures for the Management of Pollution Control of Electronic Information Products (including the Requirements for the limit of toxic and harmful Substances in Electronic Information Products and the Requirements for the Identification of Pollution Control of Electronic Information Products). The environmental protection period marked on the product will not leak or change under normal use within the corresponding period, and the use of the electronic information product by the user will not cause serious pollution to the environment or serious damage to his personal life and property.

Non-warranty clause

1. The validity period of three packages has exceeded.
2. Damage caused by force majeure.
3. Performance failure caused by human damage.
4. Unauthorized maintenance/misuse/collision/negligence/abuse/fluid intake/accident/alteration/incorrect use, or tearing/altering of the label.

Warranty card/ Certificate of qualification

Thank you for your support and love for this product, according to the national “three guarantees of service” provisions:

1. If a performance failure occurs within 7 days from the date of sale, consumers can choose to return the product (without affecting secondary sales), replace it or repair it.
2. Within 15 days from the date of sale, the product performance failure occurs, and the consumer can choose to replace or repair (the occurrence of human and appearance physical damage is not within the scope of the above three guarantees).

- **date of purchase**
- **purchase place** Year month day

FAQs

Q1: Can the device be used without an internet connection?

A1: Yes, the device offers offline translation capabilities for 14 to 17 commonly used languages, making it suitable for use without an internet connection.

Q2: How accurate is the translation?

A2: The device provides instant two-way voice translation with a high accuracy rate, ensuring effective communication.

Q3: What is included in the package?

A3: The package typically includes the AI Language Translator Device, a silicon protective case, a user manual, and a charging cable.

Documents / Resources

	Tuob 2023 AI Translator Device [pdf] User Guide 2023 AI Translator Device, 2023, AI Translator Device, Translator Device, Device
---	---

References

- [User Manual](#)

2023, 2023 AI Translator Device, Ai Translator Device, device, Translator Device, Tuob

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.