



VAPORESSO Zero 2 Pod System User Manual

[Home](#) » [VAPORESSO](#) » VAPORESSO Zero 2 Pod System User Manual 

Contents

- [1 VAPORESSO Zero 2 Pod](#)
- [2 EXPLODED VIEW](#)
- [3 SPECIFICATIONS](#)
- [4 USE INSTRUCTIONS](#)
- [5 PROTECTIONS](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)


ZERO²

VAPORESSO Zero 2 Pod



Thank you for choosing the Vaporesso product. Please read this instruction carefully before use to ensure a perfect experience. If there is any additional requirement about this product, please consult the local agent or contact us through our website: www.vaporesso.com

EXPLODED VIEW

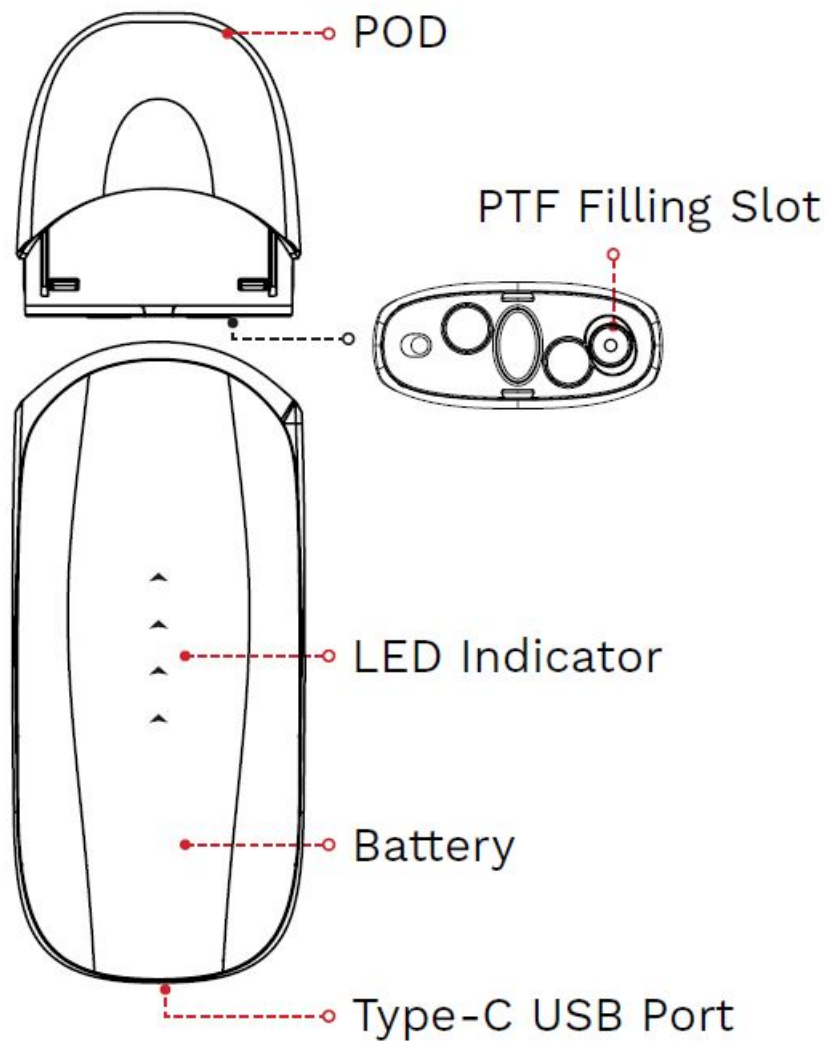

SPECIFICATIONS

- **Dimensions:** 89 x 31.8 x 19 mm
- **Pod Capacity:** 3ml (Standard) / 2ml (TPD) Pod Resistance: 1.3 Ω CCELL & 1.0 Ω MESH Battery Capacity: 800mAh
- **Display:** 4 x LED Indicators
- **Charging:** Type-C, 5V/1A

Figure 1: Replace the POD


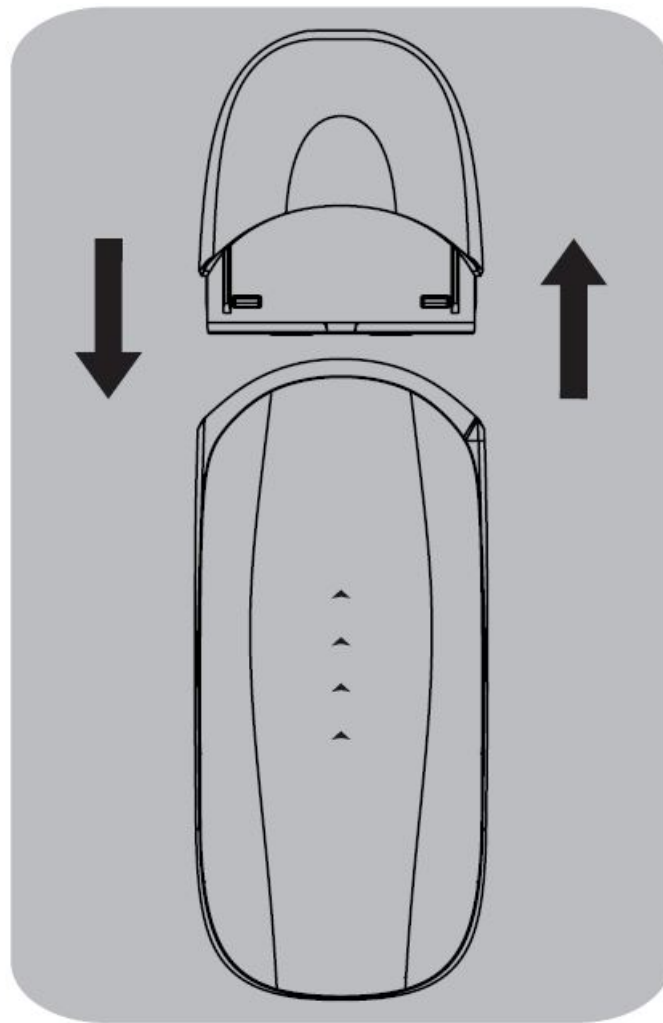


Figure 2: Fill the E-liquid

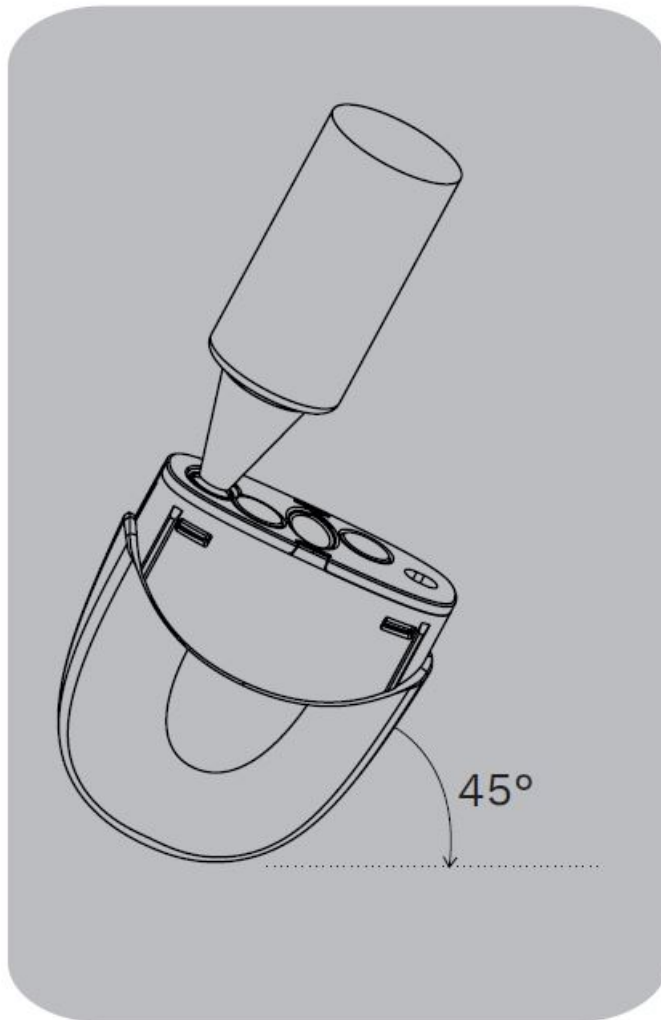

USE INSTRUCTIONS

1. Install & Replace the Pod (Refer to FIGURE)

Pull out the pod from the battery and install the new one. If it's the first time using the device, please tear off the sticker of the pre-installed pod.

2. Fill the E-liquid (Refer to FIGURE)

Fill the e-liquid through the PTF filling slot at the bottom of the pod. If it's the first time filling the e-liquid, please wait 5 minutes for the coil to prime.

3. Start Vaping

The device is draw-activated. Inhale through the mouthpiece and exhale to start vaping.

4. Check the Battery Level

The LED indicators will flash while installing the pod or charging to remain the battery capacity.

▶ ▶ ▶ ▶	: 80%~100%
▶ ▶ ▶	: 60%~80%
▶ ▶	: 30%~60%
▶	: 0~30%

5. Charge the device

Connect the Type-C cable with the device to charge the battery. The LED indicators will flash while charging. When fully charged, all the LED indicators will be always on.

PROTECTIONS

Protections	Flash Status of LED Indicator
Short-circuit	All lights will flash 5 times.
No Load	All lights will be on gradually and repeat 3 times.
Low Voltage	All lights will flash 3 times.
Over Charging	All Lights will be always on.
Over Discharging	All lights will flash 3 times.
Low Resistance	All lights will flash 5 times.
High Resistance	All lights will flash 3 times.
Overtime (8s)	All lights will be on gradually and repeated 3 times.

CAUTIONS

1. Please turn off the device when it is not in use.
2. Do not leave the charging device unattended.
3. Do not drop, throw or abuse your device, which may cause damage.
4. Please use a standard USB output charger with a proper charging current and voltage range.
5. Keep away from the water or any flammable gas, or liquid.
6. Do not expose the device to direct sunlight, dust, moisture, or mechanical shock.
7. Do not expose the device to extreme temperatures. (Recommended temperature range: -10~60°C /14~140°F while using and -10~45°C /14~113°F while storing).
8. EEE Recycling: the product should not be treated as household waste, instead, it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment.
9. Battery Recycling: the product battery should not be treated as household waste, instead, it should be handed over to the application used battery collection point for recycling.
10. Only have your device repaired by Vaporesso. Do not attempt to repair it by yourself as damage or personal injury may occur.


WARNINGS

This refillable electronic cigarette is intended for use with compatible e-liquid, which may contain nicotine. Nicotine is an addictive substance and it is not suitable or recommended to use in the following cases:

1. This device is not suitable for:
 - Persons under the legal smoking age.
 - Persons experiencing heart disease, stomach or duodenal ulcers, liver or kidney problems, long-term throat disease or difficulty breathing due to bronchitis, emphysema or asthma.
 - Persons with an overactive thyroid gland or experiencing phaeochromocytoma (a tumor of the adrenal gland that can affect blood pressure).
 - Persons taking certain medications like Theophylline, Ropinirole or Clozapine and etc..
2. This device is not recommended for:
 - Non-smokers
 - Pregnant or breastfeeding women
3. You may experience the following results if you use nicotine-containing e-liquid with this product. If it happens, please consult a healthcare professional and show them this leaflet if possible:
 - Feeling faint – Nausea – Dizziness – Headache – Coughing – Irritation of the mouth or throat
 - Stomach discomfort – Hiccups – Nasal congestion – Vomition
 - Chest palpitations/pain or an irregular heart rate

This device should not be used by persons under the legal smoking age.

Documents / Resources

	VAPORESSO Zero 2 Pod System [pdf] User Manual Zero 2 Pod System, Zero 2, Pod System
---	--

References

-  [VAPORESSO » Premium Brand Vape Manufacturer](#)