



Vidami Reaper 3 in 1 Video Controller User Guide

[Home](#) » [Vidami](#) » Vidami Reaper 3 in 1 Video Controller User Guide 

Vidami Reaper 3 in 1 Video Controller User Guide



Contents


- [1 REAPER MODE](#)
- [2 REAPER MODE FUNCTIONS](#)
- [3 REAPER TRACK & KEYBOARD SHORTCUT SETUP](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

REAPER MODE

To switch to REAPER MODE, place Vidami Blue on a flat surface and **HOLD** Speed and Play/Pause as you TAP Loop. The blue LED will blink 3 times to show that you successfully changed modes.



REAPER MODE FUNCTIONS

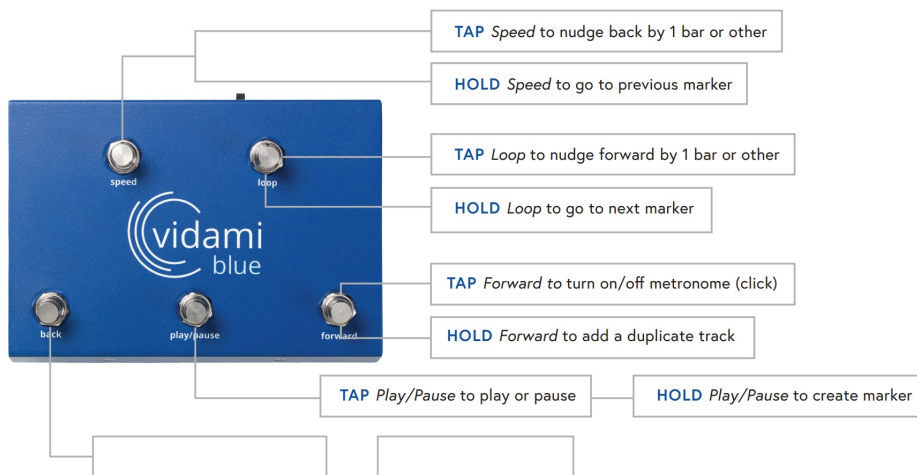

NOTE

To check which mode your Vidami Blue is in, open a blank document on your computer or iOS device and place cursor on document. On the Vidami Blue, **HOLD** Speed and Forward as you **TAP** Play/Pause. The blue LED will blink 3 times and the name of the current mode will print out on your document.

REAPER TRACK & KEYBOARD SHORTCUT SETUP

In order to optimize the use of your Vidami Blue, the following settings need to be configured.

Track Setup

Under the Tracks menu: Select “Set All Tracks to Automatic Record-Arm When Selected”

Keyboard Shortcut Setup

Under the Reaper menu, choose Preferences, Select General, then Keyboard/Multitouch. Under the Keyboard section at the right, Click on “Assign keyboard shortcuts to actions or change existing shortcuts”. (Navigation: Reaper menu/Preferences/General/Keyboard/Multitouch).


With the Actions window open, perform a filter search for “Track: Duplicate tracks”. Select “Track: Duplicate tracks”. At the bottom of the Actions window, press the Add button. After the Pop-Up window appears, Press & Hold the Forward switch on the Vidami Blue to input the shortcut. Press OK to save and close window.

With the Actions window open, perform another filter search for “Move Edit Cursor Forward One Measure”. Select “Move Edit Cursor Forward One Measure”. At the bottom of the Actions window, press the Add button. After the Pop-Up window appears, Tap the Loop switch on the Vidami Blue to input the shortcut. Press OK to save and close window.

With the Actions window open, perform another filter search for “Move Edit Cursor Back One Measure”. Select “Move Edit Cursor Back One Measure”. At the bottom of the Actions window, press the Add button. After the Pop-Up window appears, Tap the Speed switch on the Vidami Blue to input the shortcut. Press OK to save and close window.



Documents / Resources

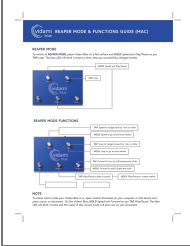	<p>Vidami Reaper 3 in 1 Video Controller [pdf] User Guide</p> <p>Reaper 3 in 1 Video Controller, Reaper, 3 in 1 Video Controller, 1 Video Controller, Controller</p>
---	--