

VOLLRATH FC-6BG-042S Velocity Adjustable Breath Guard Installation Guide

Home » VOLLRATH » VOLLRATH FC-6BG-042S Velocity Adjustable Breath Guard Installation Guide 🖫



VOLLRATH FC-6BG-042S Velocity Adjustable Breath Guard



Contents

- **1 BEFORE YOU BEGIN**
- **2 BREATH GUARDS WITH HEAT OR LIGHT STRIPS**
- **3 BREATH GUARD WITHOUT HEAT OR LIGHT STRIPS**
- **4 TROUBLESHOOTING**
- **5 CUSTOMER SUPPORT**
- 6 Documents / Resources
 - **6.1 References**
- **7 Related Posts**

BEFORE YOU BEGIN

- 1. Download the specification sheet from Vollrath.com. You will need to refer to this document for dimensions and NSF requirements.
- 2. Know the countertop manufacturer's requirements for preparing and installing equipment into the countertop prior to starting installation. Countertop materials require specific preparation. Refer to the countertop manufacturer for instructions regarding the proper installation of equipment into the material.
- 3. Know the NSF standards for breath guard installation applicable to your installation. The standards can be found on the NSF website.

BREATH GUARDS WITH HEAT OR LIGHT STRIPS


- 1. Breath guards with heat or light strips ship assembled.
- 2. Place the assembled breath guard into position onto the mounting surface.
- 3. Verify the breath guard uprights are parallel and square and the glass panels operate smoothly
- 4. Mark the mounting hole locations.
- 5. Shift the breath guard to expose the hole markings.
- 6. Drill the holes.
- 7. Feed the electrical wires through the countertop before securing the breath guard.
- 8. Attach the breath guard using appropriate hardware for the countertop surface and type of mounting.

BREATH GUARD WITHOUT HEAT OR LIGHT STRIPS

Breath guards without heat or light strips require assembly.


Mark and Drill the Mounting Holes

- 1. Refer to the spec sheets for centerline and mounting option dimensions and requirements.
- 2. Mark the mounting hole locations.
- 3. Mount the uprights securely to the countertop, making sure they are square and parallel.

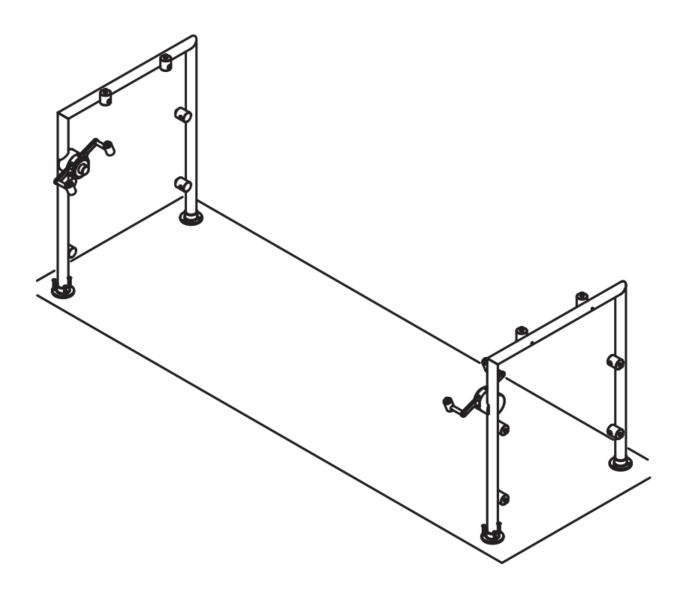


Install the Top Glass

- 1. Place one gasket on the top of each upright standoff.
- 2. Place the top glass panel on top of the uprights. Align the holes.
- 3. Place one gasket over each hole in the top glass.
- 4. Insert a plastic sleeve onto each thumbscrew and install them through each gasket and through the top glass. Tighten the thumbscrews to secure the top glass

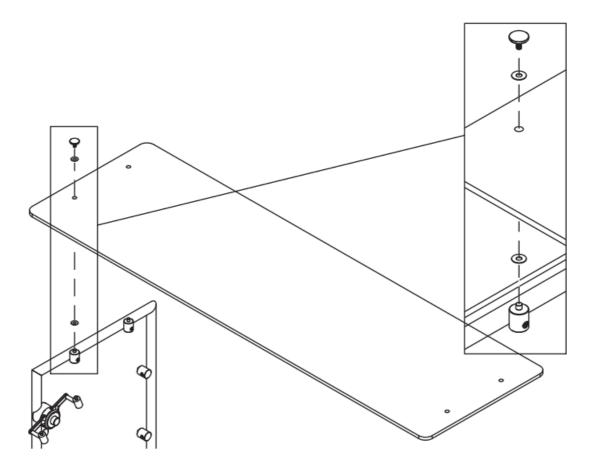


Install the Long-Side Glass

1. Rotate the adjustment mechanism so the standoffs are facing up, parallel to the countertop and locked into place.

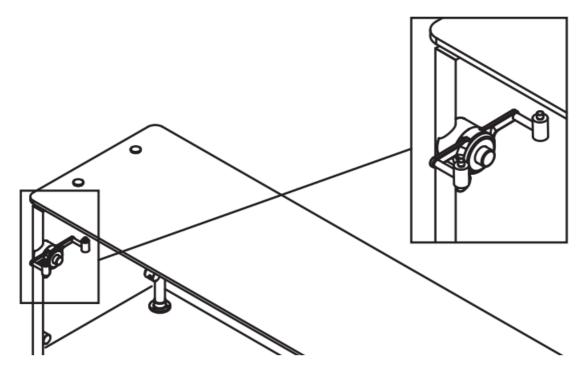

- 2. Attach the glass panel(s)
 - Place one gasket onto standoff.
 - Place the glass panel on top of the gaskets. Align the holes.
 - Place one gasket over each hole in the glass panel.

• Install one thumb screw through each gasket and through the glass panel. Tighten the thumbscrews to secure the panel.

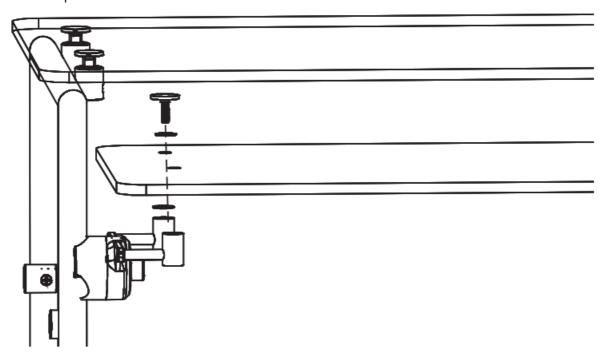


3. If applicable, repeat the steps for the other side.


Test the Installation

The glass panel should rotate smoothly and without interference.


1. Gently pushing up to unlock the glass panel.

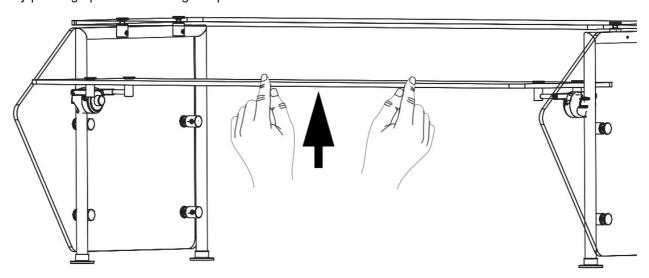


2. Press the release button.

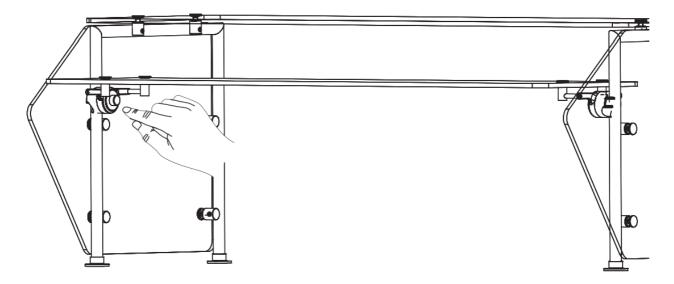

3. Lower the glass panel. Note: The glass panel rotates down in 90° increments from the starting position. You may need to push the release button more than once to lower the panel.

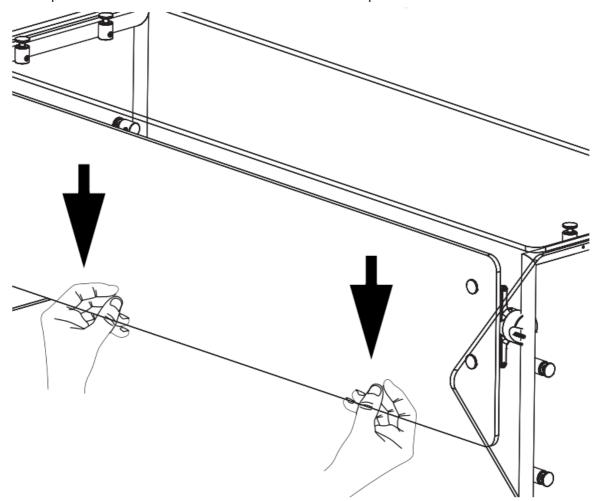


4. Rotate the glass panel up through it's full range.

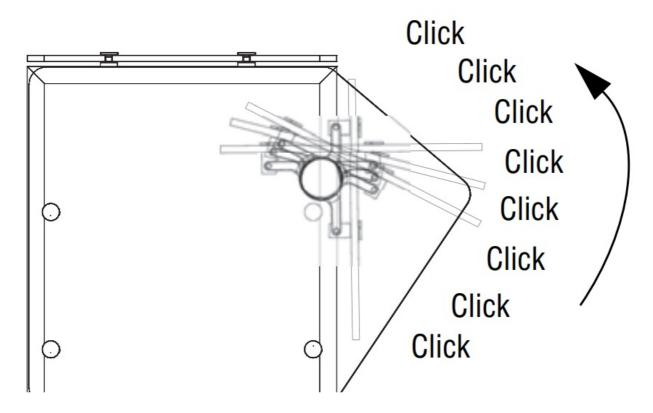

- 5. Press the adjustment button and lower the glass panel. It will rotate 90° from the previous position and then lock into place.
- 6. Press the adjustment button and lower the glass panel through all of the positions.
- 7. If the adjustable panel binds, adjust and retighten the end frame nuts and screws or the thumbscrews.

Install the End Glass Panels

- 1. Place one gasket on each standoff for the glass panel.
- 2. Place the glass against the gaskets and standoffs.
- 3. Place a gasket a hole in the end glass.
- 4. Install one thumbscrew through the gasket and through the glass panel. Tighten to secure the end glass.
- 5. Install the other three gaskets and thumbscrews.
- 6. Repeat these steps for the other side end glass.

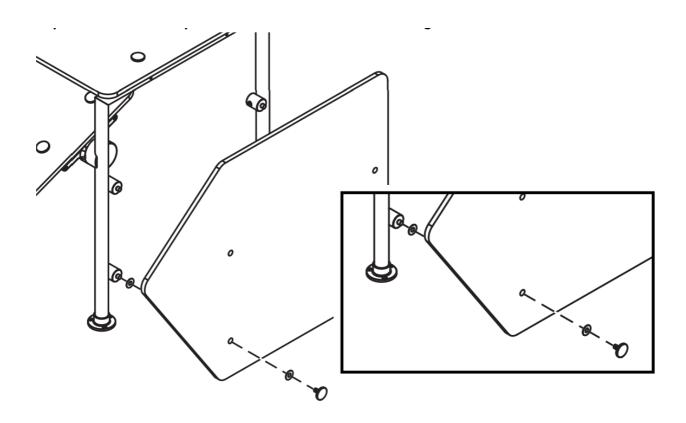

TROUBLESHOOTING

If there is any interference when the long-side glass is rotated, doublecheck to make sure the uprights are parallel and square. Loosen and adjust the glass panels as needed. Then retest the glass rotation. When the glass rotates freely, tighten all thumbscrews.

CUSTOMER SUPPORT

The Vollrath Company, L.L.C. 1236 North 18th Street Sheboygan, WI 53081-3201 U.S.A.

Main Tel: 800.624.2051 or 920.457.4851
Main Fax: 800.752.5620 or 920.459.6573
Customer Service: 800.628.0830
Canada Customer Service: 800.695.8560

Technical Services

Induction Products: 800.825.6036
Countertop Warming Products: 800.354.1970

Toasters: <u>800-309-2250</u>
All Other Products: 800.628.08





<u>VOLLRATH FC-6BG-042S Velocity Adjustable Breath Guard</u> [pdf] Installation Guide FC-6BG-042S, FC-6BG-042S Velocity Adjustable Breath Guard, Velocity Adjustable Breath Guard, Adjustable Breath Guard, Guard

References

- V Commercial Foodservice & Kitchen Equipment | Vollrath Foodservice
- V Commercial Foodservice & Kitchen Equipment | Vollrath Foodservice
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.