



VONYX 173.504 CMS Series Studio Set/Condenser Microphone Instruction Manual

[Home](#) » [VONYX](#) » VONYX 173.504 CMS Series Studio Set/Condenser Microphone Instruction Manual 

Contents

- [1 VONYX 173.504 CMS Series Studio Set/Condenser Microphone](#)
- [2 UNPACKING INSTRUCTION](#)
- [3 MICROPHONE INPUT EXAMPLES](#)
- [4 STAND ASSEMBLY INSTRUCTIONS](#)
- [5 SPECIFICATIONS](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)




VONYX 173.504 CMS Series Studio Set/Condenser Microphone



UNPACKING INSTRUCTION

CAUTION! Immediately upon receiving the product, carefully unpack the carton, check the contents to ensure that all parts are present, and have been received in good condition. Notify the shipper immediately and retain the packing material for inspection if any parts appear damage from shipping or the package itself shows signs of mishandling. Save the package and all packing materials. In the event that the product must be returned to the factory, it is important that the product be returned in the original factory box and packing.


MICROPHONE INPUT EXAMPLES

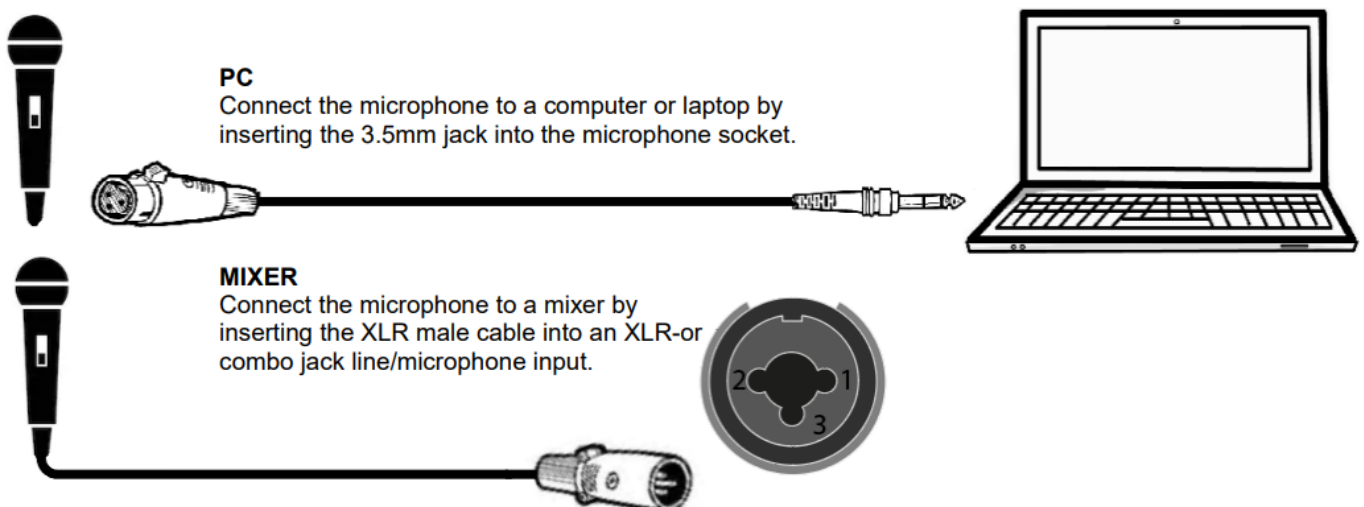

STAND ASSEMBLY INSTRUCTIONS

1. Install the base of the stand on to, for example, a tabletop.
2. Attach the suspension arm link to the base stand.

- 3. Tighten the nut once your preferred suspension arm direction has been determined.
- 4. Attach the arm to the suspension arm link.
- 5. Attach the shock mount to the suspension arm. Use the adapter of the microphone holder to enable mounting of the shock mount (picture right).
- 6. Adjust the height of the arm to your preferred height.
- 7. Put the microphone into the clamp ring of the shock mount.
- 8. Optional: attach the pop filter to the stand to eliminate popping and sibilance sound.

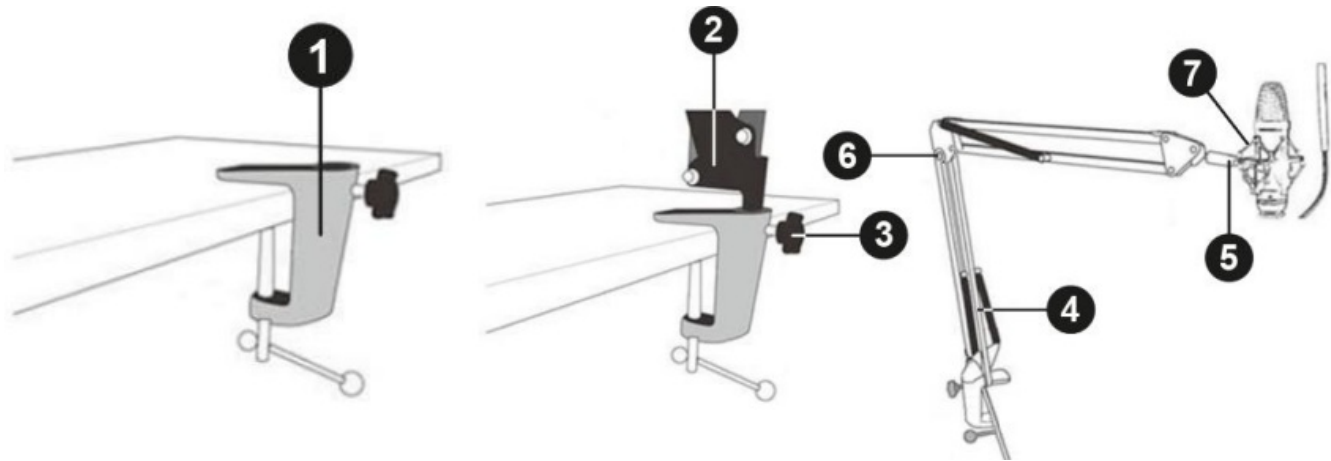

SPECIFICATIONS

	CMS400	
Ref.nr.	173.503	173.504
Frequency response	20Hz-20KHz	
Sensitivity	-37dB (+/-2dB) / 1KHz	
Impedance	200 Ohm	
Mic. Power supply	Phantom 12~48VDC	
Weight	1.5kg	

Documents / Resources

	VONYX 173.504 CMS Series Studio Set/Condenser Microphone [pdf] Instruction Manual 173.503, 173.504, CMS Series Studio Set Condenser Microphone, 173.504 CMS Series Studio Set Condenser Microphone
--	---

References

- [Sound & Light distributor - Tronios.com](#)