

vtech AM706-1W Digital Audio Monitor User Manual

Home » vtech » vtech AM706-1W Digital Audio Monitor User Manual


vtech

Contents [hide

- 1 vtech AM706-1W Digital Audio Monitor User Manual
- 2 What's in the box
- 3 Important safety instructions
- 4 1. Connect and charge the battery
- 5 2. Before use
- 6 3. Using the baby monitor
- 7 Baby unit overview
- 8 Parent unit overview
- 9 Parent unit icons
- 10 General product care
- 11 TECHNICAL SPECIFICATIONS
- 12 Frequently asked questions
- 13 Customer service and product warranty
- 14 Disposal of batteries and product
- 15 Declaration of Conformity
- 16 Documents / Resources
- 16.1 References
- 17 Related Posts



What's in the box

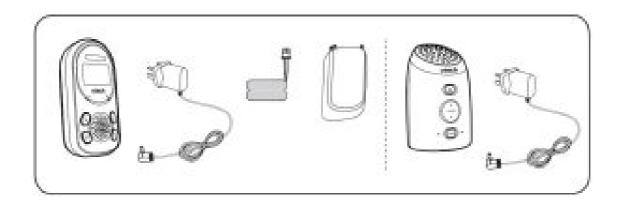

Important safety instructions

The applied nameplate is located at the bottom of the baby unit's base.

When using your equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- 1. Follow all warnings and instructions marked on the product.
- 2. Adult setup is required.
- 3. CAUTION: Do not install the baby unit at a height above 2 metres.
- 4. This product is intended as an aid. It is not a substitute for responsible and proper adult supervision and should not be used as such.
- 5. This product is not intended for use as a medical monitor.
- 6. Do not use this product near water. For example, do not use it next to a bath tub, wash bowl, kitchen sink, laundry tub or swimming pool, or in a wet basement or shower.
- 7. CAUTION: Use only the battery provided. There may be a risk of explosion if a wrong type of battery is used for the parent unit. The battery cannot be subjected to high or low extreme temperature and low air pressure at high altitude during use, storage or transportation. Disposal of battery into fire or a hot oven, or mechanically crushing or cutting or the battery can result in an explosion. Leaving the battery in an extremely high

temperature surrounding environment can result in an explosion or the leakage of flammable liquid of gas. Battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas. Dispose of used battery according to the instructions.

8. Use only the adapters included with this product. Incorrect adapter polarity or voltage can seriously damage the product.

Use only adaptors and battery listed below.



Power adapter information:

Ten Pao Industrial Co.,Ltd.

Model: S003ATB0600045 (UK) Vtech Telecommunications Limited.

Model: VT05EEU06045 (EU), VT05EUK06045 (UK,alternative). Rechargeable battery information:



Corun - Ni-MH AAA400X2-CB

Ni-MH AAA400mAh 2.4V.


- 9. The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
- 10. For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- 11. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- 12. Unplug the power cords before replacing batteries.
- 13. Do not cut off the power adapters to replace them with other plugs, as this causes a hazardous situation.
- 14. Do not allow anything to rest on the power cords. Do not install this product where the cords may be walked on or crimped.
- 15. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or local power company.
- 16. Do not overload wall outlets or use an extension cord.
- 17. Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
- 18. This product should not be placed in any area where proper ventilation is not provided. Slots and openings in the back or bottom of this product are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register.
- 19. Never push objects of any kind into this product through the slots because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.
- 20. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the product other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.
- 21. You should test the sound reception every time you turn on the units or move one of the components.
- 22. Periodically examine all components for damage.
- 23. There is a very low risk of privacy loss when using certain electronic devices, such as baby monitors, cordless telephones, etc. To protect your privacy, make sure the product has never been used before purchase, reset the baby monitor periodically by powering off and then powering on the units, and power off the baby monitor if you will not use it for some time.

- 24. Children should be supervised to ensure that they do not play with the product.
- 25. The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

SAVE THESE INSTRUCTIONS

Cautions

- 1. Use and store the product at a temperature between 0oC and 40oC.
- 2. Do not expose the product to extreme cold, heat or direct sunlight. Do not put the product close to a heating source.
- 3. Batteries should not be exposed to excessive heat such as bright sunshine or fire.





of children (more than 0.9 m away). Do not remove this tag.

- 5. Never place the baby unit inside the baby's cot or playpen. Never cover the baby unit or parent unit with anything such as a towel or a blanket.
- 6. Other electronic products may cause interference with your baby monitor. Try installing your baby monitor as far away from these electronic devices as possible: wireless routers, radios, cellular telephones, intercoms, room monitors, televisions, personal computers, kitchen appliances and cordless telephones.

Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless devices):

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless devices and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

Pacemaker patients

- Should keep wireless devices at least six inches from the pacemaker.
- Should NOT place wireless devices directly over the pacemaker, such as in a breast pocket, when it is turned ON.

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless devices.

Electromagnetic fields (EMF)

This VTech product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user's manual, the product is safe to be used based on scientific evidence available today.


1. Connect and charge the battery

Install the parent unit battery

The parent unit runs on rechargeable battery or AC power. To continuously monitor your baby, keep the parent unit connected to AC power. With the battery alone, the parent unit can cordlessly run for a short time only.



- Use only the battery supplied with this product.
- If the parent unit will not be used for a long time, disconnect and remove the battery to prevent possible leakage.

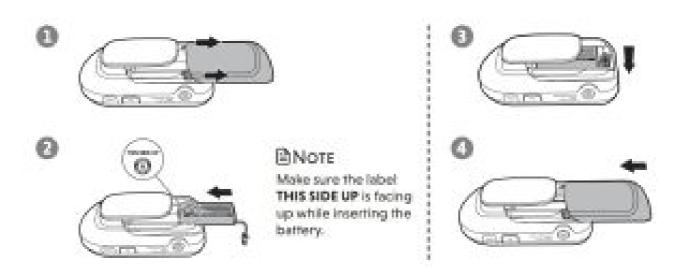


Replace the battery

To replace the battery, unplug the battery connector from the socket, and then pull the battery out of the battery compartment. Follow the steps above to install the battery.

Connect the baby monitor

NOTES

- Use only the power adapters supplied with this product.
- Make sure the baby monitor is not connected to an electric outlet that is controlled by a switch.
- Connect the power adapters in a vertical or floor mount position only. The adapters' prongs are not designed to
 hold the weight of baby monitor, so do not connect them to any ceiling, under-the-table, or cabinet outlets.
 Otherwise, the adapters may not properly connect to the outlets.
- Make sure the parent unit, the baby unit and the power adapter cords are out of reach of children.
- With audio reminder feature preset to ON, the parent unit plays an audio reminder when it is connected to a baby unit.

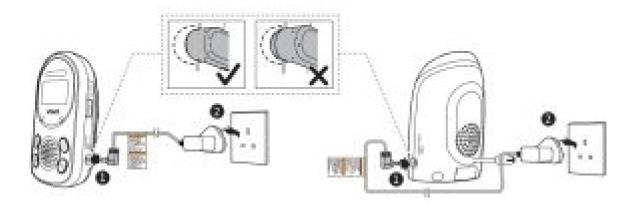

Charge the parent unit battery

When you have connected the parent unit and installed its battery for the first time or after power outage, the parent unit powers on automatically. The battery icon indicates the battery status (see the following table).

2. Before use




• This baby monitor is intended as an aid. It is not a substitute for proper adult supervision, and should not be used as such.

Test your audio monitor

You may test the baby monitor before initial use, and at regular times thereafter.

- CAUTION
- For hearing protection, make sure the parent unit is more than 2 metres away from the baby unit. If you hear any high-pitched noise, move the parent unit further until the noise stops. You can also press ¹⁰/_Y on the parent unit to lower or mute the noise.
- Make sure your baby unit and parent unit are on.
- Speak towards the microphone of the baby unit. You will hear the sound at the parent unit, and see the visual sound indicators light up.

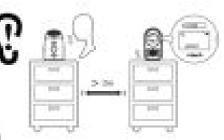

PINOTE

 When the parent unit displays NOT LINKED and T flashes, move the parent unit closer to the baby unit jobserve the minimum distance of 2 metres).

SE TIP

 Increase the speaker volume of the parent unit if you cannot hear the sounds transmitted from the baby unit.

Positioning the baby monitor



• Keep the baby unit out of the reach of your baby. Never place or mount the baby unit inside the baby's cot or


- 1. Place the baby unit more than 1 metre away from your baby.
- 2. Place the parent unit more than 2 metres away from the baby unit.



The parent unit battery is fully charged after 11 hours of continuous charging.

- It takes longer to charge the battery when the parent unit is turned on. To shorten the charging time, turn the parent unit off while charging.
- The standby time varies depending on the sensitivity level you set, your actual use and the age of the battery.

BATTERY INDICATORS	BATTERY STATUS	Action
The battery icon is off.	No battery is installed but operates using AC power.	Install the parent unit battery. Charge without interruption (at least 30 minutes).
The screen displays LOW BATTERY and . The BID light flashes.	The battery has very little charge and may be used for only a short time.	Charge without interruption (about 30 minutes).
The battery icon becomes solid ext.	The battery is fully charged.	To keep the battery charged, connect it to AC power when not in use.

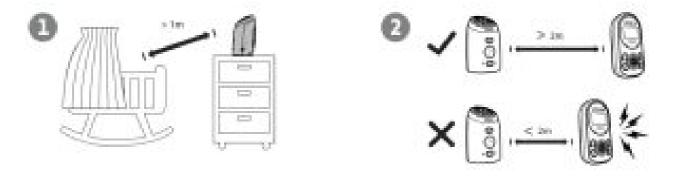



- The default volume of your parent unit is level 3. If you experience high-pitched screeching noise from your baby monitor while positioning:
 - Make sure your baby unit and parent unit are more than 2 metres apart, OR
 - Turn down the volume of your parent unit.

Operating range

The operating range of the baby monitor is up to 300 metres outdoors or 50 metres indoors. The actual operating range may vary depending on the environmental conditions, and other interferences such as walls, doors, and other obstructions.


3. Using the baby monitor

Power on or off the baby unit



- Press and hold POWER to power on the baby unit. The power light turns on.
- Press and hold POWER to power off the baby unit. The power light turns off.

Power on or off the parent unit

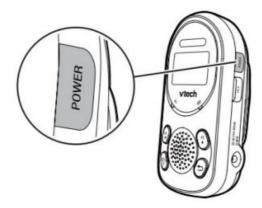

- Press and hold POWER to power on the parent unit. The screen turns on.
- Press and hold POWER again to power off the parent unit. The screen turns off. Note

Note

• The parent unit powers on automatically once it is connected to power socket or battery installed. The baby unit also powers on automatically once connected to power socket.

Adjust the speaker volume for baby unit

Press VOLUME ▲ or VOLUME ▼ on the baby unit at any time. Note

Note

• The speaker of baby unit cannot be muted.

Adjust the speaker volume for baby unit using parent unit

The baby unit volume can also be adjusted in the parent unit.

- Press MENU When the parent unit is not in use.
- Press ^{VOL} or ^{VOL} to scroll to BABY VOLUME, then press MENU OK.
- Press A or V. to choose the desired volume level. VOLUME 1 is the softest while VOLUME 5 is the loudest.
- Press NEW to confirm your selection. The screen displays SAVED and you hear a confirmation tone.

Adjust the speaker volume for parent unit

You can adjust the speaker volume from **VOLUME 1** to **VOLUME 5**, or turn it off. The speaker volume is preset to **VOLUME 3**.

Press nor when the parent unit is not in use.

When the speaker volume is set to off, the screen displays Q.

Adjust the Voice-activated (VOX) sensitivity level of the baby unit

You can choose to hear sounds from the baby unit all the time, or to hear sounds that exceed a certain level. You can use the parent unit to adjust the microphone sensitivity of your baby unit. The higher the VOX sensitivity level, the more sensitive the baby unit is in detecting sounds for transmitting to the parent unit. The VOX sensitivity level is preset to HIGHEST.

VOX Sensitivity LEVEL	Highest	High	Medium	Low	Lowest
DESCRIPTION	The parent unit speaker is constantly on, and you will hear all sounds (including background noises) from your baby's room.	The parent unit speaker turns on for soft bebbling and louder sounds from your baby. It remains quiet when your baby sleeps soundly.	The parent unit speaker turns on for loud balbbling and louder sounds from your baby, It remains quiet when your baby makes soft sounds.	The parent unit speaker turns on for crying and louder sounds from your baby. It remains quiet when your baby makes soft sounds.	The parent unit speaker turns on for loud crying or screeching sounds from your baby. It remains quiet when your baby makes soft sounds.

- Press (OK) when the parent unit is not in use.
- Press ** or ** to scroll to SENSITIVITY, then press ** OK.
- Press [™] or [™] to choose the VOX sensitivity level.
- Press OK to confirm your selection. The screen displays SAVED and you hear a confirmation tone.

Note

• To enter the VOX Level menu of the parent unit, the baby unit must be turned on.

Sound alert

If you turn on the sound alert, the parent unit beeps when the baby unit detects sounds which had triggered the red light of visual sound indicator on the parent unit.

When the sound alert of the parent unit is turned on, (so is shown on LCD display. The sound alert is preset to OFF.

- Press (K) when the parent unit is not in use.
- Press or to choose SOUND ALERT, then press MOU. The screen displays ON? or OFF?
- Press HENU to confirm your selection. The screen displays SAVED and you hear a confirmation tone.

Note

• The sound alert setting on each parent unit is independent.

Vibration alert

You can turn on the vibration alert so that the parent unit vibrates when the baby unit detects sounds which had triggered the red light of visual sound indicator on the parent unit.

When the vibration alert of the parent unit is turned on, preset to OFF.

is shown on LCD display. The vibration alert is

- Press of when the parent unit is not in use.
- Press ^{via} or ^{via} to choose VIBRATOR, then press ^{MSQ}. The screen displays ON? or OFF?.
- Press Ox to confirm your selection. The screen displays SAVED and you hear a confirmation tone.

Notes

- Each time you set the vibration alert to ON, the parent unit vibrates briefly after you press /w.
- The vibration alert setting on each parent unit is independent.

Lullaby

The baby monitor has five lullables for you to comfort your baby. You can play or stop lullables on the baby unit by controlling remotely with the parent unit.

- Press KN when the parent unit is not in use.
- Press or to choose LULLABY, then press ox.
- Press [™] or [™] to choose a lullaby, or choose PLAY ALL, then press ^{MDSU}_{OK}. The screen displays PLAY or STOP.
- Press OK to confirm your selection. The screen displays SAVED and you hear a confirmation tone.

Notes

• If you choose a lullaby, the selected lullaby will be played repeatedly for about 20 minutes.

- If PLAY ALL is selected, the five lullabies will be played one after the other, until all of them are played.
- When the lullaby is playing, the parent unit displays the name of the selected lullaby, or PLAY ALL on the idle screen.

Turn on or off the glow-on-ceiling night light

You can turn on the glow-on-ceiling night light on the baby unit. The baby unit projects a starry night scene onto the ceiling.

When the glow-on-ceiling night light is turned on, # displays on the parent unit screen.

Turn on/off the night light using the baby unit:

- Press * to turn on the night light.
- 2. Press a again to turn off the night light.

Turn on/off the night light using the parent unit:

- Press (a) when the parent unit is not in use.
- Press ⁷⁶ or ¹⁶ to choose NIGHTLIGHT, then press ^{MMU}_{OK}.
 The screen displays ON? or OFF?.
- Press OK to confirm your selection. The screen displays SAVED and you hear a confirmation tone.



- The night light on baby unit operates even when the parent unit battery is out of charge or has been turned off.
- If the parent unit lost link, the night light icon on its LCD display will disappear, regardless of the night light status.



Language

You can select a language to be used in all screen displays.

- Press (N) when the parent unit is not in use.
- Press [™] or [™] to choose LANGUAGE, then press ^{WENU}/_{CR}.
- Press or to choose a language.
- Press MENU to confirm your selection. The screen displays SAVED and you hear a confirmation tone.

□ Note

The language setting on each parent unit is independent.

Temperature

Your baby unit monitors the temperature of your baby's room with its built-in temperature sensor. If the detected temperature is out of the preset temperature range, the parent unit will display an alert message.

Set temperature format:

You can choose to display the temperature in Fahrenheit (°F) or Celsius (°C).

- Press MDNU when the parent unit is not in use.
- Press or to scroll to TEMPERATURE, then press MON.
- Press or to choose FORMAT, then press NEW. The screen displays FAHRENHEIT? or CELSIUS?.
- Press MON to confirm your selection, The screen displays SAVED and you hear a confirmation tone.

Set temperature range:

You can set the desired room temperature alert range. The minimum temperature can be set between 10°C and 20 °C. The maximum temperature can be set between 21 °C and 30 °C.

- Press NENU When the parent unit is not in use.
- Press ^{ICL} or ^{VOL} to scroll to TEMPERATURE, then press MENU.
- Press XX or YX to choose MINIMUM or MAXIMUM, then press MINIMUM
- Press to or very to choose the desired minimum or maximum temperature.
- Press MENU To confirm your selection, The screen displays SAVED. You hear a confirmation tone.

Set temperature alert tone

You can turn on the temperature alert tone so that the parent unit will emit an alert tone if the detected temperature is out of range.

- Press OR when the parent unit is not in use.
- Press ^{vo.} or ^{vo.} to scroll to TEMPERATURE, then press ^{MONU}/_{OK}.
- Press to choose ALERT ON/OFF, then press NEW. The screen displays ON? or OFF?.
- Press (c) to confirm your selection, The screen displays SAVED. You hear a confirmation tone.

Extended ECO

You can turn on the extended ECO mode so that the radiation emitted will be lowered to the minimum, so as the operating range will be reduced to the minimum.

- Press MHU when the parent unit is not in use.
- Press ¹⁰⁄_A or ^{√0}⁄_Y to scroll to EXTENDED ECO, then press ^{MDNU}⁄_{OK}. The screen displays ON? or OFF?.
- Press OK to confirm your selection. The screen displays SAVED and you hear a confirmation tone.

ECO range

You can change the setting of the ECO range. The shorter the ECO range, the lower the radiation will be emitted, so as the operating range will be reduced.

- Press MONU when the parent unit is not in use.
- Press X or Y to scroll to ECO RANGE, then press MERO.
- Press ^{VII.} or ^{VII.} to choose AUTO, BIG ROOM or SMALL ROOM.
- Press MENU to confirm your selection. The screen displays SAVED. You hear a confirmation tone.

Set default

Use this feature to restore to the default settings. Restoring the default settings on one parent unit will also reset the shared settings for VOX sensitivity level of the other parent unit.

- Press MENU when the parent unit is not in use.
- Press ^{vas} or ^{vas} to choose RESET, then press ^{MENU}. The screen displays CONFIRM?.
- Press A or VI to choose YES or NO.
- Press DENU to confirm your selection. The screen displays SAVED. You hear a confirmation tone.

-OR-

Press to exit the menu. The current setting remains unchanged.

Talk to the baby unit


You can broadcast messages from a parent unit to the baby unit and the other parent unit.

• Press and hold TALK on the side of the parent unit. The screen displays (1) when the voice connection to the baby unit is made. Speak towards the MIC on the parent unit. Your voice is broadcast to the baby unit.

Notes

- When a parent unit is talking to the baby unit, sounds from the baby unit cannot be transmitted to the parent unit at the moment.
- If speaker volume of the parent unit has been turned off before the talk, it will change to default volume level after the talk finished.

Baby unit overview

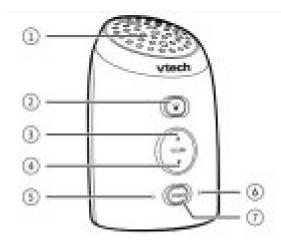

1 Glow-on-ceiling night light

- 2
 - Press to turn on or off the glow-onceiling night light.

3 VOLUME A

Press to increase the speaker volume.

4 VOLUME Y

- Press to decrease the speaker volume.
- 5 Microphone




Power light


· On when the baby unit is turned on.

7 POWER

- Press and hold to power on, and the power light turns on.
- Press and hold to power off, and the power light turns off.
- 8 Power jack
- 9 Speaker
- 10 Temperature sensor

Parent unit overview

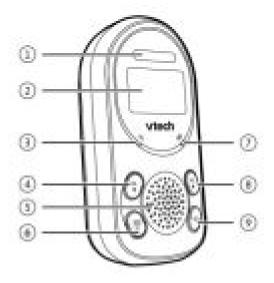

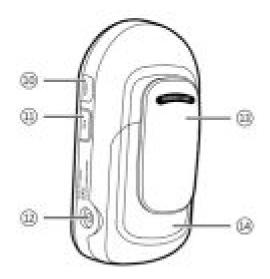

Visual sound indicator

The visual sound indicator shows the sound level detected by the baby unit.

- One to three green lights indicate a moderate sound level detected by the baby unit.
- Additional red

lights indicate a higher sound level detected by the baby unit (e.g. baby crying loudly).

2 LCD display

3 Microphone

4 VOL

- Press to decrease the speaker valume.
- Press repeatedly until the volume reaches the minimum to turn it off.
- · While in a menu, press to scroll down.

5 Speaker

6 MENU OK

- · Press to enter the menu.
- While in a menu, press to choose an item, or save a setting.

7 HID Battery LED

- Light on when the battery is being charged.
- Light flashes when the battery is low and needs charging.
- Light off when the parent unit is running on AC power without battery installed, or the parent unit is running on battery only.
- g vo.
 - .
 - Press to increase the speaker volume.
 - While in a menu, press to scroll up.
- 9 📆
 - While in a menu, press to return to the previous menu.

10 POWER

- Press and hold to power on, the screen turns on.
- Press and hold again to power off, the screen turns off.
- While in a menu, press to return to idle screen.

11 TALK

- Press and hold to talk to the baby.
- 12 Power jack
- 13 Belt clip
- 14 Battery compartment cover

Parent unit icons

Status icons		Parent unit display screen message		
۳il	Connection status If displays when strong signal strength is detected between the baby unit and the parent unit.	LINKED		The link between the parent unit and the baby unit is established.
	 Tedisplays when moderate signal strength is detected between the baby unit and the parent unit. T displays when the weak signal strength is detected between the baby unit and the parent unit. 	LOW BATTERY		The parent unit uses only the rechargeable battery pack and it needs to be recharged.
	 T flashes when the link between the baby unit and the parent unit is lost. 	NOT LINKED		The link between the parent unit and the baby unit is lost
1	Full ECO mode Displays when Full ECO Mode is			continuously for over 10 seconds.
	turned on. Glow-on-ceiling night light	SAYED		Your selection has been saved.
Y	 Displays when the glow-on-ceiling night light of the baby unit is on. 	SEARCHING		The parent unit is out of range of the baby
(0)	Sound alert			unit, or the baby unit
SECT	Displays when the sound alert of the parent unit is turned on. Flashes when there are loud country detected from the behing.	TALK	100	is out of power. You are using the parent unit to talk to
	sounds defected from the baby			your baby.

your baby. unit. Vibration alert HI TEMP The temperature detected from Displays when the vibration alert the selected baby of the parent unit is turned on. unit is above the Flashes when there are loud set maximum sounds detected from the baby temperature. umit. LOW TEMP Miste The temperature detected from: Displays when the patient unit the selected baby speaker volume is turned off. unit is below the **Battery status** set minimum. . (NCD)CII) CIII) animates when temperature. the battery is charging. oF/oC The real-time. mit displays solid when the battery temperature detected is fully charged. by the baby unit in me flashes when the battery is Fahrenheit (%F) or charged with AC adaptor, or Celsius (°C). charging is failed. C flashes when the battery is in low level and needs charging. No battery icon displays when there is no battery installed.

General product care

To keep this product working well and looking good, follow these guidelines:

- Avoid putting it near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose it to direct sunlight or moisture.
- Avoid dropping the product or treating it roughly.
- Clean with a soft cloth.
- DO NOT immerse the parent unit and the baby unit in water and do not clean them under the tap.
- DO NOT use cleaning spray or liquid cleaners.
- Make sure the baby unit and parent unit are dry before you connect them to the mains again.

Storage

When you are not going to use the baby monitor for some time, remove the rechargeable battery from the parent unit. Store the parent unit, the baby unit and the adapters in a cool and dry place.

TECHNICAL SPECIFICATIONS

Frequency control	Crystal controlled PLL synthesizer	
Transmit frequency	Baby unit: 1921,536-1928,448 MHz	
	Parent unit: 1921.536-1928.448 MHz	
	Maximum power used by the transmitter: 0.25W (250mW)	
Channels	5	
LCD	35 (x) x 21.2 (y) mm B&W LCD	
Nominal effective range	Actual operating range may vary according to environmental conditions at the time of use.	
Power requirement	Parent unit: 2.4 V Ni-MH battery	
	Baby unit power adapter:	
	Output: 6V DC 450mA	
	Parent unit power adapter:	
	Output: 6V DC 450mA	

Frequently asked questions

Why does the beby monitor not respond	Try the following (in the order listed) for common cure: 1. Disconnect the power to the baby unit and the parent unit.		
normally?	2. Remove the batteries in the parent unit. Then, install the batteries again.		
	 Wait a few minutes before connecting power back to the beby unit and the parent unit. Turn on the beby unit and the parent unit. 		
	Wait for the parent unit to synchronize with the baby unit. Allow up to one minute for this to take place.		
Why doesn't the screen of the parent unit go on when I switch on the unit?	Perhaps the rechargeable battery of the parent unit is empty and the parent unit is not connected to the power. Insert the appliance plug into the parent unit and put the adapter in a wall socket.		
Why doesn't the power light of the beby unit go on when I switch on the unit?	Perhaps the baby unit is not connected to the power. Connect the baby unit to the power.		
Why does the baby monitor produce a high-pirched noise?	The units may be too close to each other. Make sure the parent unit and the beby unit are more than 2 metres away from each other.		
Why does the parent unit react too quickly to other sounds?	The beby unit also detects other sounds than those of your beby. Adjust the VCX sensitivity level to a lower level or adjust the speaker volume on the parent unit.		
Why don't I hear a sound/	The volume of the parent unit may have set too low. Press to increase the volume level.		
Why can't I hear my beby			
ory?	You may have set a low VCX sensitivity level. See Adjust the sound sensitivity of the baby unit to change the setting.		
Why does the parent unit	If the sound elert feature is on, there is sound detected from the baby unit.		
beep?	The baby unit may be out of range. Move the parent unit closer to the baby unit (but not less than 2 metres).		
	If the parent unit is powered by the provided battery, it may not have enough charge for the parent unit to perform normally. Charge the battery in the parent unit for up to Ω hours.		
Why can't I establish a connection? Why is the connection lost every now and then? Why are there sound interruptions?	The beby unit may be out of range. Move the parent unit closer to the beby unit (but not less than 2 metres).		
	Other electronic products may cause interference with your baby monitor. Try installing your baby monitor as far away from these electronic devices as possible.		
Why doesn't the battery con shown on LCD display even I have properly	The battery may not be working. Contact our customer service to purchase a new battery.		

Customer service and product warranty

PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.

- 2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
- 3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
- 4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
- 5. This warranty is personal to the original purchaser and is not transferable.
- 6. Breakages to the LCD screen are not covered by the warranty.
- 7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
- 8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.
- 9. To keep an online record of your warranty, please register your product online at www.vtech.co.uk/warranty

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HETHIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

IMPORTANT

Please retain this booklet with your sales receipt as proof of the date of purchase.

Customer Service

Please call our Consumer Services Department on 03306 780149 (from UK) or +44 3306 780149 (outside UK) and a service representative will be happy to help you.

Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pn) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005. Help protect the environment by disposing of your product or batteries responsibly.



This product is intended for use within Europe and UK.

This equipment complies with the essential requirements to EU's Radio Equipment Directive (2014/53/EU) and the UK's Radio Regulations 2017 on radio systems and telecommunication equipment.



VTech Telecommunications Ltd. hereby declares that this Audio Monitor AM706-1W is in compliance with the essential requirements and other relevant provisions of EU's Radio Equipment Directive (2014/53/EU) and UK's Radio Equipment Regulations 2017. The Declaration of Conformity for the AM706-1W is available from www.vtechbabycare.com.

Manufacturer: VTech Telecommunications Ltd.

23/F., Tai Ping Industrial Centre, Block 1, 57 Ting kok Road, Tai Po, Hong Kong.

Importer: VTech Electronics Europe plc

Napier Court, Abingdon Science Park, Abingdon, Oxon, OX14 3YT, U.K.

Documents / Resources



vtech AM706-1W Digital Audio Monitor [pdf] User Manual

AM706-1W, Digital Audio Monitor, AM706-1W Digital Audio Monitor, Audio Monitor, Monitor

References

- V Electronic Learning Toys | Best Learning Toys | VTech UK
- ▼ Electronic Learning Toys | Best Learning Toys | VTech UK
- V VTech Telecom Products European Official Site

Manuals+, home privacy