



vtech VC2810 Breathing Sensor Tag User Guide

[Home](#) » [vtech](#) » vtech VC2810 Breathing Sensor Tag User Guide 

vtech[®]

VC2810

Breathing Sensor Tag

(for use with VC2105 5" Smart Nursery
Over-the-Crib Mount Monitor)



Quick start guide

Contents

- 1 VC2810 Breathing Sensor Tag
- 2 Technical specifications
- 3 Important safety instructions
- 4 What's in the box
- 5 Connect, Charge and Power on the Sensor
- 6 Overview
- 7 Download app for mobile access
- 8 Pair the Sensor with the Camera via Bluetooth
- 9 Attach the Sensor to Your Baby
- 10 Protect your privacy and online security
- 11 Breathing Alert
- 12 Disclaimer and Limitation of Liability
- 13 CABLE MANAGEMENT
- 14 FCC and IC regulations
- 15 Limited warranty
- 16 Documents / Resources
 - 16.1 References

VC2810 Breathing Sensor Tag

Go to www.vtechphones.com to register your product for enhanced warranty support and latest VTech product news.

For more support information:



<https://vttqr.tv/?q=1VP242>

Technical specifications



RF Technology	Bluetooth
Connection	Bluetooth to camera
Range	10 m
Battery	3.8V 215mAh 0.817Wh Lithium-ion battery
Power input	5V DC, 500mA

Important safety instructions

The applied nameplate is located at the bottom of the sensor's base.

When using your equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Follow all warnings and instructions marked on the product.
2. Adult setup is required.
3. This product is intended as an aid. It is not a substitute for responsible and proper adult supervision and should not be used as such.
4. This product is not intended for use as a medical monitor.
5. Do not use this product near water, for example, near to a bath, sink, swimming pool or shower.
6. **CAUTION:** Use only the battery provided. There may be a risk of explosion if a wrong type of battery is used for the parent unit. The battery cannot be subjected to high or low extreme temperature and low air pressure at high altitude during use, storage or transportation. Disposal of battery in fire or a hot oven, mechanically crushing or cutting the battery can result in an explosion. Leaving the battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid or gas. Battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas. Dispose of used battery according to the information in The RBRC seal.

7.   Rechargeable battery information:

3.8V 215mAh 0.817Wh Lithium-ion battery

Zhongshan Tianmao Battery Co. Ltd.


Model: BP2196/RM5757

8. The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
9. For pluggable equipment, the socket-outlet (power adapter) should be installed near the equipment and should be easily accessible.
10. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
11. Do not modify the power adapters or replace with other adapters, as this causes a hazardous situation.
12. Do not allow anything to rest on the power cords. Do not install this product where the cords may be walked on or crimped.
13. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or electricity supply provider.
14. Do not overload wall outlets or use an extension cord.
15. Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
16. This product should not be placed in any area where proper ventilation is not provided. Slots and openings in the back or bottom of this product are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat source.
17. Never push objects of any kind into this product through the slots because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.
18. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Disassembling or removing parts of the product other than via the battery door may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.

19. You should test the sound reception every time you turn on the units or move one of the components.
20. Periodically examine all components for damage. There is a very low risk of privacy loss when using certain electronic devices, such as baby monitors, cordless telephones, etc. To protect your privacy, make sure the product has never been used before purchase, reset the baby monitor periodically by powering off and then powering on the units, and power off the baby monitor if you are not intending to use it for some time.
21. Children should be supervised to ensure that they do not play with the product.
22. The small parts of this device can be swallowed by babies or small children. Keep these parts out of reach of children.
23. The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

SAVE THESE INSTRUCTIONS

Cautions

- Use and store the product at a temperature between 32°F (0°C) and 104°F (40°C).
- Mishandling batteries can cause burn, fire or explosion hazards.
- Do not expose the product to extreme cold, heat or direct sunlight. Do not put the product close to a heating source.
-  **Warning**— Strangulation Hazard—Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3 ft (0.9m) away). Do not remove warning label on the adapter cord.

Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless devices): Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless devices and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

Pacemaker patients

- Should keep wireless devices at least six inches from the pacemaker.
- Should NOT place wireless devices directly over the pacemaker, such as in a breast pocket, when it is turned ON.

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless devices.

Electromagnetic fields (EMF)

This VTech product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user's manual, the product is safe to be used based on scientific evidence available today.


Disclaimer

Our products are NOT medical devices. They are not intended for use as medical devices or to replace medical devices. They shall not be relied upon for any type of clinical monitoring. They are not designed to and are not intended to diagnose, treat, cure, mitigate, alleviate or prevent any disease or other condition, including but not limited to, sudden infant death syndrome (SIDS).

Our products are only intended to assist you in tracking your baby's general sleep patterns. False positive or false negative readings about your baby's sleep patterns are a potential risk of our products. Our products are not a substitute for medical consultation and treatment or adult supervision and care.



What's in the box

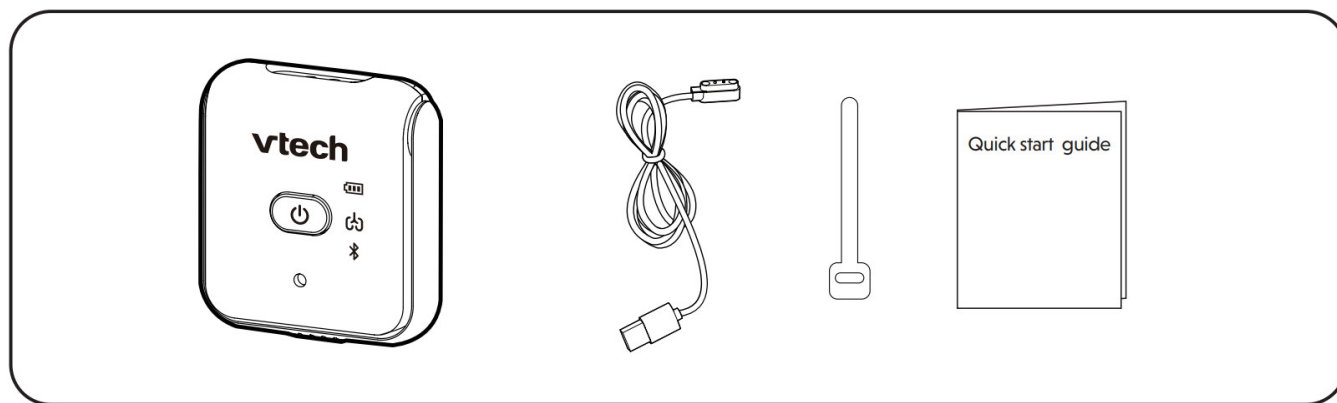

Connect, Charge and Power on the Sensor


Connect the charging cable to the sensor and a USB power port (2A or below). The LED indicator lights red steadily.

After the sensor is fully charged, press the  power button to turn the sensor on. The three LED indicators turn on and then turn off.






NOTES

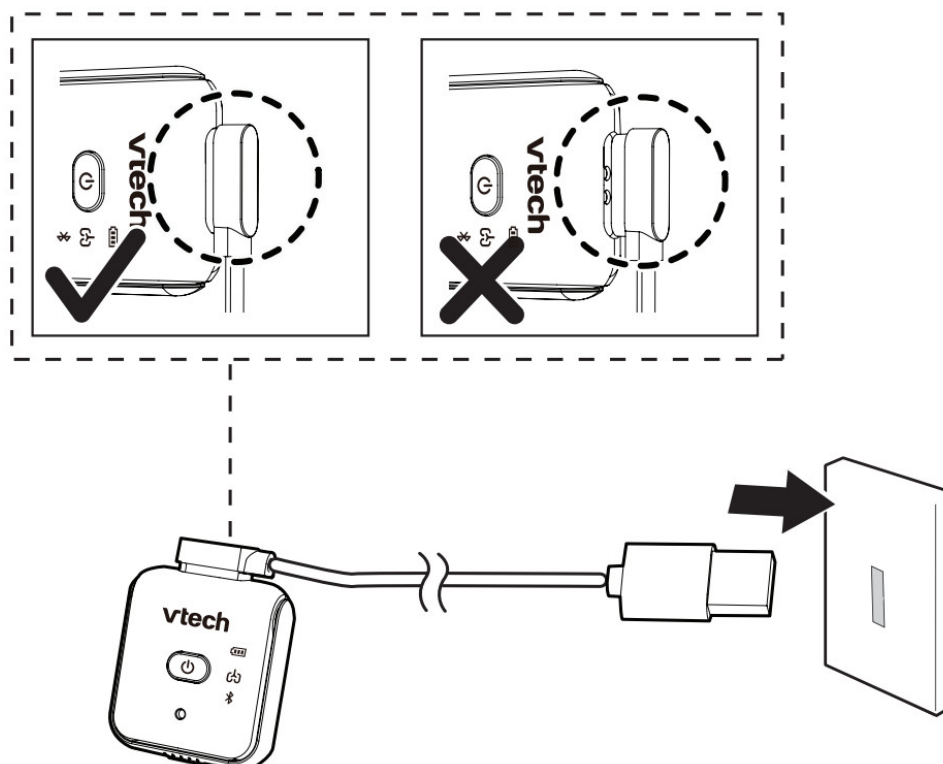- ONLY charge the sensor with 2A or below USB power port.
- Before using the sensor for the first time, charge the sensor battery for 12 hours. When the sensor battery is fully charged, the red LED indicator remains on.
- The standby time varies depending on your actual use.
- If the battery power is low, the LED indicator flashes red, then goes off.

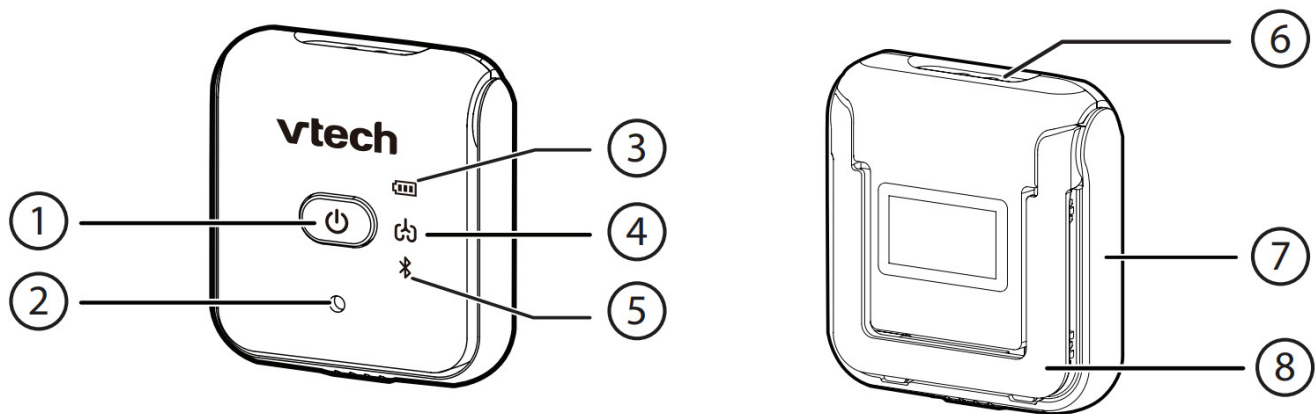

Overview





1.  Power button
 - Press to turn the sensor on/off.
 - Press and hold to enter Bluetooth pairing mode.
2. Speaker
3. Battery indicator (Red)
 - Turns on, then turns off when the sensor is powered on.
 - Flashes, then turns off when the battery power is low.
 - Steadily lights when the sensor is in charging and fully charged.
4. Breathing Status indicator (Green)
 - Lights for 3 seconds when the sensor is powered on.
 - Flashes slowly when baby is in normal breathing.
 - First alert – When breathing motion is not detected over 15 seconds, LED flashes quickly with a soft buzzer and vibration for 10 seconds, any motion in this period will stop the buzzer and vibration. Breathing status LED resume to normal.
 - Emergency alert – If no motion was detected for further 5 seconds after the First Alert, LED will flash quickly with louder buzzer and vibration, press the  power button to stop the alert.
5. Bluetooth indicator (Blue)
 - Turns on, then turns off when the sensor is powered on.
 - Flashes blue, then turns off when the sensor enters in pairing mode.
6. Charging port
7. Clip locker
8. Diaper/pant clip



Download app for mobile access



1. Download the free MyVTech Baby Plus mobile app and install it to a mobile device, then use your mobile device and the mobile app to monitor your baby remotely.



1. Press MENU/SELECT when the parent unit is idle.
2. Go to  >  > Connect Mobile Phone.
3. Scan the QR code in the parent unit to download the app into your mobile device if you have not installed the app yet.
4. Follow the instructions in the mobile app to set up and pair your baby unit to the mobile app.

Alternatively, you can download the mobile app from the App Store or Google Play store.

Install MyVTech Baby Plus mobile app

1. Browse the App Store  or the Google Play store .
2. Search for the mobile app with the keyword "myvtech baby plus".
3. Download and install the MyVTech Baby Plus mobile app to your mobile device.

OR

Scan the QR codes on the right to get the app.



<https://vttqr.tv/?q=1VP235>

Minimum requirement



The mobile app is compatible with:

- Android™ 6.0 or later; and
- iOS 12 or later.

2. After installing the mobile app, follow the instructions in the mobile app and parent unit to set up and pair your baby unit.

In your mobile device:




1. Tap  to run the mobile app in your mobile device, and then create a user account.
2. We recommend that you use common webmail services, such as Google Gmail for registration of your user account. Check your email (and Spam folder), and activate your new camera account via the email link, then sign in to your account.
3. Follow the instructions in the mobile app to pair the camera. Tap , Add camera setup then Add Camera in the mobile app to get started.



<https://vttqr.tv/?q=1VP241>

Pair the Sensor with the Camera via Bluetooth

Follow the instructions in the mobile app to set up and pair your sensor.


1. Tap the app icon to run the mobile app in your mobile device, and set your mobile device to Bluetooth discoverable mode.
2. Make sure the camera is turned on and connected with app already.
3. Press and hold the  power button on the sensor to enter pairing mode. The Bluetooth LED indicator flashes blue. Sensor will start searching nearby device automatically.
4. Select VC2810 Breathing Sensor Tag under the list of available devices and wait for a while for the pairing process. If they are paired successfully, the Bluetooth LED indicator will turn off.

NOTES

- Make sure your sensor is powered on before pairing.
- Make sure the camera is turned on and connected with app already.
- Place your mobile phone near the sensor for better connection.

Attach the Sensor to Your Baby

To place the sensor on the diaper or pants, detach the clip locker from the tenon to open the clip. Next, hang the clip on the center of the waistband of the diaper or pants. Finally, close the clip locker to firmly attach the sensor onto the diaper or pants.

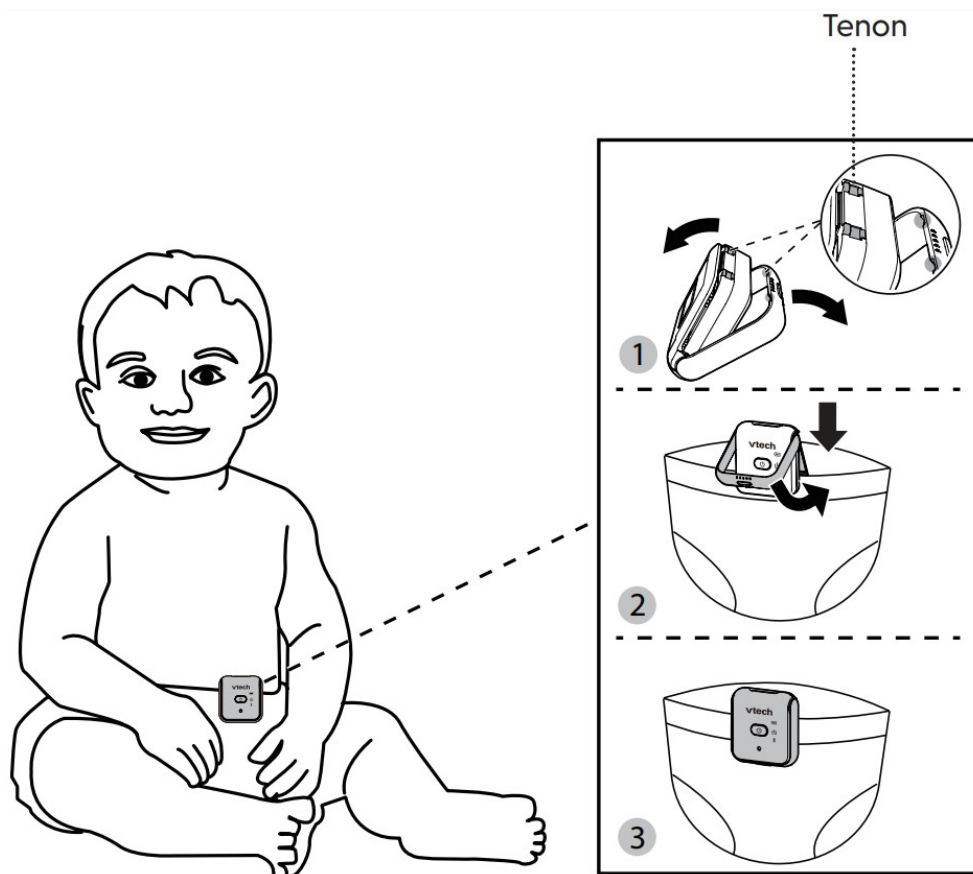

Protect your privacy and online security

VTech cares about your privacy and peace of mind. That's why we've put together a list of industryrecommended best practices to help keep your wireless connection private and your devices protected when online. We recommend you carefully review and consider complying with the following tips.

Ensure your wireless connection is secure.

- Before installing a device, ensure your router's wireless signal is encrypted by selecting the "WPA2-PSK with AES" setting in your router's wireless security menu.

Change default settings.

- Change your wireless router's default wireless network name (SSID) to something unique.
- Change default passwords to unique, strong passwords. A strong password:
 - Is at least 10 characters long.
 - Is complex.
 - Does not contain dictionary words or personal information.
 - Contains a mix of uppercase letters, lowercase letters, special characters and numbers.

Keep your devices up to date.

- Download security patches from manufacturers as soon as they become available. This will ensure you always have the latest security updates.
- If the feature is available, enable automatic updates for future releases.

Disable Universal Plug and Play (UPnP) on your router.

- UPnP enabled on a router can limit the effectiveness of your firewall by allowing other network devices to open inbound ports without any intervention or approval from you. A virus or other malware program could use this function to compromise security for the entire network.

For more information on wireless connections and protecting your data, please review the following resources from industry experts:

1. Federal Communications Commission: Wireless Connections and Bluetooth Security Tips – www.fcc.gov/consumers/guides/how-protect-yourself-online.
2. U.S. Department of Homeland Security: Before You Connect a New Computer to the Internet – www.us-cert.gov/ncas/tips/ST15-003.
3. Federal Trade Commission: Using IP Cameras Safely – <https://www.consumer.ftc.gov/articles/0382-using-ip-cameras-safely>.
4. Wi-Fi Alliance: Discover Wi-Fi Security – <http://www.wi-fi.org/discover-wi-fi/security>.

Breathing Alert


First Alert

If the sensor detects that the baby has stopped breathing for 15 seconds, it will release an alert:

- The alert will be in the form of a vibration with a buzzer, which will notify the parents.
- The App and Parent Unit will provide an indication to notify parents about the detected abnormal breathing motion.

To turn off the alert, you can shake the sensor tag.


Breathing Sensor	10 Seconds Vibration Alert Green status LED indicator flashes quickly, the sensor tag vibrates with soft buzzer alert. Normal Breathing Status The green LED indicator flashes slowly.
App	Open app and do not run in background or the app is running in background: An alert is displayed on the app. App is closed: When you open the app, an alert is displayed.
Parent Unit	Banner alert and Alert tone An audible banner alert is displayed on the screen, and will dismiss after 5 seconds. Note: You cannot set the alert tone volume nor turn off the alert tone setting.

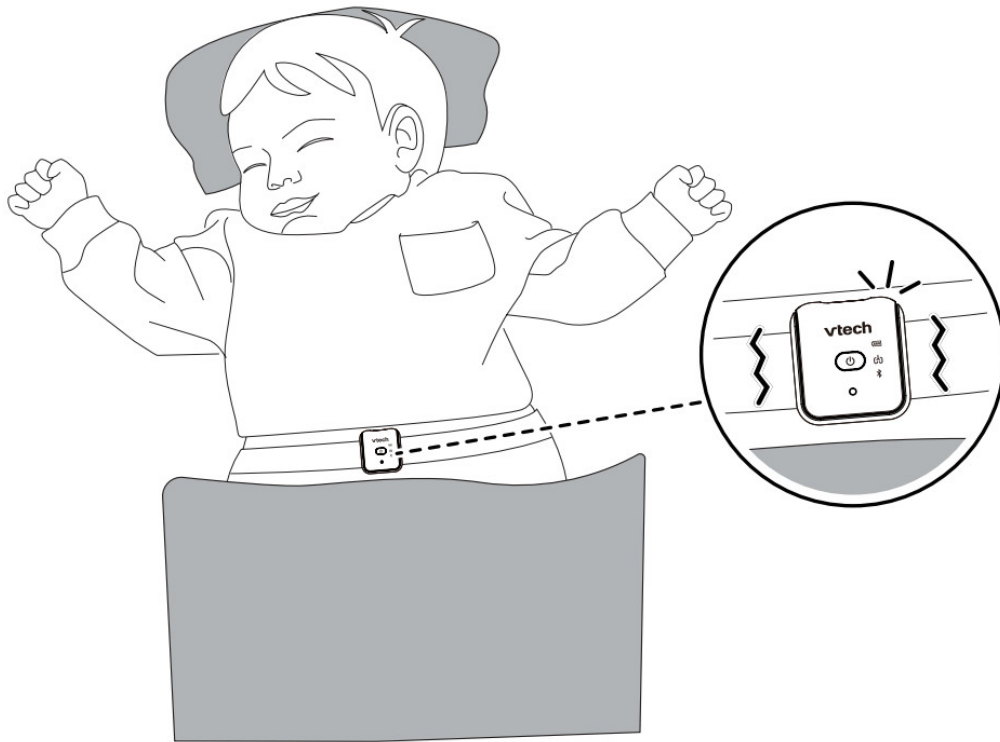

Emergency Alert

If the sensor tag has vibrated with buzzer over 10 seconds and still no breathing motion has been detected for 5 seconds:

- Sensor tag will release emergency alert.
- App, Parent Unit and the camera will have indication to notify parents the abnormal breathing motion of the baby.

You can turn off the alert by pressing the  power button on the sensor tag. This will also turn off the alert on the App and Parent Unit.

Note: Pressing  to turn off the emergency alert will also power off the sensor tag.

Breathing Sensor	<p>Emergency Alert Green status LED indicator flashes quickly, the sensor tag vibrates with louder buzzer alert.</p> <p>Normal Breathing Status The green LED indicator flashes slowly.</p>
App	<p>Open app and do not run in background or the app is running in background: An audible alert is displayed in full screen, and a Notification dismissing button is displayed.</p> <p>App is closed: When you open the app, An audible alert is displayed in full screen, and a Notification dismissing button is displayed.</p> <p>Note: Pressing Dismiss button on app will not turn off the sensor tag alert.</p>
Parent Unit	<p>Banner alert and Alert tone An audible banner alert is displayed on the screen, and it will remain on until you press on the sensor tag to turn off.</p> <p>The alert tone volume is higher than the First Alert.</p> <p>Notes:</p> <ul style="list-style-type: none"> • Pressing any button on the Parent Unit to dismiss the banner alert, which will not turn off the sensor tag alert. • You cannot set the alert tone volume nor turn off the alert tone setting.

Rollover Alert

If the sensor tag on the baby is rotated from top side up to bottom side up, the App and Parent Unit will push an indication to notify parents about the abnormal movement of the baby:

App	<p>Open app and do not run in background or the app is running in background: An alert is displayed on the app.</p> <p>App is closed: When you open the app, an alert is displayed.</p>
Parent Unit	<p>Banner alert and Alert tone An audible banner alert is displayed on the screen, following the settings of Sound Detection Alert of the parent unit.</p> <p>The Alert tone is same as the First Alert, and the volume level is same as the alert tone of the Parent Unit.</p>



Need help?

Driven by system updates, the software, online help topics, and online FAQs will be updated periodically. For operations and guides to help you using your Breathing Sensor Tag, and for latest information and supports, go and check the online help topics and online FAQs. Use your smartphone or mobile device to access our online help.

- Go to <https://help.vtechphones.com/VC2810>; OR
- Scan the QR code on the right. Launch the camera app or QR code scanner app on your smartphone or tablet. Hold the device's camera up to the QR code and frame it. Tap the notification to trigger the redirection of the online help.
 - If the QR code is not clearly displayed, adjust your camera's focus by moving your device closer or further away until it is clear.



VC2810

<https://vttqr.tv/?q=1VP242>

If you would like to contact us, visit <https://help.vtechphones.com/cs>.

You can also call our Customer Support at 1-844-8488324 (1-844-84-VTECH) [in US] or 1-888-211-2005 [in Canada] for help.

Disclaimer and Limitation of Liability

VTech Communications, Inc. and its suppliers assume no responsibility for any damage or loss resulting from the use of this user's manual. VTech Communications, Inc. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this product.

Company: VTech Communications, Inc.

Address: 9020 SW Washington Square Road – Ste 555 Tigard, OR 97223, United States

Phone: 1 (800) 595-9511 in the U.S. or 1 (800) 267-7377 in Canada


Android™ and Google Play™ are trademarks of Google Inc.

App Store is a trademark of Apple Inc., registered in the U.S. and other countries.

IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.



CABLE MANAGEMENT

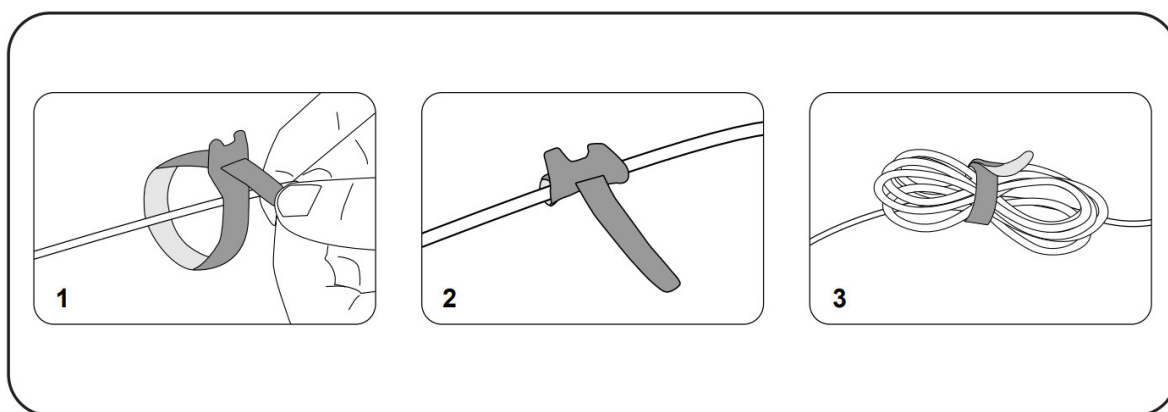

The RBRC seal



The RBRC seal on the lithium-ion battery indicates that VTech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States and Canada. The program provides a convenient alternative to placing used lithium-ion batteries into the trash or municipal waste, which may be illegal in your area.

VTech's participation makes it easy for you to drop off the spent product at local retailers participating in the program or at authorized VTech product service centers. Please call 1 (800) 8 BATTERY® for information on Li-ion battery recycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its commitment to protecting our environment and conserving natural resources. The RBRC Seal and 1 (800) 8

BATTERY® are registered trademarks of Call2recycle, Inc.

FCC and IC regulations

FCC Part 15

NOTE: This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC

criteria. The baby unit shall be installed and used such that parts of all persons' body are maintained at a distance of approximately 8 in (20 cm) or more. The transmitter and antenna of the parent unit shall be held at least 1 in (2.5 cm) from your face.

This Class B digital apparatus complies with Canadian requirement: CAN ICES-3 (B)/NMB-3(B)

Industry Canada

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met.

This product meets the applicable Innovation, Science and Economic Development Canada technical specifications.

California Energy Commission battery charging testing mode

This sensor tag meets the California Energy Commission (CEC) regulations for energy consumption. Your sensor tag is set up to comply with the energy-conserving standards right out of the box.

Follow the instructions to install and charge the battery. The CEC battery charging testing mode is activated while charging.

Even if the sensor tag is paired to camera units, the CEC battery charging testing mode is activated while it is powered off and charging.

Limited warranty

What does this limited warranty cover?

The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the sales package ("Product") are free from defects in material

and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada.

What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period (“Materially Defective Product”)?

During the limited warranty period, VTech’s authorized servicerepresentative will replace at VTech’s option, without charge, a Materially Defective Product. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Replacement of the Product, at VTech’s option, is your exclusive remedy. VTech will return the replacement Products to you in working condition. You should expect the replacement to take approximately 30 days.

How long is the limited warranty period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase (90 days on products purchased as Refurbished*). This limited warranty also applies to the replacement Product for a period of either (a) 90 days from the date the replacement Product is shipped to you or (b) the time remaining on the original one-year warranty (90-day limited warranty on products that are purchased as Refurbished*); whichever is longer.

*Refurbished products purchased from our online store carry a 90-day replacement warranty.

What is not covered by this limited warranty?

This limited warranty does not cover:

1. Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion; or
2. Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of VTech; or
3. Product to the extent that the problem experienced is caused by signal conditions, network reliability, or cable or antenna systems; or
4. Product to the extent that the problem is caused by use with non-VTech accessories; or
5. Product whose warranty/quality stickers, product serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or
6. Product purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or
7. Product returned without a valid proof of purchase (see item 2 below); or
8. Charges for installation or set up, adjustment of customer controls, and installation or repair of systems outside the unit.

How do you get warranty service?

To obtain warranty service in the USA, please visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to www.vtechcanada.com or call 1 (800) 267-7377.

NOTE: Before calling for service, please review the user’s manual – a check of the Product’s controls and features may save you a service call.

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. VTech will return replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product in transit.

What must you return with the Product to get warranty service?

1. Return the entire original package and contents including the Product to the VTech service location along with a description of the malfunction or difficulty; and
2. Include a “valid proof of purchase” (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt; and

3. Provide your name, complete and correct mailing address, and telephone number.

Other limitations

This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other written or oral communications related to this Product. VTech provides no other warranties for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification. State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province.

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary use) are limited to one year from the date of purchase. Some states/ provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall VTech be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the Product or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Please retain your original sales receipt as proof of purchase.



Specifications are subject to change without notice.

© 2023 VTech Communications, Inc.

All rights reserved. 04/23. VC2180_US_QSG_V1



Intertek

3177099


CONFORMS TO UL STD.

62368-1

CERTIFIED TO CSA STD.

C22.2 NO.62368-1

Documents / Resources

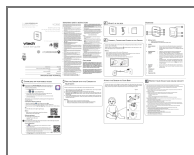

[vtech VC2810 Breathing Sensor Tag \[pdf\] User Guide](#)

VC2810 Breathing Sensor Tag, VC2810, Breathing Sensor Tag, Sensor Tag, Tag

References

- [FCC Wireless Connections and Bluetooth Security Tips | Federal Communications Commission](#)
- [Before You Connect a New Computer to the Internet | CISA](#)
- [VTech Canada Official Site | Best Home Office & Business Phones](#)
- [VTech Cordless Phones Official Site | Best Home Office & Business Phones](#)
- [Security | Wi-Fi Alliance](#)
- [VTech Cordless Phones Official Site | Best Home Office & Business Phones](#)

- [▼ **Product Support | VTech® Cordless Phones**](#)
- [🌐 **How To Secure Your Home Security Cameras | Consumer Advice**](#)

Manuals+.