



Kevo FOB Configuration Instruction Manual

[Home](#) » [Weiser](#) » Kevo FOB Configuration Instruction Manual 

Contents

[1 Kevo FOB Configuration Instructions](#)

- [1.1 For fob-and-phone systems:](#)
- [1.2 For fob-only systems](#)
- [1.3 Battery replacement](#)
- [2 Related Posts](#)

Kevo FOB Configuration Instructions

For more information on the Kevo system, visit
www.weiserlock.com/kevo/setup or call
USA: 800-877-5625 • Canada: 800-501-9471

Para más información sobre el sistema Kevo, visite
www.weiserlock.com/kevo/setup ou composez
USA: 800-877-5625 • Canada: 800-501-9471

Pour en savoir plus sur le système Kevo, visitez le site
www.weiserlock.com/kevo/setup ou composez le
USA: 800-877-5625 • Canada: 800-501-9471



For fob-and-phone systems:


Refer to the fob enrollment instructions inside the Kevo app. For fob-only systems, see page 2.

For fob-only systems

1. Use a ballpoint pen to press the enroll button on the new Kevo fob. The fob's LED will begin to blink green.



2. Push the Program button on the back panel.

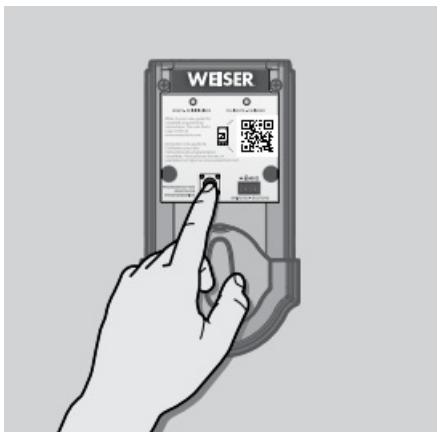



3. Hold the new fob close against the back panel. The fob's LED will begin to blink faster. Once the Kevo beeps twice and the fob's LED turns solid green, the fob has enrolled successfully. You may now perform the Kevo fob calibration process. See User Guide for complete instructions.

Note: beeps will only be heard if switch #3 is on.




Battery replacement


1. Use a small coin to twist and pry apart the two halves of the fob.

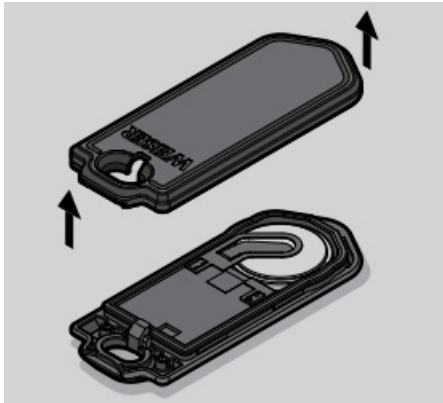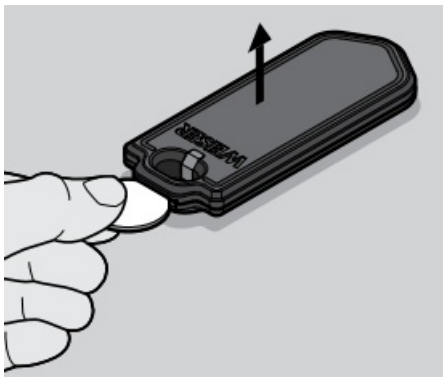

2. Slide battery out from between the two contacts.

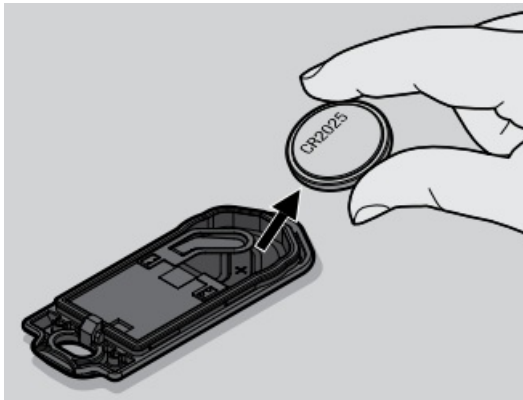


Dispose of battery according to local laws and regulations.

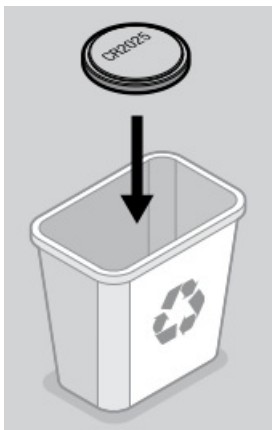

3. Insert a new CR2025 battery, sliding it between the two contacts so that the positive face of the battery touches the positive contact.



Press the two halves of the fob back together, making sure they snap into place.

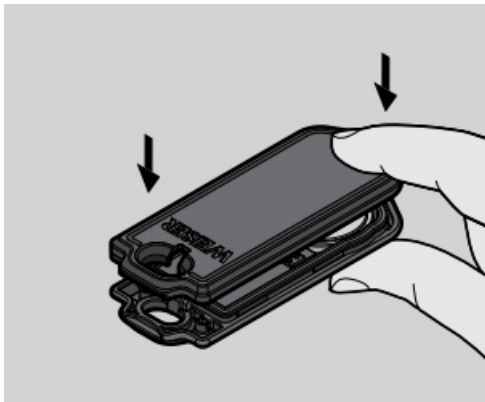

Kevo FOB Configuration Instruction Manual – [Optimized PDF](#)

Kevo FOB Configuration Instruction Manual – [Original PDF](#)