



westfalia 811615 Multi Function Work Bench User Manual

[Home](#) » [Westfalia](#) » westfalia 811615 Multi Function Work Bench User Manual 

Westfalia®

Multi Function Work Bench

Article No. 81 16 15

Original Instructions



Contents

- [1 811615 Multi Function Work Bench](#)
- [2 Overview](#)
- [3 Technical Data](#)
- [4 Safety Notes](#)
- [5 Assembly](#)
- [6 Using](#)
- [7 Disposal](#)
- [8 Customer Services](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

811615 Multi Function Work Bench

Dear Customers

Before first use please familiarize yourself with the proper usage of the device. Keep these operating instructions for future reference.

This operating instruction contains important details for handling the device. Please pass it on along with the unit if it is handed over to a third party!

Please read the safety instructions most carefully!



















These instructions will make it easier for you to handle the device appropriately and help prevent misunderstandings and possible damage.



Overview

As part of further development, the bolts for fixing the storage surface are replaced by quick-lock pins.



A 1x		R 4x	
B 2x			
C 1x			
D 2x			
E 2x			
F 4x	 M8 40 mm		
G 8x	 M8		
H 4x	 M8		
I 8x	 M6 37 mm		
J 16x	 M6		
K 16x	 M6		
L 2x			
M 2x			
N 4x			
O 2x	 M8		
P 1x	 M8 16 mm		
Q 1x	 M8		

Technical Data

Max. Load for Working Table	200 kg
Max. Load for Rollers and Ball Bearings	100 kg
Max. Load for V-Shaped Rollers	45 kg
Self-Weight approx.	12 kg
Large Working Table Max. Height Min. Height	1275 mm/790 mm
Width of the large Working Table	750 mm
Dimensions of the long Roll Max. Height Min Height	1240 mm/765 mm
Width of the long Roll	370 mm
Stand Area with Feet	690 x 530 mm



Safety Notes

Please note the following safety notes to avoid malfunctions, damage or physical injury:

- This manual belongs to the product. It contains important notes on operating the unit. Please pass it on along with the unit if it is handed over to a third party!
- Dispose of the packaging materials carefully; the plastic bags may become a deadly toy for children.
- Do not wear loose-fitting clothing or jewellery; these may get caught while working with the work bench.
- Use the work bench only for its intended purpose. Do not use the work bench as scaffold, ladder, stool or similar.
- Keep bystanders and obstacles away from the work area.
- Use the work bench on a solid level ground and make sure the ground can carry the weight of the work bench plus the weight of the workpiece.
- Do not exceed the mentioned maximum load capacities of the work bench. Refer to the technical data.
- When working on heavy or large workpieces please consider getting assistance from another person.
- Do not use the work bench if any parts are damaged or bent.
- Do not drop the work bench, throw it, or otherwise misuse the work bench.


Before Mounting

Before mounting, please check all parts for completeness. If parts are missing, do not return the work bench but contact our support department.



Dispose of packaging materials or store it out of reach of children.

Plastic bags etc. may become a deadly toy for children.


Assembly

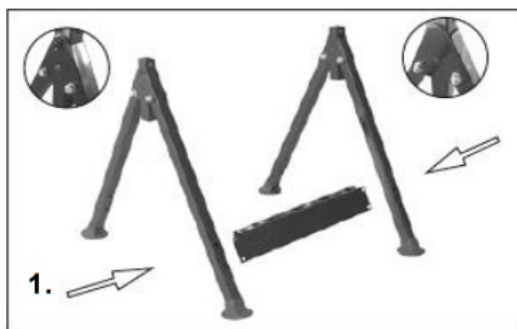

Using

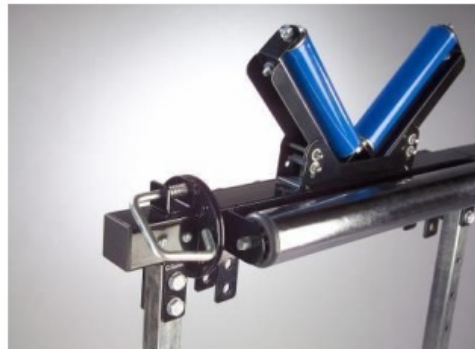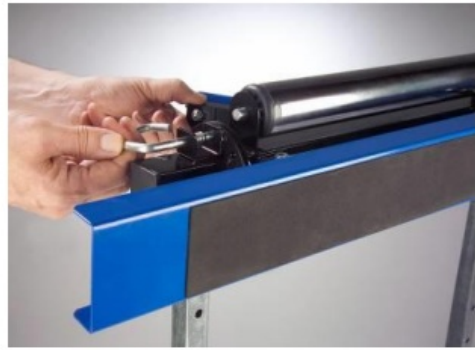

Push down the spring mechanism and tilt the V-shaped Rollers.

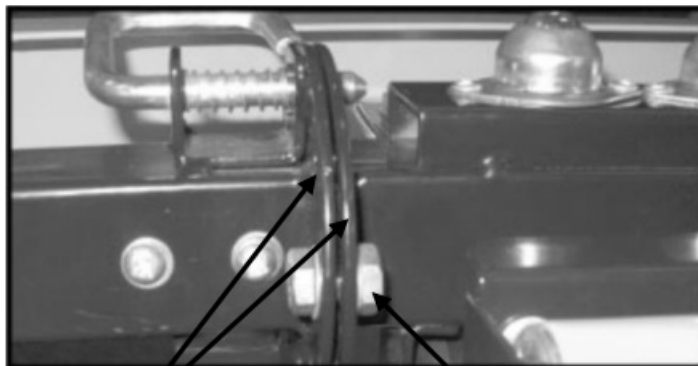

Lochscheiben
Hole Discs

Feststellschraube und Mutter
Locking Screw with Nut

For fix mounting of the component (A), use the locking screw and nut to fasten both hole discs.

Disposal

Dear Customer,

Please help avoid waste materials.

If you at some point intend to dispose of this article, then please keep in mind that many of its components consist of valuable materials, which can be recycled.


Please do not discharge it in the rubbish bin, but check with your local council for recycling facilities in your area.

Customer Services

<p>Deutschland Westfalia Werkzeugstraße 1 D-58093 Hagen Telefon: (0180) 5 30 31 32 Telefax: (0180) 5 30 31 30 Internet: www.westfalia.de</p>	<p>Österreich Westfalia Moosham 31 A-4943 Geinberg OÖ Telefon: (07723) 4 27 59 54 Telefax: (07723) 4 27 59 23 Internet: www.westfalia-versand.at</p>	<p>Schweiz Westfalia Wydenhof 3a CH-3422 Kirchberg (BE) Telefon: (034) 4 13 80 00 Telefax: (034) 4 13 80 01 Internet: www.westfalia-versand.ch</p>
---	---	---

Design protected by copyright
© Westfalia 02/22

Documents / Resources

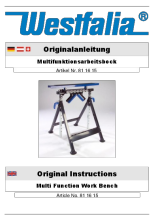 <p>The image shows the Westfalia logo at the top. Below it is a small thumbnail of the 'Originalanleitung' (Original Instructions) manual for the 'Multi Function Work Bench'. The manual cover features a photograph of the work bench and the text 'Originalanleitung', 'Multi Function Work Bench', and '811615'. Below the thumbnail is another small thumbnail of the 'Original Instructions' manual, also for the 'Multi Function Work Bench' and '811615'.</p>	<p>westfalia 811615 Multi Function Work Bench [pdf] User Manual 811615 Multi Function Work Bench, 811615, Multi Function Work Bench, Function Work Bench, Work Bench</p>
---	---