




wilfa KS1B-T2 UNI BLACK Precision Scale Instruction Manual

[Home](#) » [Wilfa](#) » wilfa KS1B-T2 UNI BLACK Precision Scale Instruction Manual 

wilfa

Instruction manual

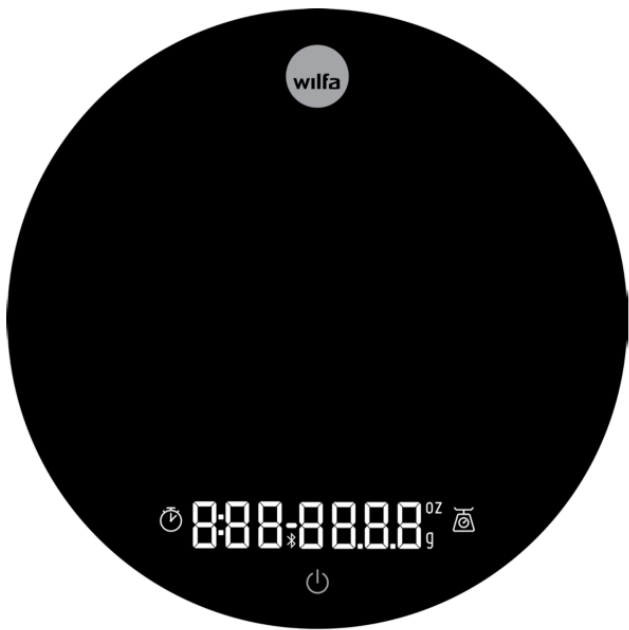

UNI BLACK
KS1B-T2
READ ALL INSTRUCTIONS BEFORE USE

Contents

[1 IMPORTANT SAFETY INSTRUCTIONS](#)

[2 PRODUCT OVERVIEW](#)

[3 TROUBLESHOOTING](#)

[4 CHARGING](#)

[5 STORAGE](#)

[6 BLUETOOTH](#)

[7 GUARANTEE](#)

[8 PRODUCT SPECIFICATIONS](#)

[9 Documents / Resources](#)


[9.1 References](#)

[10 Related Posts](#)

IMPORTANT SAFETY INSTRUCTIONS

- Read this manual thoroughly before using it and save it for future reference.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- This product is intended for indoor, non-industrial, non-commercial, household use only
- Always place the object to be weighed at the center of the kitchen scale.
- Do not place any object on top of the scale before switching the appliance on.
- Clean the scale with a slightly damp cloth. Do not use chemical/abrasive cleaning agents.
- Switch off the power button on the side of the scale if the scale is not being used for a long period.
- Never immerse the appliance in water or any other liquid.
- Keep the scale in a cool dry area.

PRODUCT OVERVIEW

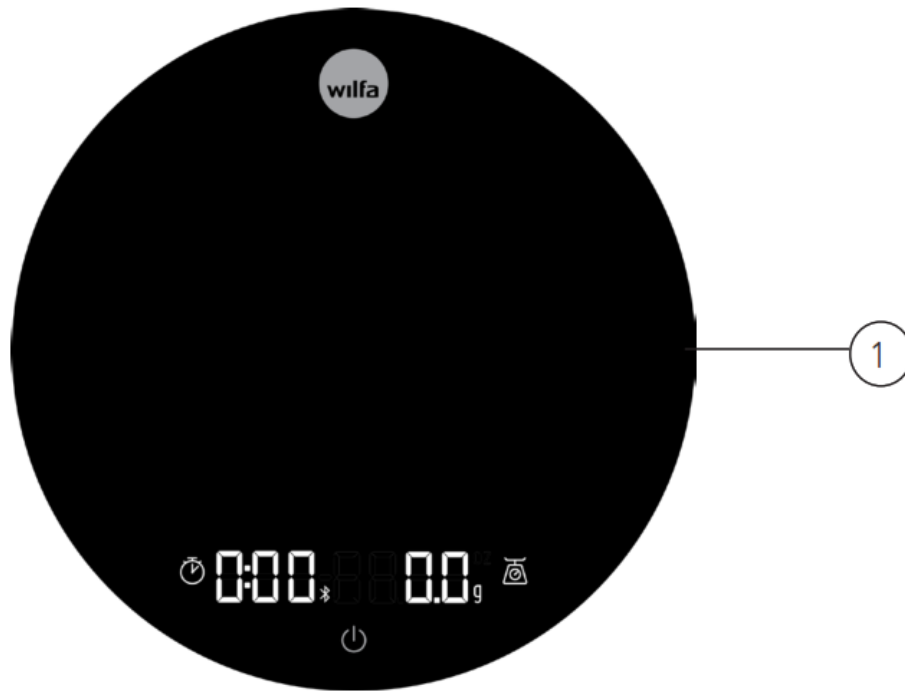

1. Scale Included: Heat-resistant silicon pad USB-C cable

FUNCTION DESCRIPTION HEAT-RESISTANT SILICON PAD

A sudden rise in temperature might affect the accuracy of the scale. We, therefore, recommend using the heat resistant silicon pad for optimum

accuracy during brewing and measurements of hot liquid.

The pad is also intended to be used to protect the scale during measurements and as a support when measuring directly into a portafilter.

FULL DISPLAY LAYOUT



TURN ON SCALE

- Make sure the power switch on the back is set to an on position.
- Then short press the power button on the display to turn the scale on.
- The timer and scale button fade in, and the scale is ready to use.

TARE FUNCTION

- The scale takes automatically when it starts.
- Place the coffee container on top of the scale, press the scale button to take the weight of the container, and the scale will show 0.0g/oz. The scale is now ready to measure any additional weight.
- Remember to use the heat resistant silicon pad if you are brewing or weighing any hot liquids.

CHANGE WEIGHT UNIT

Long press the scale button for 3 seconds to switch between grams (g) and ounces (oz).

TIMER


- The timer does not show when starting the scale. Short press the click button to show the timer.
- Short press the clock-button again to start the timer. To pause the timer, short press the clock button, and the time will freeze.
- To reset the timer long press the button for 1 second.

AUTO-OFF

If you stop adding weight to the scale, it will automatically shut off after 10 minutes.


TROUBLESHOOTING

OVERLOAD WARNING

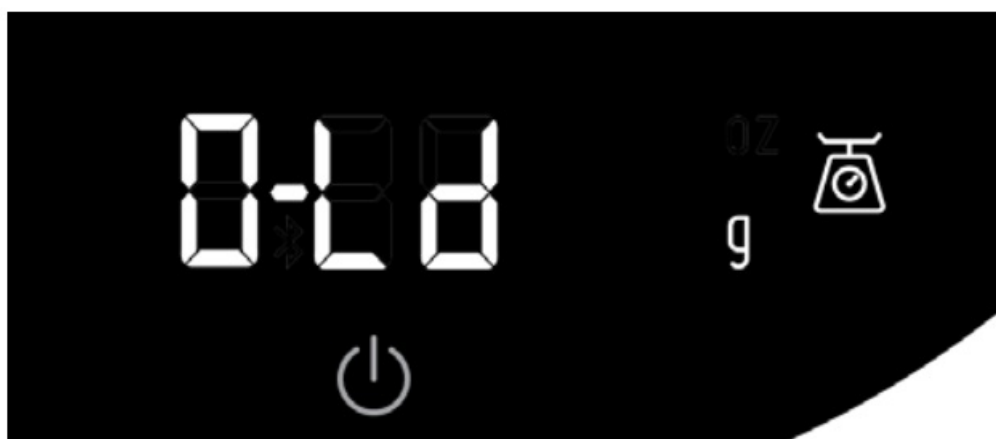

If the scale is overloaded, remove weight from the scale (maximum weight is 2000g).

UNSTABLE WARNING

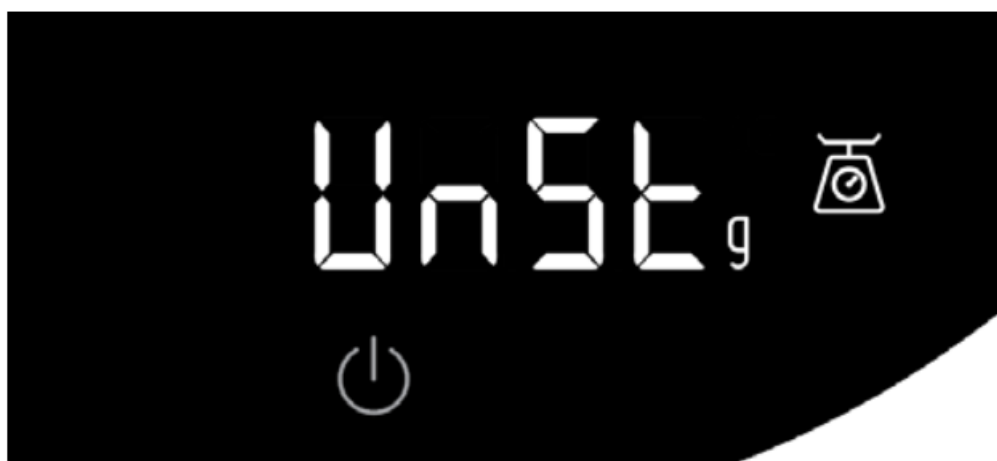

Unable to activate the scale because the scale is unstable. Place the scale on a flat and level surface.

BATTERY STATUS



- If the battery is 10% or lower when the user is turning on the scale this warning shows on the display. The warning is visible for 2 seconds before the scale turns on.
- To show battery status, long press the on/off button for three seconds, and the battery percent will show before the scale turns on/off.

CHARGING

To charge the scale, plug the USB cable into the USB port located at the back of the scale. Make sure the power switch on the back is set to an on position before charging the device. When charging, the display only shows the battery percent.

STORAGE

- Turn the power switch off.
- Ensure that there is nothing on the scale when it is not being used.
- The scale should not be stored standing on its side
- Never attempt to open the scale and tamper with its mechanism or circuitry

BLUETOOTH

The scale comes with a built-in Bluetooth® device. This feature gives the user the possibility to read and control the scale from a smartphone device (iOS or Android). If a Bluetooth connection is made, the B lights up on the display. Follow these steps to connect your smartphone to the scale.

1. Download the “Wilfa SVART” app from App Store® or Google Play™.
2. Turn on the scale by pressing the power button
3. Open the app on your smartphone device and click on the Bluetooth icon in the upper right corner.
4. Select the “Wilfa SVART scale” and press connect.

TIPS AND TRICKS

- This scale can be used as a lid for the Uniform coffee grinder.
- Short pressing the power button taring the scale and zeros the timer at the same time.



GUARANTEE

Wilfa issues a 5-year guarantee on this product from the day of purchase is done. The guarantee covers production failure or defects that arise during the guarantee period. Your purchase receipt works as proof towards the retailer if claiming your guarantee.

The guarantee is valid only for products that are bought and used in private households. The guarantee is not valid if the product is used commercially. The guarantee is not valid if the product is misused, used by negligence, if not following instructions given by Wilfa, if modified or if unauthorized reparation is done. The guarantee is also not valid for normal wear of the product, misuse, lack of maintenance, use of wrong electrical voltage or:

- Overloading of product
- Damage on glass
- Coating
- Parts you can expect to be replaced regularly (e.g. filter, battery, etc.)

PRODUCT SPECIFICATIONS

SPECIFICATION		
Weighing range	0.2g-2000g (0.01oz to 70.54oz)	
Readability/Repeatability	0.1g / 0.01oz	
Measuring unit	g / oz	
Scale accuracy	Amount weighed	
	1g to 200g	+/- 0.5g
	200g to 500g	+/- 1g
	500g to 2000g	+/- 3g
Battery type	Rechargeable Lithium Battery (3.7v / 1200 mAh)	
Charging plug	USB-C (5V / 600 mA)	
Battery life (weighing mode)	Ca. 20 hours	
Charging time	Ca. 2 hours	
Connectivity	Bluetooth 5.0	
Contents in box	KS1B-T2 Kitchen scale x 1	
	Heat resistant silicon pad x 1	
	USB-C charging cable x 1	

SUPPORT AND SPARE PARTS

For support please visit us at [wilfa.com](https://www.wilfa.com), and see our customer service/support page. Here you will find frequently asked questions, spare parts, tips and tricks, and all our contact information.

RECYCLABILITY

This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling free of charge.


AS Wilfa Nydalsveien 24, 0484 Oslo, Norway

wilfa

BEYOND EXPECTATION



Documents / Resources

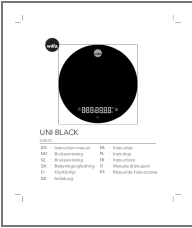

[wilfa KS1B-T2 UNI BLACK Precision Scale](#) [pdf] Instruction Manual

KS1B-T2, UNI BLACK Precision Scale, KS1B-T2 UNI BLACK Precision Scale, Precision Scale, Scale

References

-  [Wilfa – Norsk kvalitet siden 1948](#)
-  [Koti - Wilfa](#)
-  [Wilfa – Norsk kvalitet siden 1948](#)
-  [Hem - Wilfa](#)