



Mag Touch Keyboard case

WIWU Mag Touch Keyboard Case User Guide

[Home](#) » [WiWU](#) » WIWU Mag Touch Keyboard Case User Guide 

WIWU Mag Touch Keyboard Case



Mag Touch Keyboard case

Contents

- [1 IN THE BOX](#)
- [2 Product Model Specification](#)
- [3 Getting Started Guide](#)
- [4 Bluetooth Keyboard Connection Steps](#)
- [5 Keyboard Shortcut Function Description](#)
- [6 Touch Pad Gestures For Systems Above 10S 14.5](#)
- [7 ! Attention](#)
- [8 Energy Saving Sleep Mode](#)
- [9 Troubleshooting](#)
- [10 Cleaning](#)
- [11 Charging](#)
- [12 Safety Precaution](#)
- [13 Find Us At](#)
- [14 Documents / Resources](#)
 - [14.1 References](#)
- [15 Related Posts](#)


IN THE BOX

- Mag Keyboard case x 1
- Type-C Cable * 1
- Manual * 1

Product Model Specification

1. Bluetooth Interface Standard
2. Operating Distance Available: 10 meters
3. Modulation System: GFSK
4. Working Current:< 9mA
(When the touchpad is working)
5. Standby Current:< 0.3mA
6. Sleeping Current:< 40uA
7. Charging Current: 100mA/200mA
(Backlight)
8. Standby time:> 100 days
9. Charging time: 2-3hours
10. Lithium Battery Capacity:
250mAh/500mAh (Backlight)
11. Working time:> 50/100 hours (turn off the backlight)
12. Lithium Battery Life: 3 years
13. Key Strength: 80 \pm 10g
14. Key Life: 5 Million Stroke
15. Operating Temperature: -10 $^{\circ}$ C – +55 $^{\circ}$ C

Getting Started Guide

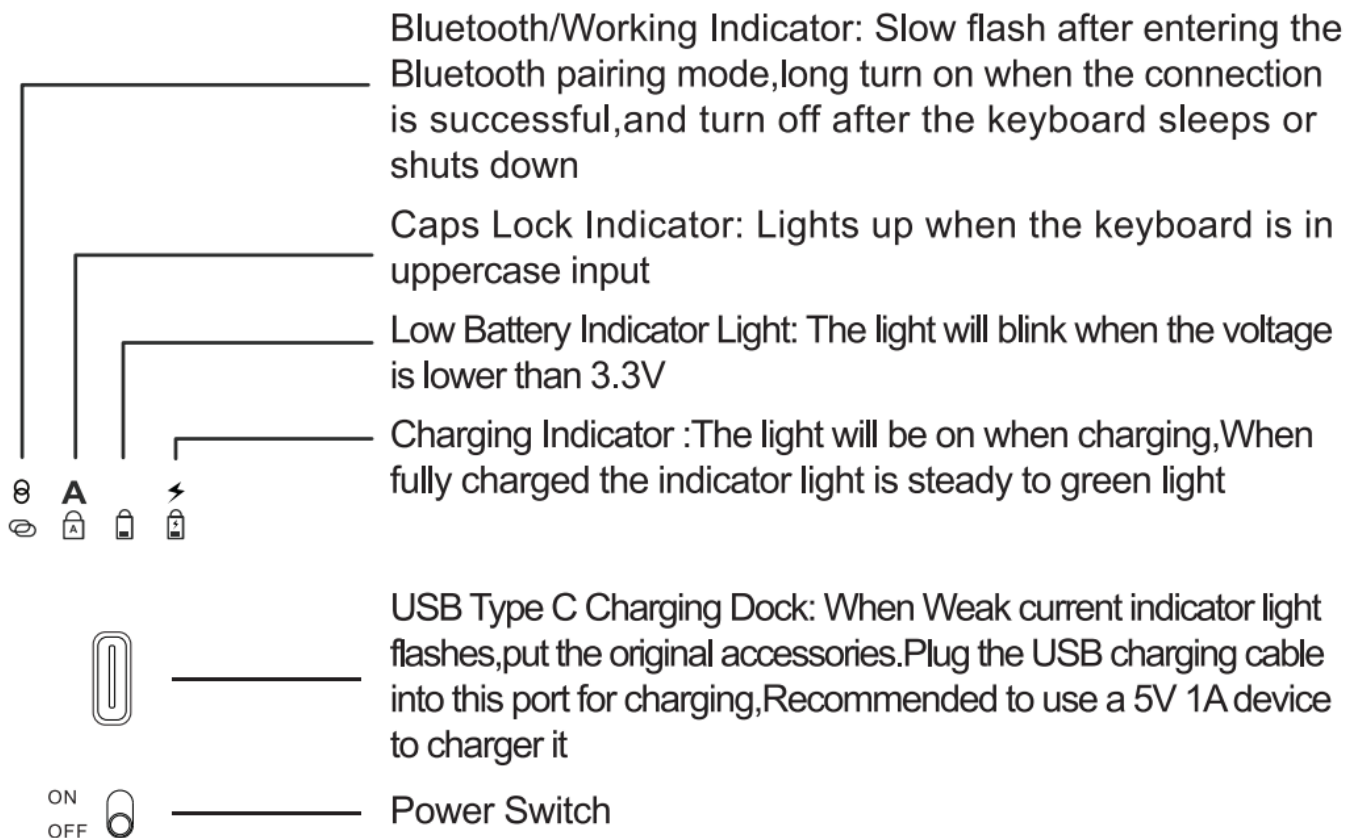


Bluetooth Keyboard Connection Steps


1. Toggle the switch to ON, the Bluetooth indicator, Caps Lock indicator, and weak power indicator will light up for 3 seconds at the same time. then the keyboard working indicator turn on, manually press Fn +Z/Fn+DEL to enter pairing (the Bluetooth indicator flashing slowly)




2. Open and unlock your tablet and click on the “Settings icon.

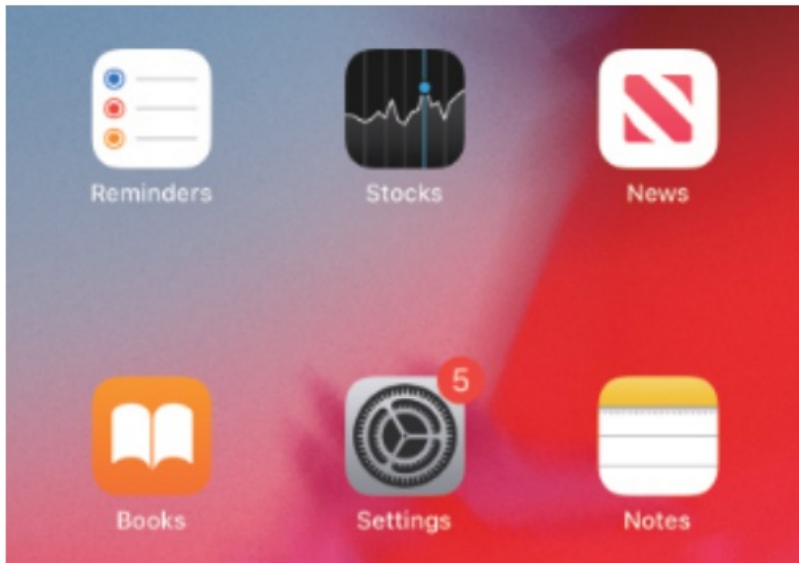


3. In the settings menu, click on the “Bluetooth” menu.

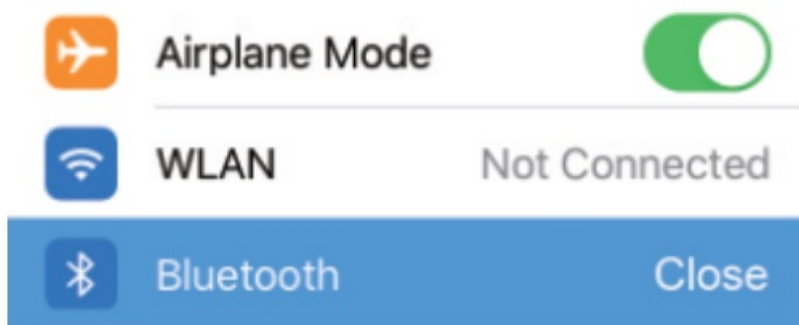



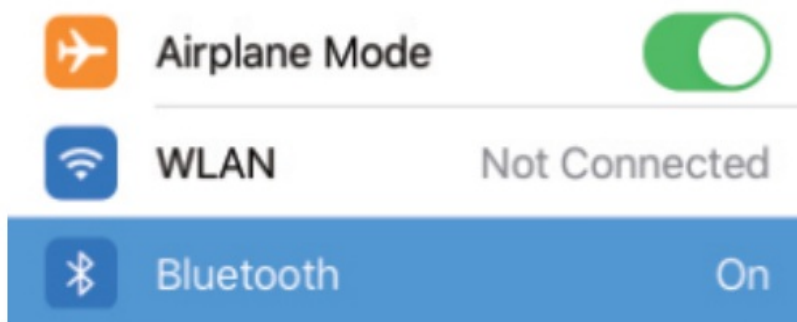



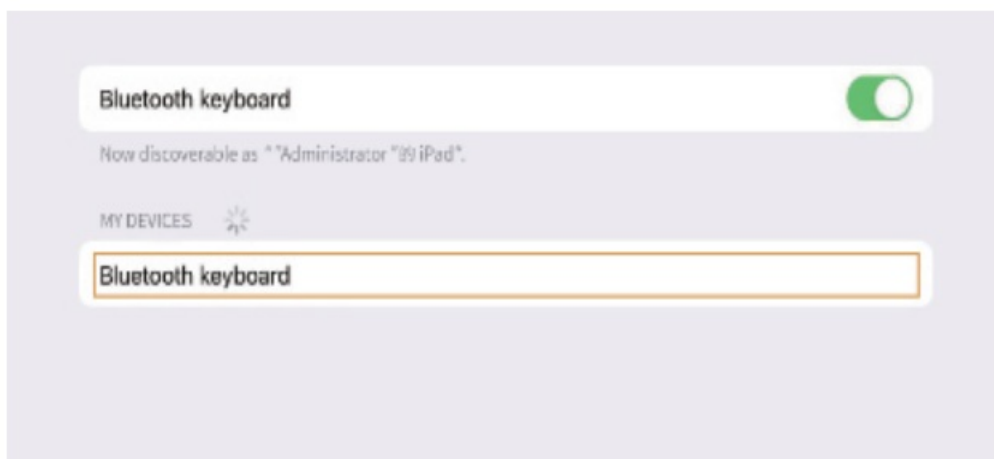













4. Turn on the Bluetooth switch and the tablet will automatically search for Bluetooth keyboard devices.



5. Back to your iPad Bluetooth list, tap the name of “WiWU 5.2G keyboard” “Bluetooth keyboard” “Mag Touch Keyboard” when it appears on screen.



Keyboard Shortcut Function Description

	Back to Home page		Brightness-		Brightness+
	Search		MultitaskingV>irdcm		Screen Captue
	Previous track		Pause/Play		Next Track
	Mute Key		Volume-		Volume+
	Cut		Language Switching		Lock Screen
	Bluetooth pairing		Back/9ht Bnghtness Ad justment		Combination Function Keys
	Voice text input		Touchpad on/off		

Note1: Screen capture function is divided into short press and long press to adapt to different models

Short Press: for models with Home button

Long Press for 2 seconds: for models without Home button

Note2: This button is only available on the bacdklit version of the keyboard



Color Adjustment: direct click.a total of 7 color cycles



Brightness Adjustment: Fn combination button.a total of 3 brightness cycle



Voice Input: the first time to use,you need to enable dictation



Adjust the brightness three-level adjustable.



+






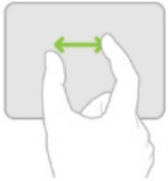



Switch color



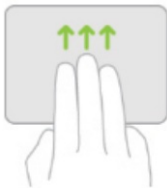


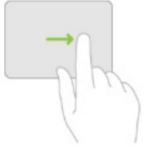

Touch Pad Gestures For Systems Above 10S 14.5

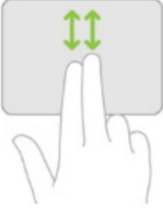Single Finger Operation	Click (Press with one finger until it feels a little pressed)		Click and hold (Press and hold with one finger)	
	Drag and move (Tap and hold an item, then swipe your finger across the trackpad to move it)		Wake up iPad (Click the touchpad) Or if you are using an external keyboard, press any key	
	Open dock (Swipe the pointer with one finger from the bottom of the screen)		Back to home screen (Swipe the pointer with one finger from the bottom of the screen, After the dock appears, swipe the pointer from the bottom of the screen again)	

<p>Show side dock (Swipe the pointer across the right edge of the screen with one finger.To hide the side dock, swipe right again)</p> 	<p>Open " Control Center "</p> <p>(Move the pointer with one finger lo select the status icon at the top right.and click ,Or select t he status Icon in the upper right and swipe up)</p> 
<p>Open notification Center (Move the pointer with one finger to sele ct the status icon at the top left.and click ,Or use one finger to move the pointer n ear the middle of the top of the screen)</p> 	
<p>Scroll up or down (Double pointing swipe up or down)</p> 	<p>Scroll left or right (Double pointing left or right s wipe)</p> 
<p>Zoom (Place your fingers close together. Open to enlarge or knead lo shrink)</p> 	<p>Open "today" view (Swipe right with double poin ting when the home screen or lock screen is visi ble)</p> 

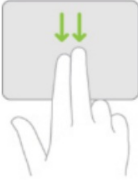Two Fingers Oper
ation

	<p>Open search from the home screen (Double pointing down swipe)</p> 	<p>Auxiliary click (Double pointing: press the icon on the home screen, the mail in the mailbox and the “camera” button in the “control center” to display its quick operation menu) Or if you are using an external keyboard, you can press and hold the control key and click the touch pad</p> 
<p>Three Fingers Operation</p>	<p>Go to the home screen (Three fingers swipe up)</p> 	<p>Open the app switcher (Swipe three points up, pause, and then raise your fingers) Or knead four fingers, pause and lift your fingers</p> 
	<p>Switch between open apps (Three fingers point left or right swipe)</p> 	

! Attention

1. When not use for long time.suggest to close keyboard.in order to prolong battery lift.
2. In order to get longer battery lifl,charging before keyboard power light flashes.charging time must be better more than 2 hours.

Energy Saving Sleep Mode

When keyboard not use will be enter sleep mode after 15 minutes.keyboard indicator will off press any key 3s to wake it up when need use again,then keyboard indicator will turn on.

Troubleshooting

1. Make sure the power is turned on
2. Ensure keyboard operable distance
3. Make sure the battery has power
4. Ensure the device's Bluetooth was turned on
5. Ensure the wireless keyboard was connected with the Bluetooth
6. Ensure the wireless keyboard paired successfully

Cleaning

Washing.alcohol or a similar cleaning agent decontamination keyboard


Charging

When battery is low, the power indicator blinking.means need to charge the keyboard

1. Connect Genuine Parts USB cable B port to keyboard cradle
2. Connect USB cable A port to power adapter or computer USB port
3. During charging, the charging indicator will be on, and it will turn green when fully charged.

When system is upgraded to iOS10 – iOS12, the CapsLock key on the Bluetooth keyboard will default to the function of switching to the Latin keyboard (the CapsLock key will default to the function of switching language in iOS 13-15), which makes it impossible to switch between upper and lower case. You can do the following settings to restoring normal functionality:

1. First connect the bluetooth
2. Settings -> General -> Hardware keyboard
3. After clicking in, you will see"Caps Lock Latin Switch", (iOS 13-15 CapsLock key will default to switch language function)" is on, just turn it off.

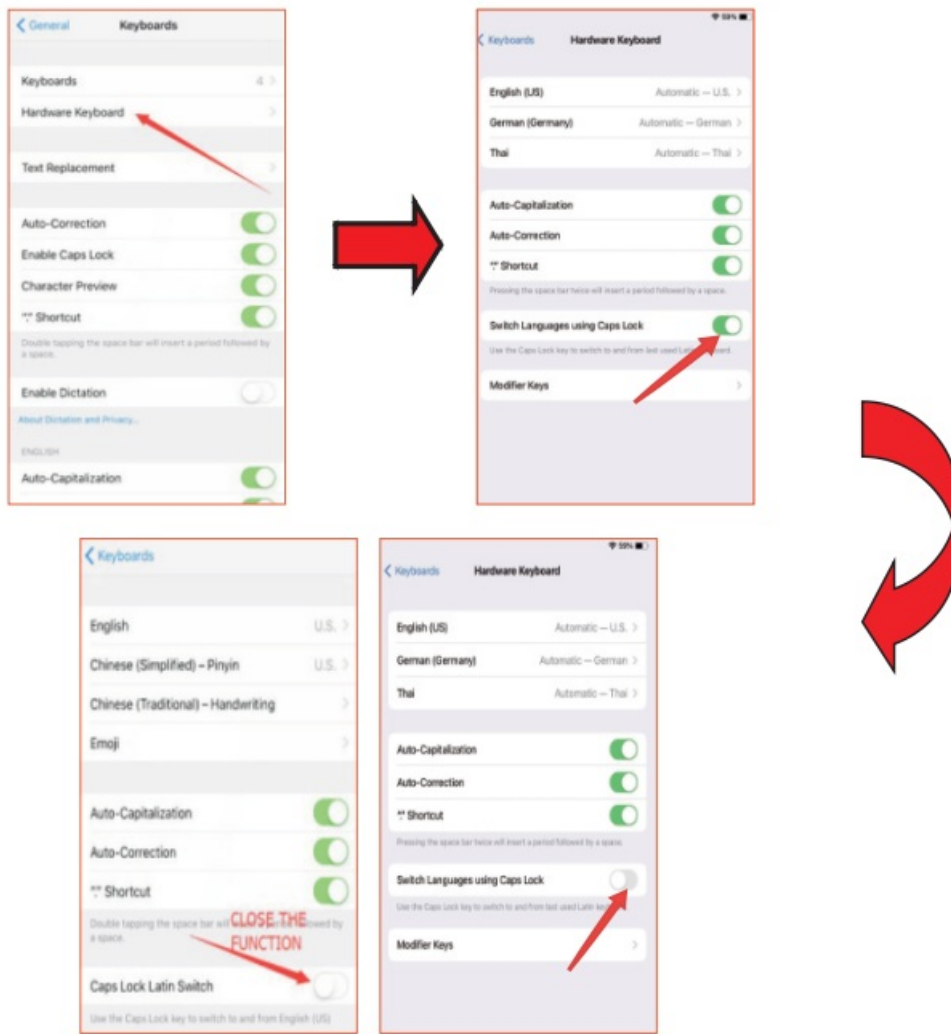

Safety Precaution

Keep the product, accessories and packaging parts out of reach of children to prevent any accidents and choking hazards.

Always keep the product dry to avoid corrosion.

Do not expose the product to extreme temperatures below -10°C (5°F) or above 50°C (131 °F) to preserve the lifespan of the keyboard and battery.

Find Us At

<https://www.wiwu.com>


Hello@wiwu.com

Designed by wiwu

Made in China



Documents / Resources

	WIWU Mag Touch Keyboard Case [pdf] User Guide 6th 2022, 5th 2021, 4th 2020, 3rd 2018, Mag Touch Keyboard Case, Touch Keyboard Case, Keyboard Case, Case
---	--

References

- [User Manual](#)