

woojer Strap Series 3 Device User Manual

Home » woojer » woojer Strap Series 3 Device User Manual



Woojer Strap Series 3 User Manual

Contents

- 1 What's in the Box
- 2 Woojer Strap Series 3™ Overview
- 3 First time usage
- 4 Woojer Strap Series 3™ LED

Indicators

- **5 Charging Your Strap**
- 6 Wearing the Strap
- 7 Playing
- **8 Care and Maintenance**
- 9 Documents / Resources
 - 9.1 References
- 10 Related Posts


What's in the Box

- Woojer Strap Series 3™
- USB-C cable
- · Soft pouch
- User manual

Woojer Strap Series 3™ Overview

- 1. Power/Bluetooth button
- 2. Power/Bluetooth source indicator

- 3. Charging indicator
- 4. Bluetooth Headphones indicator
- 5. Bluetooth headphones indicator
- 6. Volume Up button
- 7. Volume Down button
- 8. Volume indicator
- 9. Sensation Up button
- 10. Sensation Down button
- 11. 3.5mm audio-in port
- 12. Digital USB-C input Port/charging port
- 13. Headphone output jack

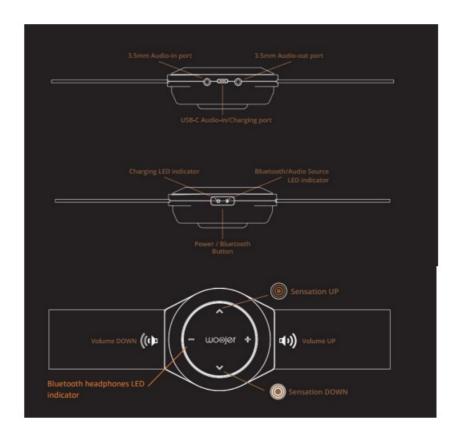

First time usage

Woojer app

Scan the following QR to install Woojer app on your mobile or browse to www.woojer.com/woojerapp Follow the onscreen instructions to set up your Woojer.

Woojer app lets you easily control your Woojer, pair it with other devices, update its firmware, finetune your experience, get updates for content, special deals, news and much more. For the best experience, it's highly recommended to install Woojer app on your mobile.

Update your firmware

It's very important that you update your Strap's firmware to the latest available version. This makes sure your Strap supports all up-to-date features and bugfixes. To update your Strap, run Woojer app and follow the update instructions.

Find Content

Find amazing content, for great Woojer experience at www.woojer.com/content

Get Support

All current information about your Strap is to be found on our Support Portal at www.woojer.com/support. You can also find there technical-related articles and videos to help you utilize and troubleshoot your Strap. If you still need help, please contact us using Woojer app or through Woojer Support Portal.

Woojer Strap Series 3[™] LED Indicators

Power Indicator

Solid green – Strap is on, no audio source connected

Solid blue - Strap is on, audio source connected

Bluetooth Source Indicator

Solid blue - Bluetooth audio source connected

Blue, slow blinking – Searching for a Bluetooth audio source

Red/blue, fast alternating blinking - Bluetooth Audio source pairing

Bluetooth Headphones Indicator

Solid blue - Bluetooth headphones connected

Blue, slow blinking - Searching for Bluetooth headphones

Red/blue, fast alternating blinking – Bluetooth headphones pairing mode

Charging indicator

Battery charge meter: Green - Yellow - Orange - Red - Blinking Red

Charging Your Strap

- Connect a standard mobile charger to the USB-C port, using the included USB-C cable. Before first use, fullycharge your Strap.
- While charging, the LED indicator changes its color according to the battery level. Once fully charged, it'll show
 in solid green.
- Do not use the Strap while charging.

Connecting to an Audio Source

Woojer Strap Series 3[™] can be connected to various audio sources using either wired connection or wireless Bluetooth. Choose the right diagram according to your hardware and follow the connection instructions. For other hardware types, or special hardware setups, please visit our support portal at www.woojer.com/support

Gaming Console

- Connect your console's controller to the Strap's 3.5mm audio-in port, using an audio cable.
- Adjust the source volume level... [diagram]

PC

- Connect your PC to the Strap's Digital USB-C input Port using the provided USBC cable.
- Set the Strap as the PC's default playing device [diagram]

VR Headset

- Connect your VR headset to the Strap's 3.5mm audio-in port, using an audio cable.
- Adjust the source volume level...

Note: It's not recommended to use Bluetooth or USB-C cable to connect your VR headset.

Bluetooth Source

Pair your Bluetooth source (e.g.: your mobile) with the

- Open Woojer app and follow the pairing instructions (recommended)
 OR
- Make sure the Strap is turned off
- Press and hold the Power button for 5 seconds. The Bluetooth Source Indicator will blink alternately with red and blue.
- On your source device, enter Bluetooth screen and locate the Woojer Strap Series 3.
- Pair and connect the Strap with your source device.
 [diagram]

Connecting to Headphones

Woojer Strap Series 3[™] can be connected to either wired or Bluetooth headset. When turning on, it will first search for previously paired Bluetooth headset.

Note: For Bluetooth connection, we highly recommend using the Woojer app.

Bluetooth Headset Connection Manually (without Woojer app)


- To enter headset pairing mode, press and hold the Power button and the Volume Up button for 5 seconds. The Bluetooth Headphones Indicator will blink alternately with red and blue.
- Set your Bluetooth headset into pairing mode and place it within proximity to the Strap.
- Both devices should be paired within 30 seconds.

Wired headset connection

Connect your headset to the Strap's Headphone jack using an audio cable.

Wearing the Strap

- Position your Strap: Around your chest / on your waist / against your spine.
- · Adjust size by extending or reducing strap length.

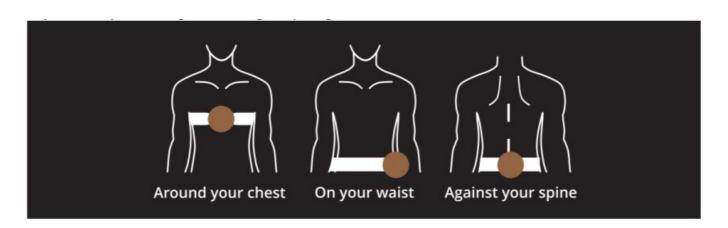

Once you've connected the audio source device and headset to the Strap:

- Play your content from the connected source device.
- Use Woojer app for accurate synchronization between audio and haptic.
- Use the Strap's control buttons to adjust the headphones output levels and sensation levels.

Care and Maintenance

- Keep the Woojer Strap Series 3[™] and accessories device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device.
- Do not drop. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- If the device doesn't work properly, please contact our technical support team through our website, at www.woojer.com/support

Safety and Warnings (Read carefully before use)

- This product contains a rechargeable Lithium-ion battery and should not be disposed together with household waste. This product must be discarded in accordance with your local legal requirements.
- As with other devices with permanent magnets, Woojer Strap Series 3[™] is not suitable for use by persons with pacemakers.
- Do not use Woojer Strap Series 3[™] with headphones/earphones while driving, cycling, or operating any motorized vehicle. This may create a traffic hazard and may be illegal.
- It can be dangerous to play your music with headphones/earphones at high volume while walking or engaged in other activities. Exercise extreme caution and discontinue use in potentially hazardous situations.
- Avoid using headphones/earphones at high volume. Hearing experts advise against continuous loud and extended music play. Keep the volume at a moderate level, so that you are better able to hear outside sound.
- Do not use your Woojer Strap Series 3[™] while it is charging.
- If Woojer Strap Series 3[™] overheats excessively during use, do not use it and contact our technical support team through www.woojer.com/s
- Avoid charging your Woojer Strap Series 3[™] at extremely high or low temperatures.

Declaration of Conformity, Certificates, and Safety Protocols

Federal Communications Commission Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interferences that may cause undesired operation .Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part

15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet the general RF exposure requirement.

The device can be used in portable exposure conditions without restriction.

Canada-industry Canada (IC)

This radio transmitter has been approved by Industry Canada. This Class B digital apparatus complies with Canadian standard ICES-003 This device complies with Industry Canada Licence exempt RSS standard(s). Operation is subject to the following two conditions. (1) this device may not cause interference and (2) this device must accept any interference, including interference that may cause undesired operation of the device. The device has been evaluated to meet the general RF exposure requirement. The device can be used in portable exposure conditions without restriction.

Bluetooth

The Woojer Strap Series 3[™] Qualified Design Listing was achieved in accordance with the Bluetooth Qualification Process as specified within the Bluetooth Specifications.

CE Declaration of Conformity

We, Woojer Ltd., declare under our sole responsibility, that this Woojer Strap Series 3[™] product is in conformity with the standards and other normative documents.

Warranty

12 months from purchase. You can learn more about the warranty through this QR code.

Add link to warranty page/paragraph.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Documents / Resources



woojer Strap Series 3 Device [pdf] User Manual

WJRS3-101, WJRS3101, 2AQXZ-WJRS3-101, 2AQXZWJRS3101, Strap Series 3 Device, Strap Series 3, Device

References

- • Woojer
- Support Woojer

- O Support Woojer
- O Support Woojer

Manuals+, home privacy