



## DA PIR-4000 Wireless PIR Sensor User Guide

[Home](#) » [DA](#) » DA PIR-4000 Wireless PIR Sensor User Guide 

### Contents

- 1 Wireless PIR Sensor PIR-4000
- 2 USER GUIDE [www.dakotaalert.com](http://www.dakotaalert.com)
- 3 PACKAGE CONTENTS
- 4 SETTING UP YOUR PIR-4000:
- 5 ADJUSTING MOTION DETECTOR SETTINGS
- 6 JUMPER SETTINGS
- 7 INSTALLING THE BATTERY
- 8 CODING TO YOUR RECEIVER
- 9 MOUNTING YOUR PIR-4000
- 10 SPECIFICATIONS
- 11 TECH SUPPORT
- 12 WARRANTY
- 13 LEGAL NOTICES
- 14 Documents / Resources
- 15 Related Posts

**Wireless PIR Sensor PIR-4000**



DOKOTA ALERT  
WIRELESS SECURITY EQUIPMENT

**USER GUIDE**  
[www.dakotaalert.com](http://www.dakotaalert.com)

The PIR-4000 transmitter is compatible with all Dakota Alert 4000 series receivers. The PIR-4000 is designed for indoor applications or outdoor applications in a protected area such as an eave. When the sensor detects an object it will send a signal to a receiver which will sound one of the selected tunes for few seconds.

**PACKAGE CONTENTS**

- PIR
- (1) CR123 A
- Swivel Mount
- Screws (2)
- User Guide

**SETTING UP YOUR IR-4000:**

1. Adjust the PIR-4000 Chrome-extension settings.
2. Install (1) CR-123 A battery (included)
3. Program the PIR-4000 to your receiver.
4. Mount your motion detector.



**FRONT VIEW**



**SIDE VIEW**

### **ADJUSTING MOTION DETECTOR SETTINGS**

To adjust your settings, move the jumpers inside the motion detector's case to complete a circuit.


1. To open the case, locate the small tab on the bottom of the case and press with a small flat screwdriver while pulling the lens portion of the case away from the back portion of the case.



**INSERT FLAT  
SCREWDRIVER IN TAB**


**BOTTOM VIEW OF CASE**

2. Locate the set of jumpers in the bottom left hand corner of the circuit board.

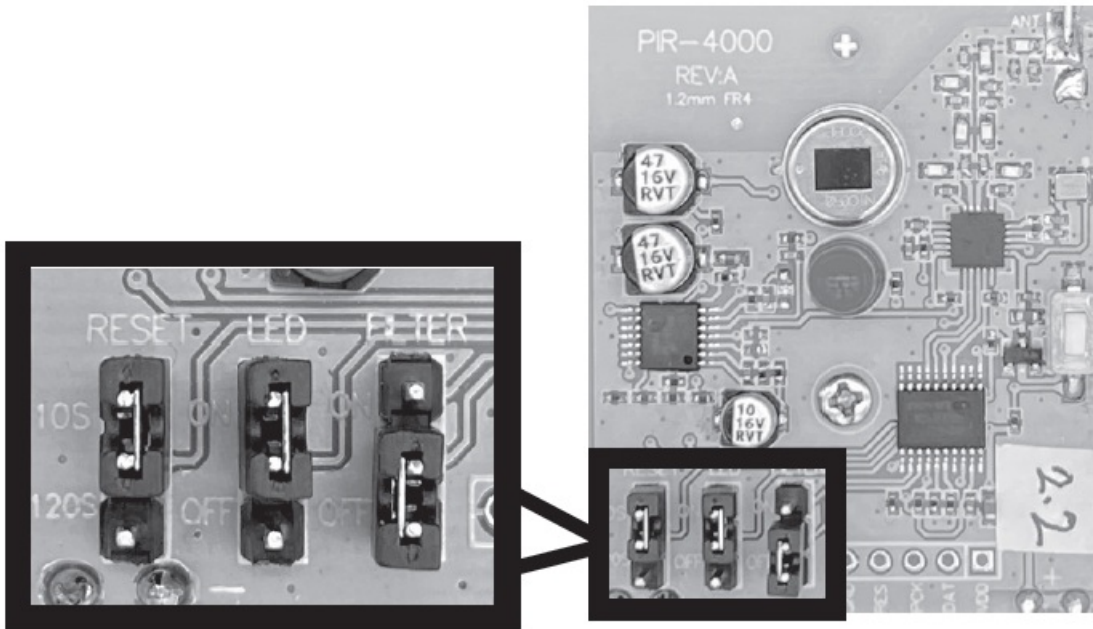

3. Gently pull off the jumper for the setting you want to change.


**Note:** If you can't move the jumper with your fingers, you can use a tweezers.

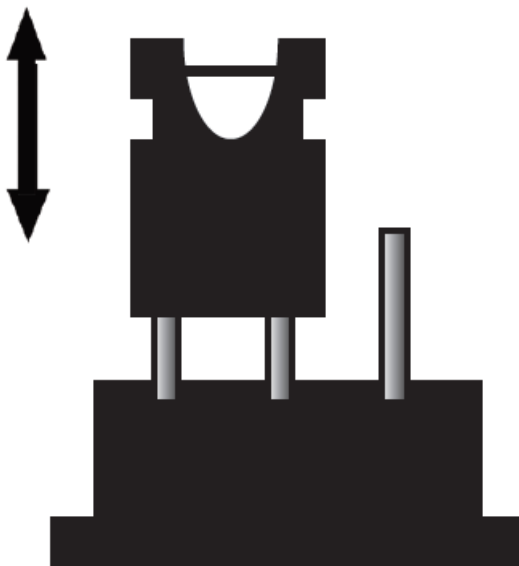


4. Gently slide the jumper back onto the pair of jumper pins that corresponds with the setting you want.

## JUMPER SETTINGS

- **RESET:** Changes the minimum time between alarm activations.

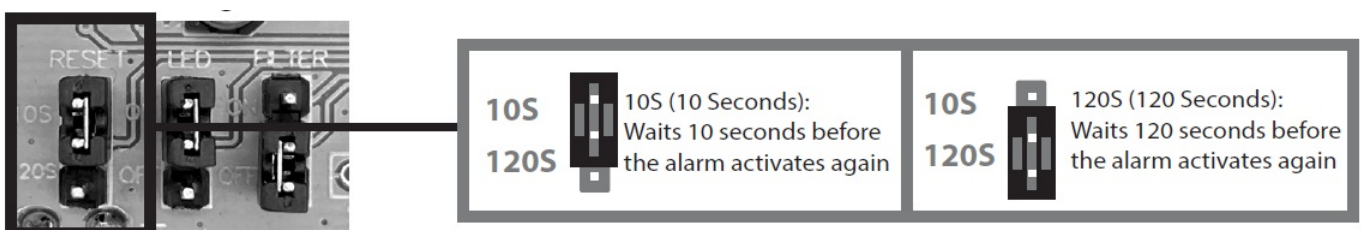

- **LED:** Turns LEDs on or off

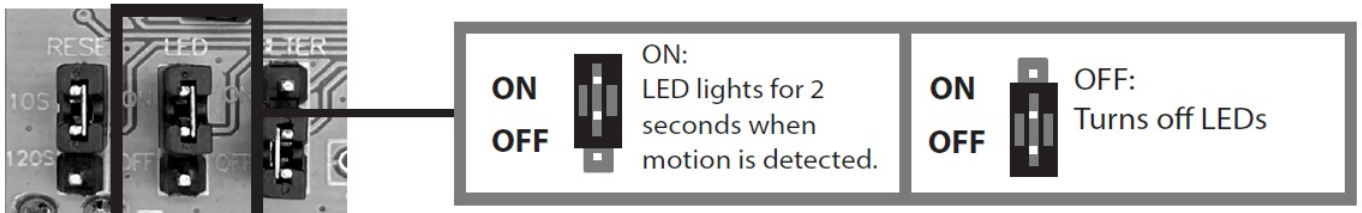


- **FILTER:** Changes the sensitivity level of the motion detector to filter out small movements like leaves moving outside.



## INSTALLING THE BATTERY


1. Open the case by pressing the small tab at the bottom of the case with a small screwdriver.
2. Connect a CR-123A battery (included) to the PIR-4000. Be sure to observe the polarity (+/-) on the case.
3. Replace the cover

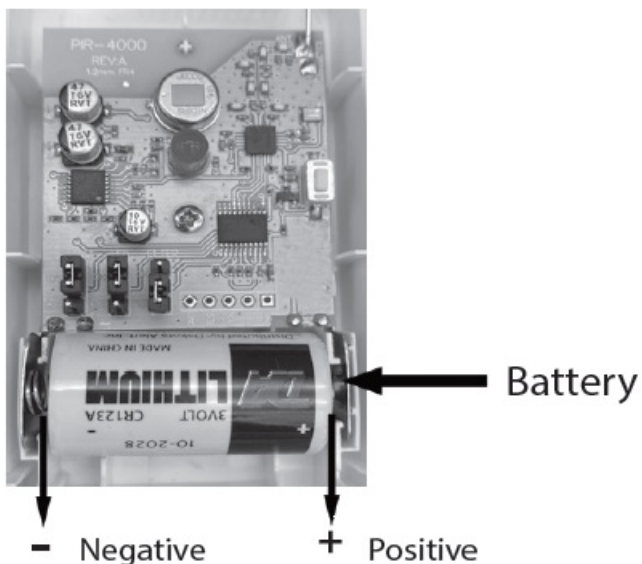

## CODING TO YOUR RECEIVER

**NOTE:** You can connect up to 16 transmitters to your receiver

1. Refer to the manual for you Dakota Alert 4000 Series receiver for complete coding instructions.
2. To activate the PIR-4000 either wave your hand over the sensor or press the test button

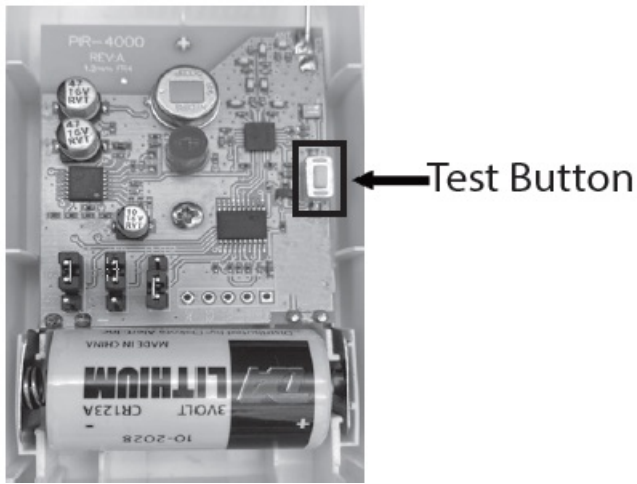

## MOUNTING YOUR PIR-4000

**NOTE:** For maximum range between the motion detector and receiver, avoid mounting the sensor on a metal object. Although the maximum range is about one mile, obstructions such as hills, trees, metal siding and stucco can reduce that range.

1. Select a location to mount the motion detector. For best results mount the sensor on a wall about 7' off the ground and pointing down slightly at the area to be monitored. Avoid pointing towards things that move such as curtains in the wind.
2. Use a drill and the included screws to mount the swivel bracket.
3. Slide the transmitter down onto the bracket.



## SPECIFICATIONS

- Power Source: CR-123A lithium battery
- Dimensions 3.25" H X 2" W X 1.5" D
- Motion detection range: up to about 40'
- Operating Temperature: -10° to 120° F (-23° to 49° C)
- Wireless Range: Up to 1 mile (1.6 km)\*
- Operating Frequencies: 433 MHz

\*Actual range will vary depending on local terrain and obstructions.

## TECH SUPPORT

If you have problems using this product after reading this manual, please contact us. You can reach us by phone at 605-356-2772 from 8:30 AM to 5:00 PM Monday through Friday (Central Standard Time). We will be happy to answer your questions and help you in any way we can.

## WARRANTY

Dakota Alert warrants this product to be free of defects in materials and workmanship for a period of one year from the date of purchase. This warranty does not cover damage resulting from accident, abuse, act of God, or improper operation. If this product does become defective, simply return it to Dakota Alert. Please include a note describing the troubles along with your name, address and phone number as well as the original sales receipt. If the product is covered under warranty it will be repaired or replaced at no charge. If it is not covered under warranty, you will be notified of any charges before work is done.

## LEGAL NOTICES

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. the device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the users authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:



- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**WARNING:** Cancer and Reproductive Harm. Go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov) for more information.



Dakota Alert, Inc.  
[www.dakotaalert.com](http://www.dakotaalert.com)  
Phone: (605)356-2772  
Fax: (605)356-3662  
**Address:** 32556 477th Ave.  
PO Box 130  
Elk Point, SD 57025

Documents / Resources

 <b>Dakota Alert®</b> <small>Advanced Security Systems</small>   <b>Wireless PIR Sensor</b> <b>PIR-4000</b> <b>USER GUIDE</b> <small>www.dakotaalert.com</small>	<p><b><a href="#">DA PIR-4000 Wireless PIR Sensor</a></b> [pdf] User Guide PIR-4000, Wireless PIR Sensor, PIR-4000 Transmitter</p>
--	--