



amazon basics Digital Postal Table Top Scale User Manual

[Home](#) » [amazon basics](#) » amazon basics Digital Postal Table Top Scale User Manual 

amazon basics Digital Postal Table Top Scale User Manual



Contents

- 1 **IMPORTANT SAFEGUARDS**
- 2 **Battery Warnings**
- 3 **Explanation of Symbols**
- 4 **Product Description**
- 5 **Before First Use**
- 6 **Intended Use**
- 7 **Operation**
- 8 **Counting function**
- 9 **Cleaning and Storage**
- 10 **FCC – Supplier's Declaration of Conformity**
- 11 **Canada IC Notice**
- 12 **Disposal (for Europe only)**
- 13 **Battery Disposal**
- 14 **Specifications**
- 15 **Feedback and Help**
- 16 **Documents / Resources**
 - 16.1 **References**
- 17 **Related Posts**

IMPORTANT SAFEGUARDS

Read these instructions carefully and retain them for future use. If this appliance is passed to a third party, then these instructions must be included.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

- Use this appliance only on a firm, level surface.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Do not use this appliance in an environment with strong electromagnetic disturbances.
- Handle this appliance with care as it is a precision instrument.
- Only use this appliance with a provided power adapter, model XYO6SE-050100VQ-UW for North America, YM-0501000 for Europe and 'YM-0501000-BS for UK.
- Disconnect the power adapter from the electrical outlet when not in use and before cleaning.






Battery Warnings

NOTE: The batteries are not included.


- Always insert batteries correctly with regards to polarity (+ and -) marked on the battery and the appliance.
- Exhausted batteries should be immediately removed from appliance and properly disposed.
- Non-rechargeable batteries are not to be recharged.
- Different types of batteries or new and used Batteries are not to be mixed.

- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the appliance and safely disposed of.
- If the appliance is to be stored unused for a long period, the batteries are removed.
- The supply terminals are not to be short-circuited.
- Remove batteries with dry hands only.

Explanation of Symbols

- **CE** This symbol stands for “Conformity Europe”, which means “Conformity with EU-directives”. With the CE-marking the manufacturer confirms that this appliance complies with applicable European directives and regulations.
- **UKCA** This symbol stands for “UK Conformity Assessed”, which means “Conformity with British Standards”. With the UKCA-marking the manufacturer confirms that this appliance complies with applicable British Standards.
-  This appliance is classified as protection class II. This means the appliance is equipped with reinforced or double insulation between the mains supply circuit and the output voltage or the casing. Therefore it does not require a safety connection to an electrical earth (ground).
-  This appliance is for indoor use only.
-  Direct current (DC).
-  Alternating current (AC).
-  Polarity indicator “+” and “-”

Product Description

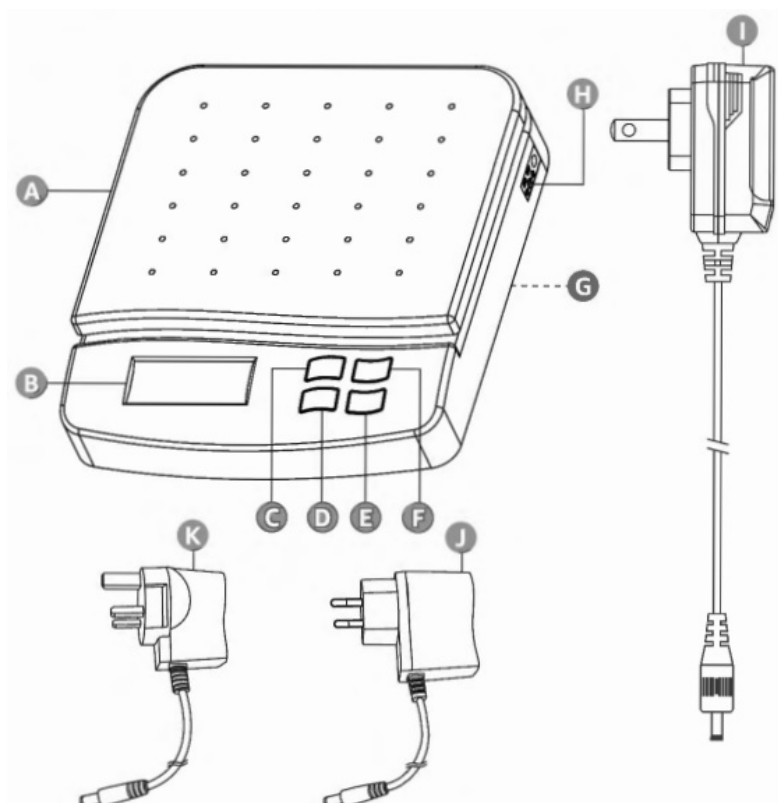

- A Weighing plate
- B Display
- C PCS button
- D ON/OFF button
- E MODE button
- F TARE button
- G Battery compartment
- H Battery compartment
- I Power adapter (US)
- J Power adapter (EU)
- K Power adapter (UK)

Before First Use

- Check the appliance for transport damages.
- Remove all the packing materials.

DANGER


Risk of suffocation! Keep any packaging materials away from children- these materials are a potential source of danger, e.g. suffocation.

Intended Use

- This appliance is intended for weighing items up to a maximum weight of 65 lbs (30 kg).
- This appliance is intended for household use only. It is not intended for commercial use.
- This appliance is intended to be used in dry indoor areas only.
- No liability will be accepted for damages resulting from improper use or noncompliance with these instructions.

Operation

Inserting batteries

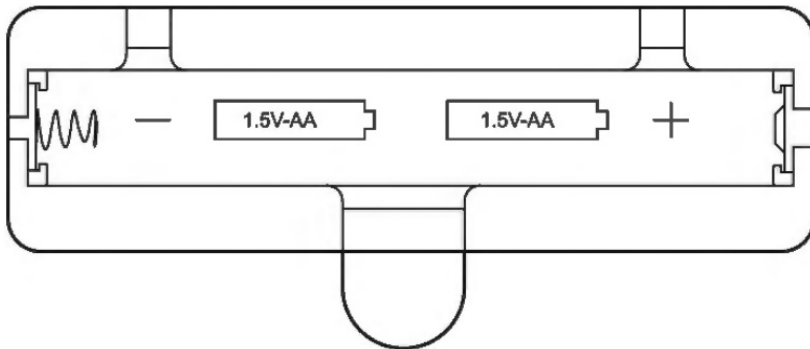

1. Remove the battery compartment (G) cover at the back of the product.
2. Insert 2x AA (LR6, R6) 1.5 V batteries (not included).
3. Close the battery compartment (G) cover.

NOTICE Battery is low when is shown on the display (B).

NOTICE Product automatically switches off after 5 minutes of inactivity when battery powered.

Connecting to a socket outlet

1. Attach the power adapter (I/J/K) to the power socket (H).
2. Connect the plug to a suitable socket outlet.

NOTICE Product does not automatically switch off when using power adapter (I/J/K).

Weighing

1. Press the ON/OFF button (D) to switch the product on. The display (B) shows "0.0".
2. Place an item on the weighing plate (A). Wait for the readout on the display (B) to stabilize.
3. After use, press the ON/OFF button (D) to switch the product off.

NOTICE

- Press the MODE button (E) anytime to toggle between different weighing units (lbos, gig, kg, g, lb., oz.).
- To reset the display to "0.0" with items still on the weighing plate (A), press the TARE button (F), then place on the next item.
- The product is overloaded when -Ld. is shown on the display (B). Remove all items on the weighing plate (A).

Auto-lock function

1. After the weight of the item(s) is/are stabilized, the display (B) will automatically lock after flashing "hold" 6 times.
2. Unless all items on the weighing plate (A) are removed, the weight readout on the display (B) does not change.
3. The display will unlock when:
 - A. new items (> 0.03 oz (5 g)) are added to the weighing plate (A).
 - B. all items on the weighing plate (A) are removed. The display (B).unlocks after flashing "hold" 4 times.

Counting function

NOTICE

- This function can only work for items weighing approximately 0.055 lbs (25 g) and above.
- This function can only be used for counting items that are identical/similar in weight
- When ERR is shown on the display (B), remove all items on the weighing plate (A) and try again. Check if the weight is below the minimum workable weight for this function, approx. 0.055 lbs (25 g).
- The product is overloaded when -d is shown on the display (B). Remove all items on the weighing plate (A) and try again.
 1. Press and hold the PCS button (C) for 3 seconds to activate the counting function. Display (B) shows 25 and "pcs" flashes continuously.
 2. Press the MODE button (E) to select the quantity of the sample (25/50/75/100) units, and then place the

items on the weighing plate (A).

3. Press the PCS button (C) to confirm, then the display (B) shows PASS and “pcs” stays lit.
4. Place all the items needed to weigh out on the weighing plate (A). The display (B) shows the amount of items accordingly.

Cleaning and Storage



WARNING Risk of electric shock! To prevent electric shock, unplug the product and/or remove the batteries before cleaning.



WARNING Risk of electric shock! During cleaning do not immerse the product in water or other liquids. Never hold the product under running water.

Cleaning

- To clean the product, wipe with a soft, slightly moist cloth.
- Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product.

Storage

Store the product in its original packaging in a dry area. Keep away from children and pets.

FCC – Supplier’s Declaration of Conformity

Unique Identifier	B085217NHG-Amazon Basics Digital Postal Table Top Scale with AC Adapter, Counting Function – 65 Pound Capacity, 0.1 Ounce Readability
Responsible Party	Amazon.com Services, Inc410 Terry Ave N.
U.S. Contact Information	Seattle, WA
Telephone Number	98109, United States(206) 266-1000

FCC Compliance Statement

1. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
 1. this device may not cause harmful interference, and
 2. this device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However,

there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

Canada IC Notice

- This Class B digital apparatus complies with Canadian CAN ICES-003(B) / NMB-003(B) standard.

Disposal (for Europe only)



■ The Waste Electrical and Electronic Equipment (WEEE) laws aim to minimise the impact of electrical and electronic goods on the environment and human health, by increasing re-use and recycling and by reducing the amount of WEEE going to landfill. The symbol on this product or its packaging signifies that this product must be disposed separately from ordinary household wastes at its end of life. Be aware that this is your responsibility to dispose of electronic equipment at recycling centres in order to conserve natural resources. Each country should have its collection centres for electrical and electronic equipment recycling. For information about your recycling drop off area, please contact your related electrical and electronic equipment waste management authority, your local city office, or your household waste disposal service.

Battery Disposal



■ Do not dispose of used batteries with your household waste. Take them to an appropriate disposal/collection site.

Specifications

Model number:	5503001US for North Americas 5503001EU for the EU region 5503001UK for United Kingdom
Battery input voltage:	3 V, 2x 1.5 V AA (LR6, R6)
Max weight capacity:	65 lbs. (30 kg)
Protection class:	65 lbs. (30 kg)

North America power adapter

Model number:	XY06SE-050100VQ-UW
Input voltage:	100-240 V
Input AC frequency:	50/60 Hz
Output voltage:	5.0 V —
Output current:	1.0 A
Output power	5.0 W
Average active efficiency:	72.98 %
Efficiency at 25 %:	72.95 'go
No-load power consumption:	0.1 W

European power adapter

Manufacturer's name or trade mark, commercial registration number and address:	Amazon EU S.à r.l., 38 avenue John F. Kennedy, L-1855 Luxembourg 00134248
Model number:	YM-0501000
Input voltage:	100-240 V~
Input AC frequency:	50/60 Hz
Output voltage:	5.0 V ===
Output current:	1.0 A
Output power:	5.0 W
Average active efficiency:	72.3%
Efficiency at 25%:	72.8%
No-load power consumption:	≤0.1 W

United Kingdom power adapter

Manufacturer's name or trade mark, commercial registration number and address:	Amazon EU SARL, UK Branch 1 Principal Place, Worship St, London EC2A 2FA, United Kingdom 3223028
Model number:	YM-0501000-BS
Input voltage:	100-240 V~
Input AC frequency:	50/60 Hz
Output voltage:	5.0 V ===
Output current:	1.0 A
Output power:	5.0 W
Average active efficiency:	72.3%
Efficiency at 25%:	72.8%
No-load power consumption:	≤0.1 W

Importer Information

	For EU
Postal:	Amazon EU Sea rill., 38 avenue John F. Kennedy, L-1855 Luxembourg
Business Registration:	134248

	For UK
Postal	Amazon EU SARL, UK Branch, 1 Principal Place, Worship St, London EC2A 2FA, United Kingdom
Business Registration:	BR017427


Feedback and Help


We would love to hear your feedback. To ensure we are providing the best customer experience possible, please consider writing a customer review. Scan QR Code below with your phone camera or QR reader:



 **UK:** amazon.co.uk/review/review-your-purchases#

If you need help with your Amazon Basics product, please use the website or number below.

 **US:** amazon.com/gp/help/customer/contact-us

 **UK:** amazon.co.uk/gp/help/customer/contact-us



+1 877-485-0385 (US Phone Number)



Documents / Resources



[amazon basics Digital Postal Table Top Scale](#) [pdf] User Manual

Digital Postal Table Top Scale, Digital, Postal Table Top Scale, Table Top Scale, Top Scale, Scale

References

- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.