

Cadmos G10

Cadmos G10 Digital Alarm Clock User Manual

Model: G10

1. INTRODUCTION

Thank you for purchasing the Cadmos G10 Digital Alarm Clock. This device features a modern curved design, a colorful LED display, adjustable volume, dual alarms, and a convenient USB charging port. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance.

2. WHAT'S INCLUDED

- Cadmos G10 Digital Alarm Clock
- USB Power Adapter
- Power Cord (Type-C, 59 inches)
- User Manual
- 1 x CR2025 Battery (pre-installed for backup)

3. PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your Cadmos G10 Digital Alarm Clock.

Battery Backup



Figure 3.1: Top and Rear View of the Cadmos G10 Digital Alarm Clock, highlighting control buttons, USB charging port, and battery compartment.

Control Buttons (Top Panel):

- **Time Set Button:** Hold for 3 seconds to enter time setting mode.
- **Alarm 1 Button:** Press to activate/deactivate Alarm 1. Hold for 3 seconds to set Alarm 1 time.
- **Alarm 2 Button:** Press to activate/deactivate Alarm 2. Hold for 3 seconds to set Alarm 2 time.
- **SNZ/Multicolor Button:** Press to snooze an active alarm (10 minutes). Hold for 3 seconds to change the night light color.
- **Volume Up/Down Buttons:** Adjust alarm volume (3 levels).
- **Dimmer Button:** Adjust display brightness (4 levels).
- **Light Color Change Button:** Cycle through display colors.

Rear Panel:

- **USB 5V Power Input:** Connect the power cord here.
- **USB Charging Port:** For charging external devices (DC 5V/1A-2A).
- **CR2025 Battery Compartment:** Houses the backup battery.
- **Loud Buzzer:** Alarm sound output (65dB-95dB).

4. SETUP

4.1 Power Connection

1. Connect the provided power cord to the USB 5V Power Input port on the back of the alarm clock.
2. Plug the USB power adapter into a standard wall outlet. The display will light up.

4 Level Brightness Adjustment



Figure 4.1: The Cadmos G10 Digital Alarm Clock powered via its USB connection, showing its compact size (6.7 x 3.11 inches).

4.2 Battery Backup

The clock includes a pre-installed CR2025 battery to maintain time and alarm settings during power outages. This battery does not power the display or alarm functions directly.

OVERVIEW

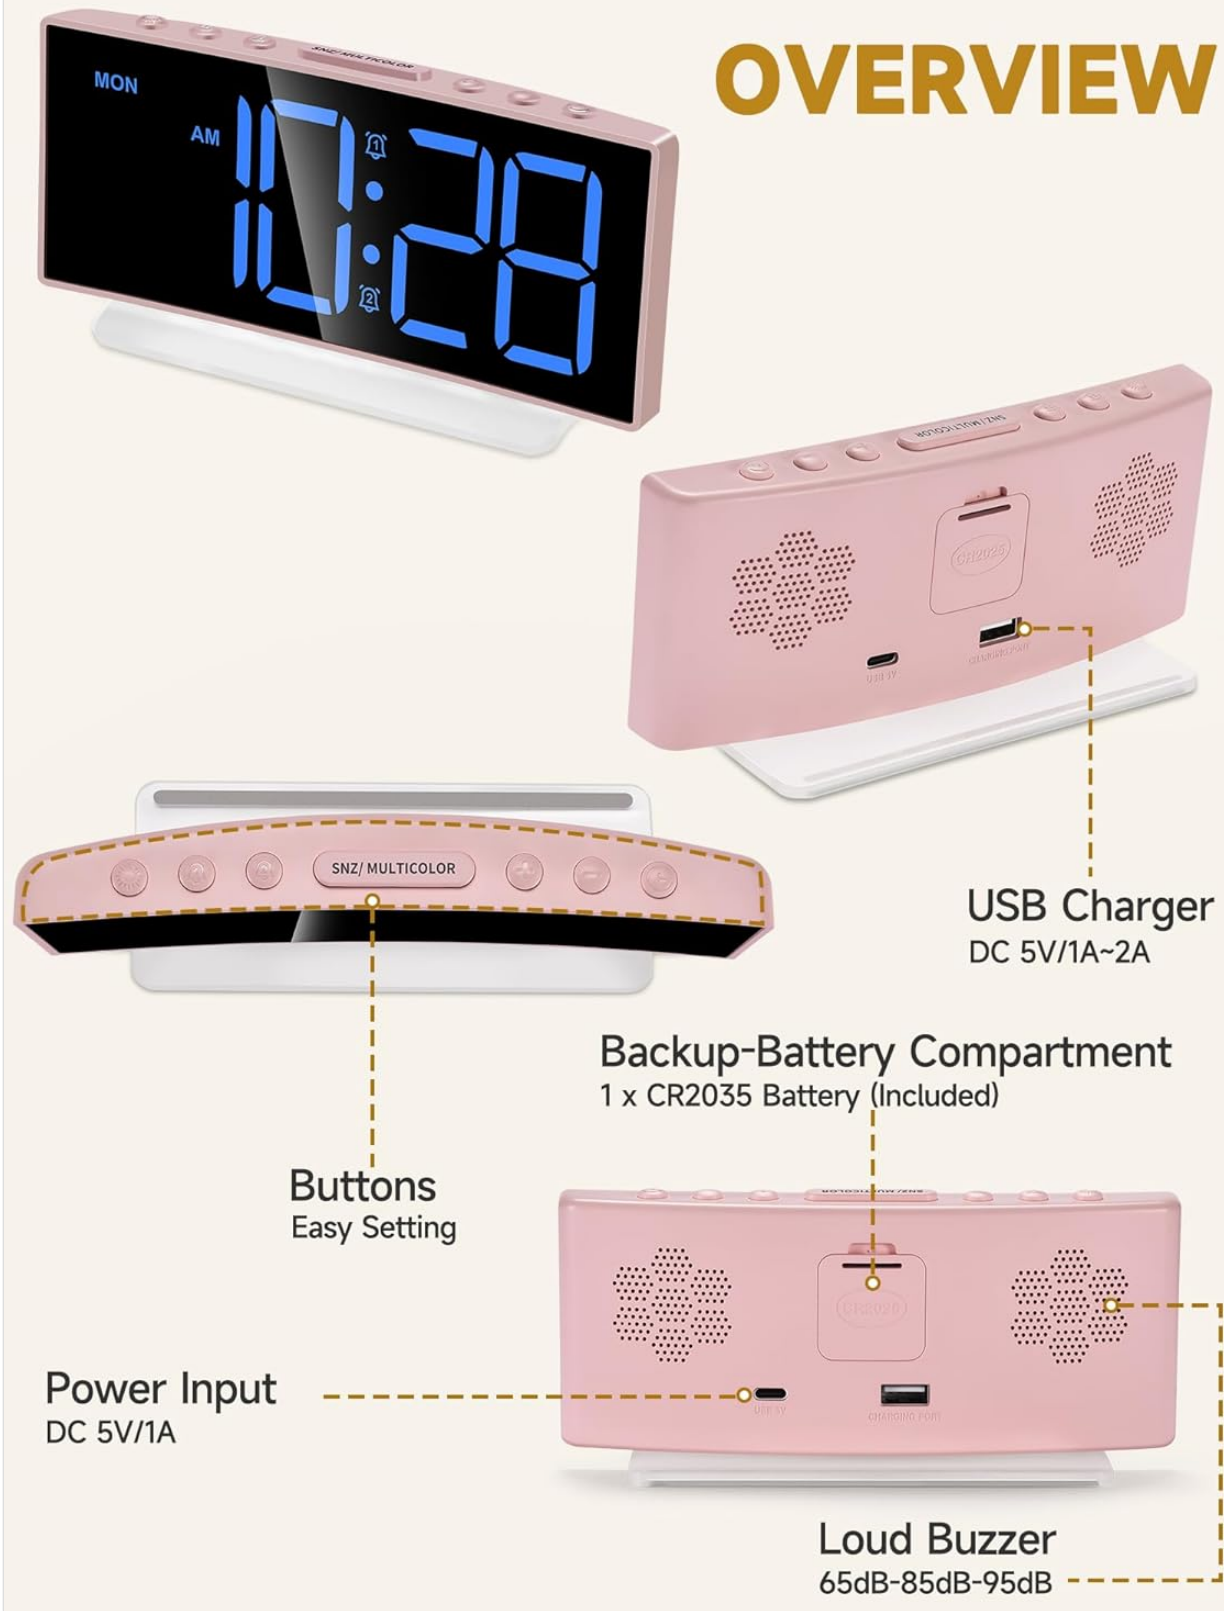


Figure 4.2: Close-up of the battery backup compartment on the Cadmos G10 Digital Alarm Clock, indicating the CR2025 battery.

5. OPERATING INSTRUCTIONS

5.1 Setting Time and 12/24-Hour Format

1. Hold the **Time Set** button for 3 seconds to enter time setting mode. The hour digits will flash.
2. Use the **Up/Down** buttons (often shared with Volume or Brightness controls) to adjust the hour.
3. Press **Time Set** again to confirm the hour and move to minute setting. Adjust minutes using **Up/Down** buttons.
4. Press **Time Set** again to confirm minutes and move to 12/24-hour format selection. Use **Up/Down** to select.
5. Press **Time Set** one last time to exit time setting.



Figure 5.1: The Cadmos G10 Digital Alarm Clock showing both 12-hour (AM/PM) and 24-hour time formats.

5.2 Setting Alarms (Dual Alarms)

1. Hold the **Alarm 1** button for 3 seconds. The alarm hour will flash.
2. Use the **Up/Down** buttons to set the desired alarm hour.
3. Press **Alarm 1** again to confirm the hour and set minutes. Adjust minutes using **Up/Down** buttons.
4. Press **Alarm 1** again to select alarm mode (Weekday, Weekend, or All 7 days).
5. Press **Alarm 1** one last time to exit alarm setting.
6. Repeat steps for **Alarm 2** using the **Alarm 2** button.



Figure 5.2: Alarm settings on the Cadmos G10 Digital Alarm Clock, illustrating options for Weekday, Weekend, or All 7 days.

5.3 Adjusting Alarm Volume

The alarm volume can be adjusted to 3 levels (up to 105dB). Use the **Volume Up/Down** buttons to select your preferred loudness.

Your browser does not support the video tag.

Video 5.1: Demonstration of the Cadmos G10 Digital Alarm Clock's adjustable volume levels, highlighting its loudness for heavy sleepers.

5.4 Adjusting Display Brightness

The large LED display has 4 levels of adjustable brightness. Press the **Dimmer** button repeatedly to cycle through the brightness levels.



Figure 5.3: Visual representation of the four adjustable brightness levels for the Cadmos G10 Digital Alarm Clock's display.

5.5 Dynamic RGB Display and Nightlight

The clock features 8 different colorful screens for the time display and a 7-color rainbow atmosphere light for the base. Press the **Light Color Change** button to cycle through the display colors. Hold the **SNZ/Multicolor** button for 3 seconds to change the night light color.



Figure 5.4: The Cadmos G10 Digital Alarm Clock showcasing its 8 dynamic RGB display color modes.



Figure 5.5: The Cadmos G10 Digital Alarm Clock's base illuminating with 7 different night light colors.

Your browser does not support the video tag.

Video 5.2: A demonstration of the Cadmos G10 Digital Alarm Clock's colorful display options.

5.6 Snooze Function

When an alarm sounds, press the **SNZ/Multicolor** button to activate the snooze function. The alarm will pause for 10 minutes and then sound again.

SAT-SUN

Weekend

MON-FRI

Weekday

MON-SUN

All 7 days



Dual Alarm Clock

Volume Adjustment



3 Levels

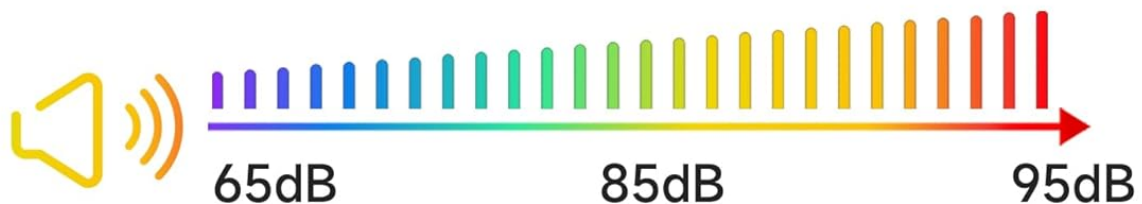


Figure 5.6: The Cadmos G10 Digital Alarm Clock illustrating its 9-minute snooze feature.

5.7 USB Phone Charging Port

The alarm clock is equipped with a USB charging port (DC 5V/1A-2A) on the rear panel. You can use this port to charge your smartphone or other compatible devices.



7 Colors Night Light

5 MONOCOLOR MODE + 2 Dynamic RGB MODE



Figure 5.7: The Cadmos G10 Digital Alarm Clock demonstrating its USB charging capability for a smartphone.

6. MAINTENANCE

- Clean the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the clock away from water and high humidity.

- Avoid exposing the clock to direct sunlight or extreme temperatures.
- If the backup battery needs replacement, use a CR2025 type battery.

7. TROUBLESHOOTING

7.1 Display Not Lighting Up

- Ensure the power cord is securely connected to both the clock and the power outlet.
- Verify the power adapter is functioning correctly.
- Check if the brightness level is set too low. Press the **Dimmer** button to increase brightness.

7.2 Alarm Not Sounding

- Ensure the alarm is activated (alarm icon visible on display).
- Check the alarm volume level using the **Volume Up** button.
- Verify the alarm time and weekday/weekend settings are correct.

7.3 Time/Settings Lost After Power Outage

- The CR2025 backup battery may be depleted. Replace the battery if necessary.

8. SPECIFICATIONS

| Feature | Detail |
|--------------------|----------------------------------|
| Brand | Cadmos |
| Model Number | G10 |
| Display Type | LED |
| Color | Pink+dynamic |
| Product Dimensions | 6.7"W x 3.11"H |
| Item Weight | 0.51 Pounds |
| Power Source | Corded Electric |
| Battery Backup | 1 x CR2025 (included) |
| Alarm Volume | Up to 105dB (3 levels) |
| Display Brightness | 4 levels |
| Display Colors | 8 dynamic RGB screens |
| Night Light Colors | 7-color rainbow atmosphere light |

| | |
|---------------------|-------------|
| Snooze Duration | 10 minutes |
| USB Charging Output | DC 5V/1A-2A |
| Material Type | Plastic |

9. WARRANTY AND SUPPORT

The Cadmos G10 Digital Alarm Clock comes with a limited warranty. For warranty claims or technical support, please refer to the contact information provided with your purchase or visit the official Cadmos website.

© 2026 Cadmos. All rights reserved.