

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [COSTWAY](#) /

› [COSTWAY Balance Bike for Toddlers - Model BC10193/94FR User Manual](#)

## COSTWAY BC10193/94FR

# COSTWAY Balance Bike for Toddlers - Model BC10193/94FR User Manual

## INTRODUCTION

Thank you for choosing the COSTWAY Balance Bike. This manual provides essential information for the safe assembly, operation, and maintenance of your balance bike. Please read it thoroughly before use and retain it for future reference. This balance bike is designed to help toddlers aged 18 to 48 months develop balance and coordination.

## SAFETY INFORMATION

- Always supervise children when they are using the balance bike.
- Ensure the child wears appropriate safety gear, including a helmet, knee pads, and elbow pads.
- Do not use the balance bike near stairs, on steep slopes, or in areas with heavy traffic.
- Regularly check all bolts and connections to ensure they are securely tightened before each use.
- The 150-degree steering limit is designed to prevent overturning. Do not attempt to force the handlebars beyond this limit.
- The fully enclosed wheels prevent small feet from getting caught.
- Maximum weight capacity: 25 kg (55 lbs).
- Recommended age: 18-48 months. Recommended child height: 70-120 cm.

## PACKAGE CONTENTS

Please check that all components are present and undamaged:

- 1 x COSTWAY Balance Bike
- 1 x User Manual
- 1 x Hex Key (for assembly)

## ASSEMBLY (SETUP)

The COSTWAY Balance Bike features a pre-assembled design for quick and easy setup. Minimal assembly is required.

- 1. Attach the Front Wheel and Handlebar:** Insert the front fork with the wheel into the main frame. Align the handlebar with the fork and secure it using the provided hex key. Ensure it is tightened firmly to prevent wobbling.
- 2. Adjust the Seat Height:** Locate the seat adjustment mechanism beneath the seat. Loosen the clamp, adjust the seat to the desired height (between 30-35 cm), and then securely tighten the clamp. The child's feet should be able to touch the ground flat-footed when seated.
- 3. Final Check:** Before first use, verify that all connections are tight, the wheels spin freely, and the steering operates smoothly within its 150-degree limit.



Figure 1: Easy installation with included hex key.



Figure 2: Key features including adjustable seat height (30-35 cm).

## OPERATION

The balance bike is designed to teach children balance and steering before transitioning to a pedal bike.

- Getting Started:** Ensure the seat is adjusted so the child can comfortably place both feet flat on the ground. This allows them to push off and stop easily.
- Pushing and Gliding:** Encourage the child to walk or run while seated on the bike, pushing off the ground with their feet. As they gain confidence, they will naturally start to glide with both feet off the ground.
- Steering:** The anti-slip handlebars provide a secure grip. The 150-degree steering limit helps prevent sharp turns that could lead to falls, promoting safer learning.
- Braking:** Children use their feet to slow down and stop, developing natural braking instincts.

# Direction Sûre à 150 Degrés

La fonction anti-renversement protège  
la sécurité des enfants

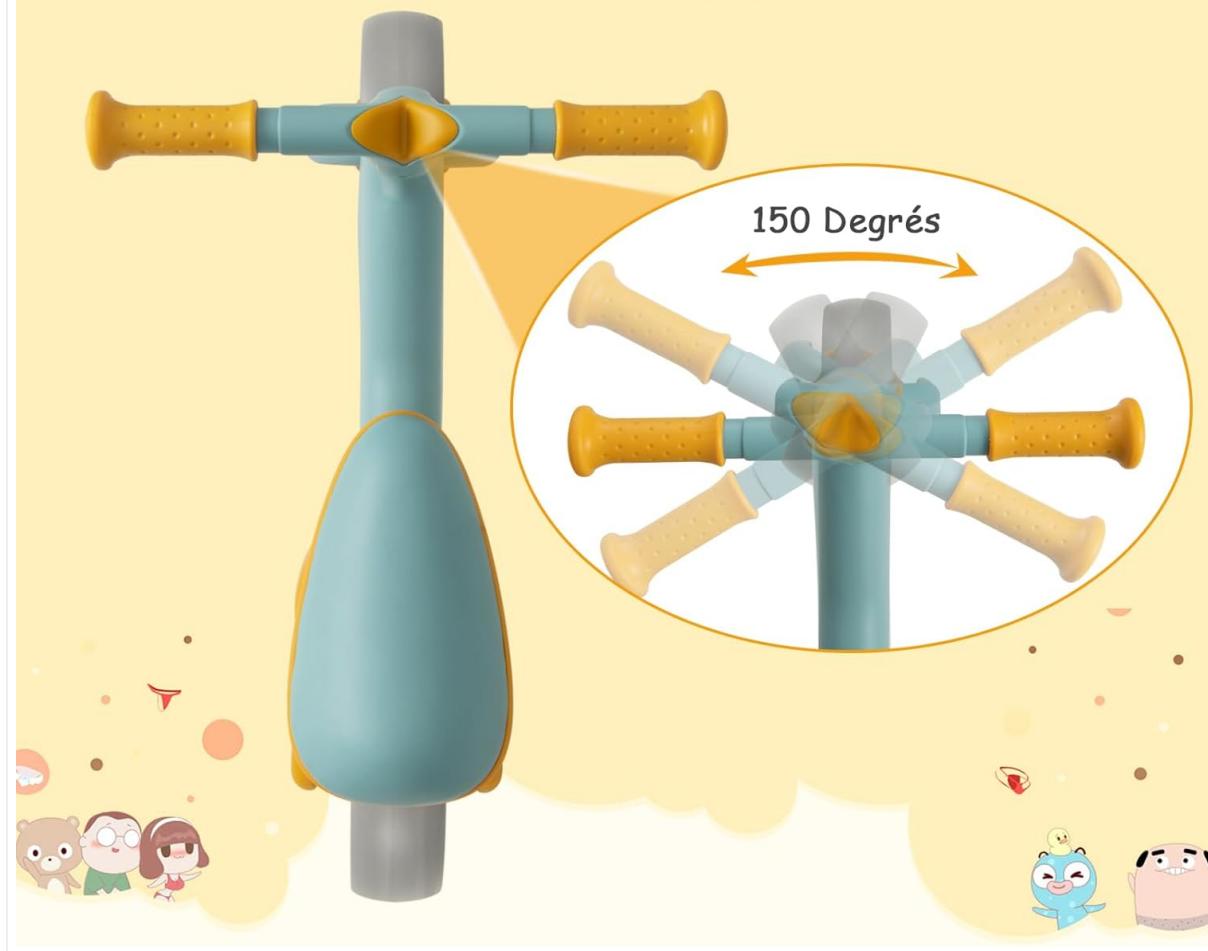


Figure 3: The 150-degree steering limit enhances safety.



**Figure 4:** Child demonstrating proper riding posture with feet on the ground.


## MAINTENANCE

---

Regular maintenance ensures the longevity and safety of the balance bike.

- **Cleaning:** Wipe the bike with a damp cloth and mild soap. Avoid harsh chemicals that could damage the materials. Dry thoroughly after cleaning.
- **Inspections:** Periodically check for loose bolts, worn parts, or damage to the frame, wheels, or seat. Tighten any loose fasteners immediately.
- **Storage:** Store the balance bike in a dry place, away from direct sunlight and extreme temperatures, to prevent material degradation.
- **Wheels:** The EVA wheels are designed to be wear-resistant and silent. While they do not require inflation, inspect them for any cuts or damage.

## 2\* Roues EVA Élargies

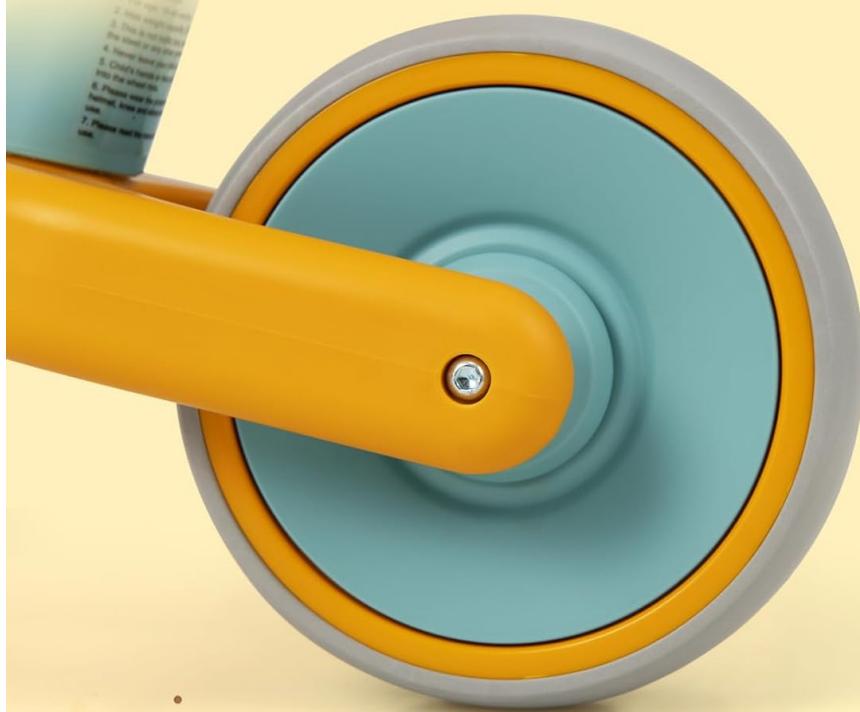

Antidérapant



Silencieux



Résistant  
à l'Usure




Plancher en Bois



Route en Briques



Route Carrelée

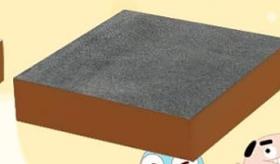

Route de Ciment

Figure 5: Durable EVA wheels suitable for various surfaces.



Figure 6: Components like the anti-slip handlebar, soft PU seat, and stable PP frame.

## TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Handlebar is loose or wobbly.	Mounting bolts are not tightened sufficiently.	Use the hex key to tighten the handlebar bolts securely.
Seat height keeps slipping.	Seat clamp is not tightened properly.	Loosen, readjust, and firmly tighten the seat clamp.
Bike makes unusual noises during use.	Loose components or foreign objects.	Inspect all parts for looseness and remove any debris from the wheels or frame.
Wheels do not spin freely.	Debris caught in the wheel mechanism or axle too tight.	Check for and remove any obstructions. Ensure axle bolts are secure but not overtightened.

## SPECIFICATIONS

Feature	Detail
Model Number	BC10193/94FR
Recommended Age	18-48 Months
Recommended Child Height	70-120 cm
Max Weight Capacity	25 kg (55 lbs)
Product Dimensions (L x W x H)	67 x 33 x 47 cm (26.4 x 13 x 18.5 inches)
Net Weight	3 kg (6.6 lbs)
Seat Height Range	30-35 cm (11.8-13.8 inches)
Steering Limit	150 Degrees
Materials	PP (Polypropylene) Frame, PU Leather Seat, EVA Wheels
Color	Blue + Orange

# Dimension du Produit



Âge Applicable :  
18-48 Mois



Taille des Enfants  
Adaptée : 70-120 cm



Capacité de Poids :  
25 kg

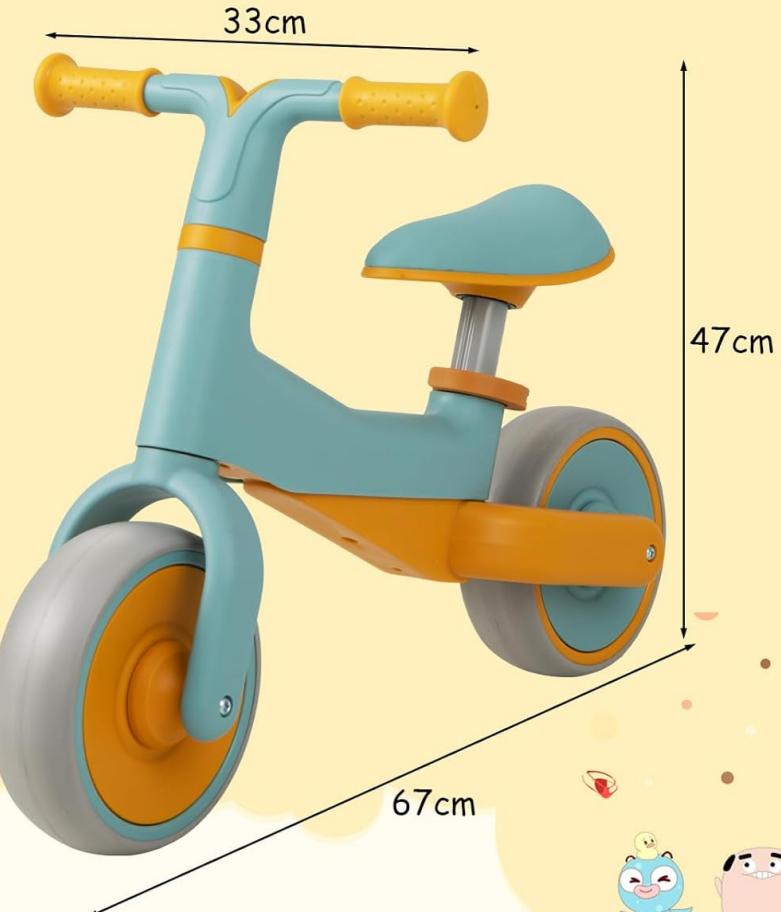


Figure 7: Product dimensions and specifications.

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the purchase documentation or contact COSTWAY customer service directly. Keep your proof of purchase for any warranty claims.