

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [AXEFIT](#) /

› [AXEFIT Walking Pad with Incline User Manual](#)

## AXEFIT TT200C

# AXEFIT Walking Pad with Incline User Manual

Model: TT200C

Brand: AXEFIT

## 1. INTRODUCTION

---

Thank you for choosing the AXEFIT Walking Pad with Incline. This user manual provides essential information for the safe and efficient operation, assembly, maintenance, and troubleshooting of your new fitness equipment. Please read this manual thoroughly before first use and retain it for future reference.

The AXEFIT Walking Pad with Incline (Model TT200C) is designed for home and office use, offering a compact and versatile solution for walking and light running. It features a powerful 2.5 HP motor, a manual incline option, and an intuitive LED control panel to track your workout data.



*Image: The AXEFIT Walking Pad with Incline, demonstrating its compact design and a user engaging in a walking exercise.*

## 2. SAFETY INFORMATION

Before operating the AXEFIT Walking Pad, please observe the following safety precautions to prevent injury or damage to the equipment:

- Always place the treadmill on a flat, stable surface.
- Ensure there is adequate clear space (at least 2 feet) behind and on both sides of the treadmill.
- Keep children and pets away from the treadmill during operation.
- Do not exceed the maximum weight capacity of **265 pounds**.


- Wear appropriate athletic footwear. Do not use the treadmill barefoot or in socks.
- Always attach the safety key clip to your clothing before starting the treadmill. In case of an emergency, pulling the safety key will immediately stop the machine.
- If you feel faint, dizzy, or experience pain, stop exercising immediately.
- Unplug the treadmill from the power outlet when not in use or before cleaning and maintenance.
- Do not attempt to service the treadmill yourself. Contact customer support for assistance.

### 3. PACKAGE CONTENTS

---

Upon opening the package, please verify that all components are present and undamaged:

- AXEFIT Walking Pad with Incline (Main Unit)
- Power Cord
- Safety Key
- Tool Kit (including L-shaped wrench)
- User Manual (this document)
- Lubricating Oil (x2 bottles)
- CR2450 Lithium Cell 3V Battery (for remote control)

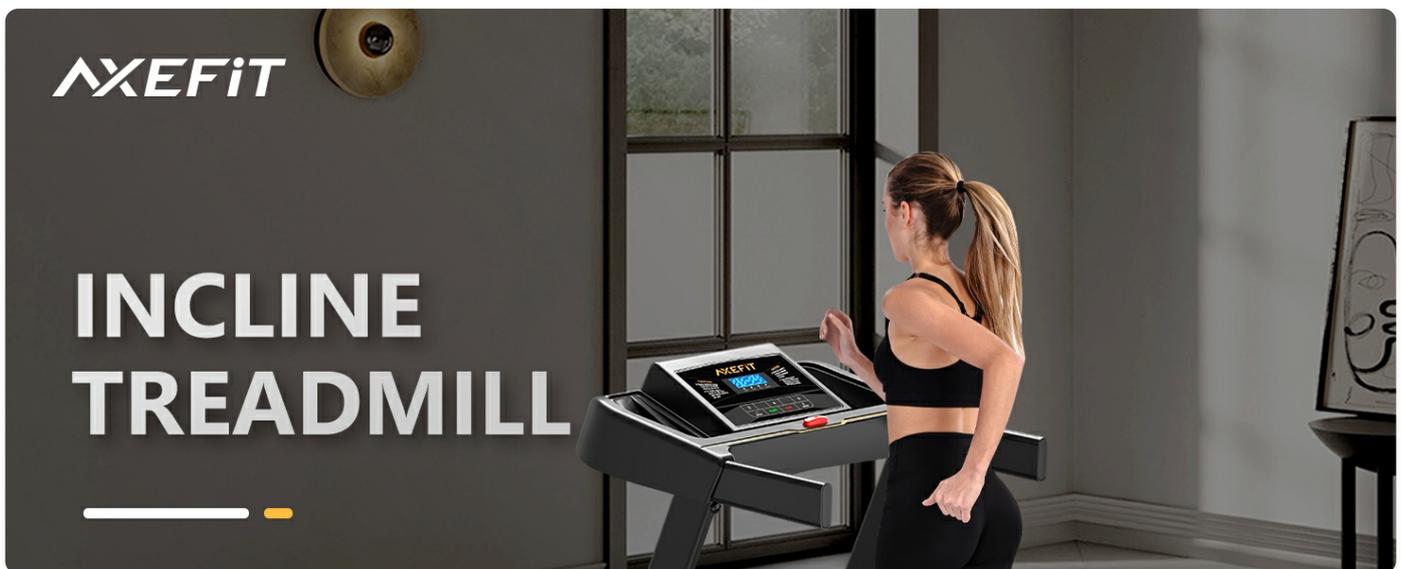

*Image: Visual representation of the AXEFIT Walking Pad and its accompanying accessories included in the package.*

### 4. ASSEMBLY AND SETUP

---

The AXEFIT Walking Pad is designed for quick and easy setup, with 90% of the assembly completed at the factory. You can typically have your treadmill ready for use in less than 10 minutes.

#### 4.1 Unpacking and Placement

1. Carefully remove the treadmill and all components from the packaging.
2. Place the treadmill on a firm, level surface. Ensure there is sufficient space around the unit for safe operation and access.

#### 4.2 Handlebar Installation (if applicable)

For models with a handle, follow these steps:

1. Lift the handlebar frame to its upright position.

2. Secure the handlebar frame using the provided screws and the L-shaped wrench. There are typically 4 screws for pivot mounting.
3. Ensure all screws are tightened securely before use.

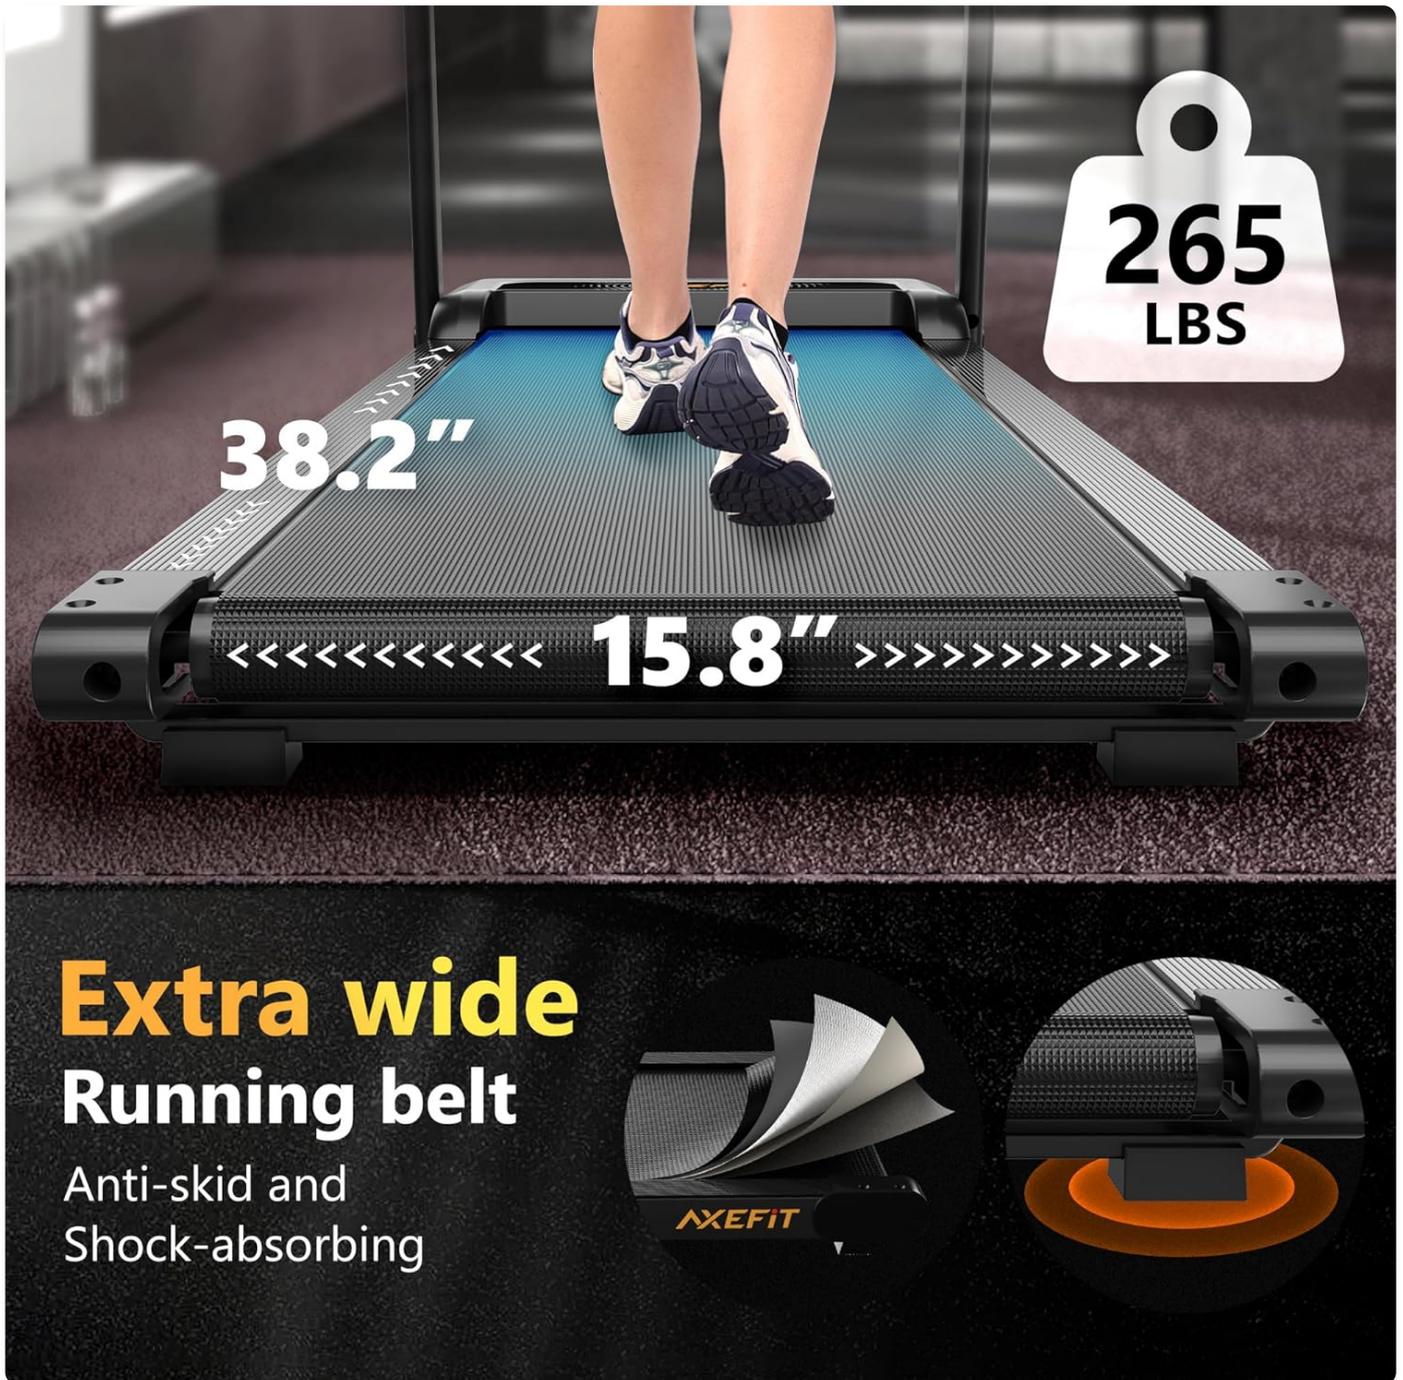


Image: The spacious running surface of the treadmill, highlighting its dimensions for comfortable use.

#### 4.3 Power Connection

1. Insert the power cord into the treadmill's power input port.
2. Plug the other end of the power cord into a grounded electrical outlet.

#### 4.4 Manual Incline Adjustment

The AXEFIT Walking Pad features a manual incline. To adjust the incline:

- Ensure the treadmill is off and unplugged.
- Locate the incline adjustment mechanism at the rear of the treadmill.
- Lift the rear of the treadmill and adjust the support legs or pins to the desired incline level (up to 15 degrees).

- Ensure the incline mechanism is securely locked in place before use.

# Climbing Mode Selection



The image shows a woman running on an AXEFIT treadmill. The treadmill is tilted at an incline. A line graph in the upper right corner compares calorie burn at 0° and 15° incline over time. The y-axis represents calories per hour (Kcal/H) from 100 to 350. The x-axis represents time in hours (Time/1H). The 15° incline (yellow line) shows a higher calorie burn rate compared to the 0° incline (teal line).

Time/1H	0° Incline (Kcal/H)	15° Incline (Kcal/H)
0	100	100
1	150	250
2	180	280
3	200	310
4	210	336


**> 50%**  
For increased calorie burn

Image: The treadmill in climbing mode, illustrating how the manual incline feature can enhance calorie expenditure.

## 5. OPERATING INSTRUCTIONS

### 5.1 Control Panel Overview

The treadmill features an intuitive LED control panel and a remote control for easy operation.

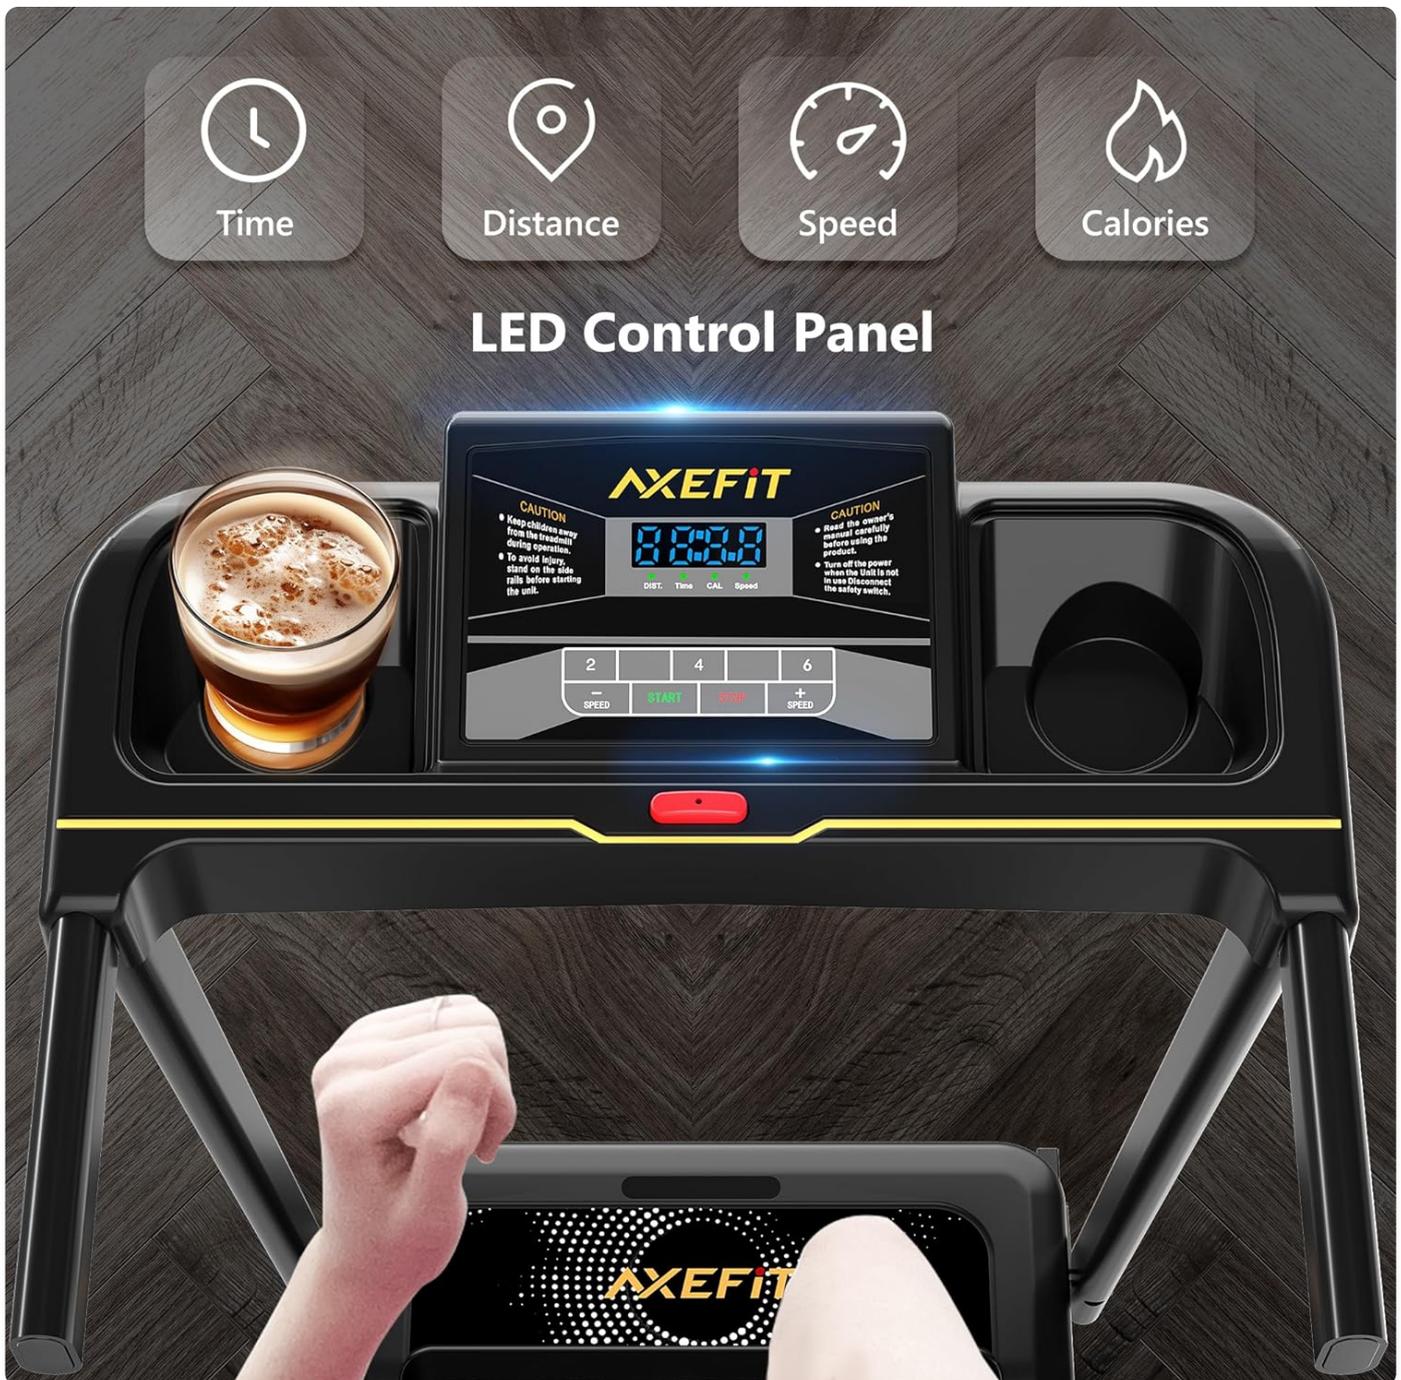

*Image: The LED control panel, displaying real-time workout metrics and control buttons.*

- **LED Display:** Cycles through Time, Speed, Distance, and Calories Burned.
- **Start/Stop Button:** Initiates and pauses/stops the treadmill.
- **Speed +/- Buttons:** Adjust the running belt speed.
- **Quick Speed Buttons:** Pre-set speed options for quick adjustments.

## 5.2 Starting a Workout

1. Ensure the treadmill is plugged in and the main power switch (if present) is on.
2. Attach the safety key clip to your clothing. Insert the safety key into its designated slot on the control panel. The display will illuminate.
3. Step onto the running belt.
4. Press the **Start** button on the control panel or remote control. The treadmill will typically start at a low speed (e.g., 0.6 mph) after a brief countdown.
5. Adjust the speed using the **Speed +/-** buttons or the quick speed buttons to your desired pace. The maximum speed

is 7.6 mph.

### 5.3 Ending a Workout

1. To stop the treadmill, press the **Stop** button. The belt will gradually slow down and come to a complete stop.
2. Alternatively, pulling the safety key will immediately stop the treadmill.
3. Once the belt has stopped, step off the treadmill.
4. Unplug the treadmill from the power outlet when not in use.

## 6. MAINTENANCE

---

Regular maintenance ensures the longevity and optimal performance of your AXEFIT Walking Pad.

### 6.1 Lubrication

The running belt requires periodic lubrication to reduce friction and wear. Use the provided silicone oil.

1. Turn off and unplug the treadmill.
2. Loosen the running belt by turning the rear roller adjustment bolts counter-clockwise with the L-shaped wrench.
3. Lift the edge of the running belt and apply a small amount of silicone oil evenly onto the center of the running deck, underneath the belt.
4. Tighten the running belt adjustment bolts clockwise until the belt is taut but not overly tight.
5. Plug in the treadmill and run it at a low speed (e.g., 1 mph) for 2-3 minutes to distribute the lubricant.
6. Lubricate every 3-6 months depending on usage.

### 6.2 Cleaning

- Wipe down the treadmill's surfaces with a damp cloth after each use to remove sweat and dust.
- Do not use abrasive cleaners or solvents.
- Regularly vacuum underneath the treadmill to prevent dust buildup.



*Image: Cross-section view of the 5-layer running belt, highlighting its anti-slip and shock-absorbing properties.*

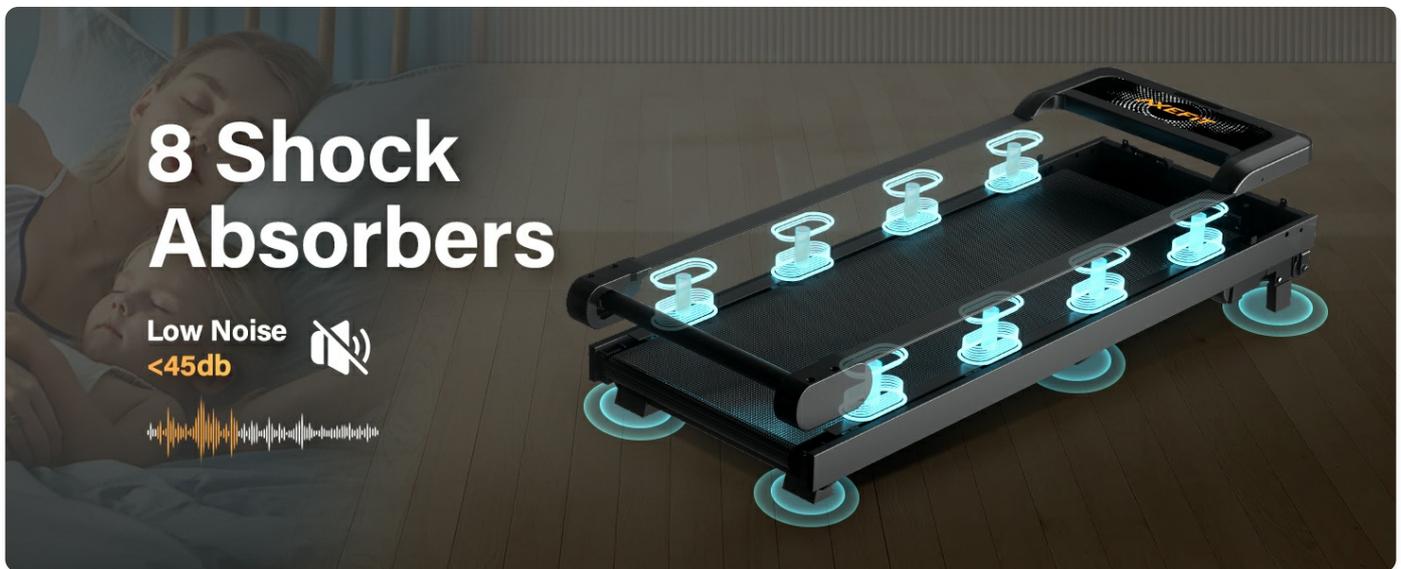


Image: Illustration of the 8 shock absorbers integrated into the treadmill design for reduced noise and impact.

## 7. TROUBLESHOOTING

If you encounter issues with your AXEFIT Walking Pad, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Treadmill does not start.	Power cord not plugged in; Safety key not inserted; Power switch off.	Ensure power cord is securely plugged in. Insert the safety key fully. Turn on the main power switch.
Running belt slips or hesitates.	Belt too loose; Lack of lubrication.	Adjust belt tension (refer to Section 6.1). Apply silicone lubricant (refer to Section 6.1).
Unusual noise during operation.	Loose parts; Belt misalignment; Motor issue.	Check for and tighten any loose screws. Adjust belt alignment. If noise persists, contact customer support.
Display not working correctly.	Loose connection; Control panel malfunction.	Ensure all connections are secure. Try unplugging and replugging the unit. If issue persists, contact customer support.

If the problem persists after attempting these solutions, please contact AXEFIT customer support for further assistance.

## 8. SPECIFICATIONS

Feature	Detail
Model Name	TT200C
Brand	AXEFIT
Motor Horsepower	2.5 HP
Speed Range	0.6 - 7.6 Miles per Hour
Maximum Incline	15 Degrees (Manual)

Feature	Detail
Running Belt Dimensions (LxW)	38.2" x 15.8"
Product Dimensions (DxWxH)	45.8"D x 22.44"W x 38.2"H
Item Weight	46.5 Pounds
Maximum Weight Recommendation	265 Pounds
Frame Material	Alloy Steel
Display Type	LED
Metrics Measured	Time, Speed, Distance, Calories Burned
Special Features	Compact Design, Foldable, Manual Incline, Shock Absorption

**Climbing Mode Selection**

**> 50%**

For increased calorie burn

15°

Time/1H

0°Incline 210 Kcal/H

15°Incline 336Kcal/H

Incline	Calories Burned (Kcal/H)
0° Incline	210
15° Incline	336

Image: Internal view of the treadmill's 2.5 HP motor and cooling system, emphasizing its quiet operation.

## 9. WARRANTY AND SUPPORT

AXEFIT stands behind the quality of its products.

- **Manufacturer Guarantee:** The AXEFIT Walking Pad comes with a **1-year manufacturer guarantee** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.
- **Customer Support:** For any questions, concerns, or warranty claims, please do not hesitate to contact AXEFIT customer support. We are committed to providing reliable after-sales service and will always stand behind our product.

You can typically find contact information for AXEFIT customer support on the product packaging, the official AXEFIT website, or through your purchase platform.

For more information about AXEFIT products, visit the official [AXEFIT Store on Amazon](#).

